

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		
			Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage				Fuel tank		a		
	Battery pack, high-voltage		High voltage power cable		High voltage device that disconnects high voltage				

## 1. Identification / recognition




## 2. Immobilisation / stabilisation / lifting

### Engine shutdown




### Forbidden wedge area

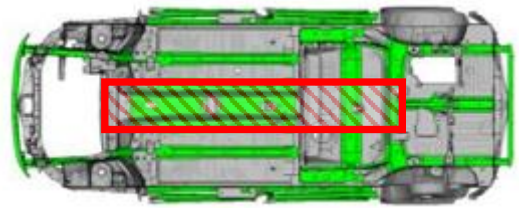

Orange cables area

## 3. Disable direct hazards / safety regulations
 
### 12 Volts Battery



In case of airbag release, the 12V battery automatically turns off






## 200 Volts battery




**Only if cutting operation is necessary :**

Disconnection of the 200 Volts battery by removing the service plug.

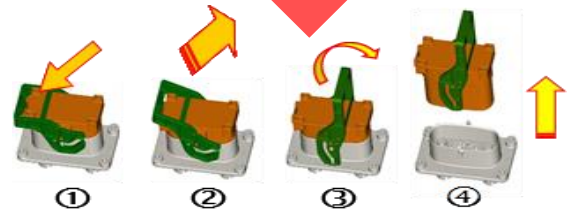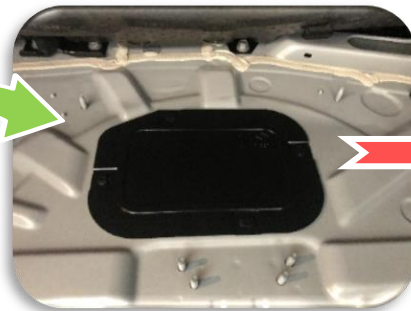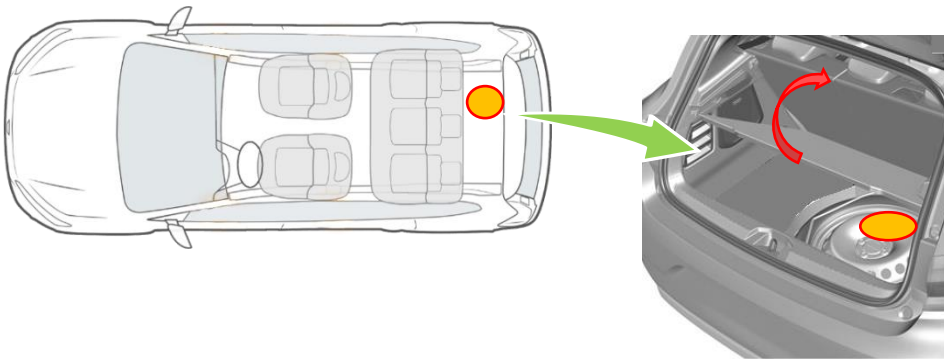

## 4. Access to the occupants

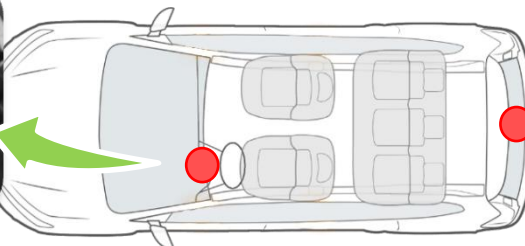



Internal manual opening button



Steering column :  
Hollow and breakable with tools

## 5. Stored energy / liquids / gases / solids

	Lithium-ion	1.2 kW.h	200 V
---	-------------	----------	-------

	E5 E10	50 L
--	--------	------

## 6. In case of fire


### Extinguishing a traction battery fire propagation



### GAS STRUTS



Risk of missile effect of gas struts

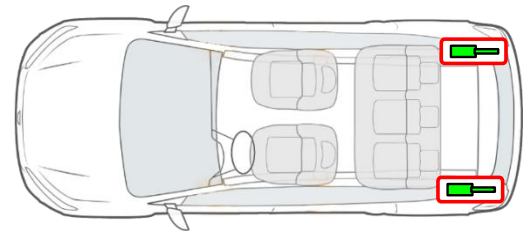

## 7. In case of submersion












No electrical hazard

## 8. Towing / transportation / storage



## 10. Explanation of pictograms used

	Hybrid Electric Vehicle on fuel of liquid group 2		Remove smart key
	Use thermal Infrared camera		Boot
Electrical protection gloves	Face shield	Use water to extinguish the fire	Don't break, nor open
			
			Don't touch
			

In consultation with



MINISTÈRE DE L'INTÉRIEUR

Internal reference

Date

Version

Page

RS-RJI HEV-20231

31/08/2023

1

4 / 4