


R-LINK Evolution Software installation guide

This update only applies to Renault vehicles equipped with R-LINK and R-LINK Evolution whose **Vehicle Information Numbers have been verified on the website**. Use this software only with **your own Renault vehicle**. Do not install it in another car. Let the SD card present in the vehicle in its slot during the whole procedure.

How to perform updates

Vérifier si mon véhicule est Check if there are any updates for your vehicle

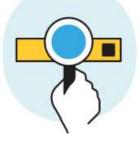

Télécharger cette mise à jour Download this update on a USB




Brancher cette clé USB à mon Plug this USB stick into your connected system



Prerequisite A: Make a note of your Vehicle Identification Number

You can find this number on your Renault vehicle or on **your car registration certificate in section E**. This number is <u>required</u> in order to check that the update is compatible with your Renault vehicle. The number starts with VF and has 17 characters without "i" or "o".

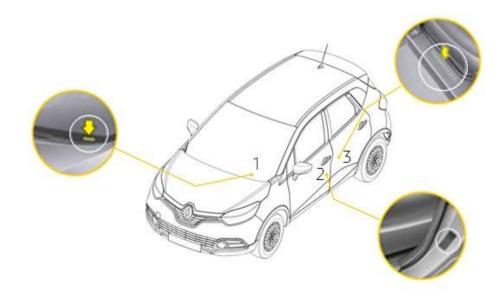

Prerequisite B: Use a USB stick in FAT32 format (8-32 GB)

Let the SD card present in the vehicle in its slot during the whole procedure.

To check whether your USB stick is in FAT32 format, go to the Properties tab (e.g. right click if using a PC)

eneral	Tools	Hardware	Charing	DeadyRe	oct i	-	
criter di	TUUIS	Fial uwal e	Shanny	Reauybu	USC 1	Sustomize	
-		1					
-							
Type:		JSB Drive					
File sys	tem: F	AT32					
Used space: Free space:		: 5	546,832,384 bytes 521 ME 14,821,949,440 bytes 13.8 GE			1 MB	
		: 14,8				8 GB	
Capacity:		15,3	15,368,781,824 bytes			14.3 GB	
		(Ο)			
			Drive E:				

The USB stick must be empty. If this is not the case, delete everything on the USB stick.

Prerequisite C: Have a decompression software

To unzip the download file, we recommend using 7-Zip (you can download this from http://7zip.fr/). Don't forget to check that you have an active Internet connection throughout the entire procedure.

And most importantly, do not interrupt a download in progress.

Step 1: Download the software update



Step 2: Unzip the file

Unzip with 7-Zip using the "Extract" command.

22% com	plete			н	×
			Sp	eed: 26.3 I	MB/s
Name: TOM	1TOM.000				
	ning: About 10 see ning: 1 (352 MB)	conds			

Copy the file TOMTOM.000 to the root of the USB stick.

(- 🕂 🗸 🕆 📙 > Thi	s PC 🔸 USB Drive (E:)				~ Ç	Search New folder	Q
📙 FH 🛛 🖈 ^	Name	Date modified 7/11/2018 12:21 PM	Type 000 File	Size 458,184 KB			
Diverse FR		() TI/LOTO TELET PIW	0001112	100, 104 KB			
UET DE-SMM M							
💻 This PC							
🛛 🧊 3D Objects							
> 🛄 Desktop							
Documents							
> 👆 Downloads							
> 🎝 Music							
> 📰 Pictures							
> 🚪 Videos							
> 🏥 System (C:)							
> 👝 USB Drive (E:)							
> 🛖 MyShared (l:)							
📕 USB Drive (E:)							
Network							

Start your engine and your R-LINK. Plug in your USB stick. Your R-LINK will automatically detect the update on your USB stick (please wait a few moments). Do not switch off the engine during the installation. The installation may take up to 20 minutes.

R-LINK checks the file automatically It will then display the series of screens shown below. You need to select "yes" on each screen before the installation can begin.



Then your R-LINK will display the progress of the download. All multimedia and driving assistance features will be unavailable during use. **Do not remove the USB stick.** To finish, an on-screen message will confirm that the installation is complete.







You may now unplug the USB stick.

The system will be operational as soon as GPS signal is found.



Final checks

You can check whether the software update has been carried out successfully by going to Menu > System > Status and Information -> Version Information. Example screen. The version number is indicated at the time of the download.

Version infor	mation	State of the local division of the local div
	R-Link TomTom LIVE IG5225J01825 259156379R	\$
Application:	11.344.3198541-8059	
GPS:	2.18.911.318008	A CONTRACTOR OF THE OWNER OF
Map:	0 v0.v0	3
Language:	English (United Kingdom)	
<		+

Don't forget to check that your R-LINK's connectivity is active in order to receive Traffic info in real time.