

DISPLAY LINK
NAVI LINK



User precautions

It is essential to follow the precautions below when using the system, both in the interest of safety and to prevent material damage. Always comply with the laws of the country in which you are travelling.



Precautions when operating the system

- Operate the controls (on the dash or near the steering wheel) and read the information on the screen only when road conditions allow.
- Set the volume to a reasonable level so that outside noise can be heard.

Precautions regarding navigation

- Use of the navigation system does not in any way replace the responsibility or vigilance of the driver when driving the vehicle.
- Depending on the geographical area, the "map" may not have the latest information on new roads. Be alert. In all cases, Road Traffic Regulations and road signs always take precedence over the directions of the navigation system.

Precautions concerning material damage

- Do not attempt to dismantle or modify the system, as there is a risk of damage to equipment and fire.
- Contact a representative of the manufacturer in the event of malfunction and for all operations involving disassembly.
- Do not insert foreign bodies into the player.
- Do not use products containing alcohol and/or spray fluids on the area.

Precautions when using the phone

- There are laws which govern the use of phones in vehicles. The use of hands-free phones is not permitted in all driving conditions: all drivers must remain in control of their driving;
- Using a phone whilst driving is a significant distraction and risk factor during all stages of use (dialling, communicating, searching for a number in the handset memory, etc.).



The description of the models given in this manual is based on the specifications at the time of writing. **This manual covers all existing functions for the models described. Whether or not they are fitted depends on the equipment model, options selected and the country where they are sold. This manual may also contain information about functions to be introduced later in the model year. The screens shown in the user manual are not contractual.**

Depending on the make and model of your telephone, some functions may be partially or completely incompatible with your vehicle's multimedia system.

For more details, please consult an Authorised Dealer.

CONTENTS

General information	4	Smartphone replication.....	73
General description	4	Vehicle	75
Introduction to the controls	7	Reversing camera	75
Switching on, off	15	Multi-view camera.....	78
Operate and use	17	Multi-Sense.....	80
Volume.....	19	Eco driving.....	82
Navigation	20	Remote engine start-up	83
Enter a destination.....	20	Vehicle settings.....	86
Navigation settings	26	4x4 info	88
Reading a map	30	Settings	89
The navigation system.....	33	System settings	89
Guidance	34	Updating the system.....	91
Map settings	40	Operating faults	96
Managing the favourites	41		
Audio/Multimedia	43		
Selecting a wavelength.....	43		
Choose a radio station "FM", "AM" or "DAB".....	44		
"Frequency" Mode	45		
Storing a station.....	47		
Radio settings.....	48		
Video.....	50		
Auxiliary audio sources.....	52		
Audio setting.....	55		
Phone	56		
Pair and connect a phone.....	56		
Call management	61		
Wireless charger.....	64		
Using voice recognition	66		
Apps	69		
Android Auto™, CarPlay™	69		

GENERAL DESCRIPTION

1

Introduction

If the vehicle is equipped, the multimedia system provides the following functions:

- radioRDS;
- radioDAB;
- management of external audio sources;
- hands-free telephone;
- voice recognition;
- navigation assistance;
- road traffic information;
- information on areas for particular care;
- Park Assist (reversing camera or multi-view camera);
- remote engine start-up programming;
- information on the incline of the vehicle (4x4 information);
- information on your driving style and driving advice in order to optimise your fuel consumption.

Radio functions

The multimedia system can be used to listen to FM (frequency modulation), DAB (digital audio) and AM (amplitude modulation) radio.

The DAB system allows better sound reproduction and access to text infor-

mation about the current programme etc.

The RDS system displays the name of some stations or messages sent by the FM radio stations:

- general traffic information (TA);
- emergency message(s).

Auxiliary audio function

You can listen to your personal stereo directly through your vehicle's speakers. There are several ways to connect your portable audio player, depending on the type of device you have:

- USB audio;
- Bluetooth® connection;
- smartphone replication.

For more information on the list of compatible devices, please contact an authorised dealer or visit the manufacturer's website if available.

Hands-free phone function

The hands-free system Bluetooth® allows you to use the following functions without having to handle your phone:

- send/receive/suspend a call;
- consult the list of contacts from the phone memory;
- access the call logs for calls which have come through the system;
- dial emergency numbers.

Telephone compatibility

Some phones are not compatible with the hands-free system, and do not enable you to use all of the available functions or do not provide the best possible sound quality.

For more information on compatible phones, contact an authorised dealer or visit the manufacturer's website if available.



Your hands-free phone system is only intended to facilitate communication by reducing the risk factors, without removing them completely. Always comply with the laws of the country in which you are travelling.

Remote engine start-up function

When fitted, this function lets you programme the engine to start remotely, in order to heat or ventilate the passenger compartment up to 24 hours before using the vehicle.

GENERAL DESCRIPTION

Driving Eco

The "Driving Eco" menu displays a real-time overall score that reflects your driving style.



To benefit from the WIFI connection for Android Auto™, make sure you use a compatible phone with an active data plan, a WIFI 5 GHz support and the latest version of the application Android Auto™.

Navigation assistance function

The navigation system automatically calculates the geographical position of the vehicle by receiving GPS signals.

It suggests a route to your chosen destination using its road map. Finally, it indicates the route to take, step by step, using the display screen and voice messages.


traffic information

This function keeps you informed about traffic conditions in real time.

Road safety alerts or alert points

This service allows you to receive alerts in real time, such as excess speed alerts or the position of road safety alert areas.

Displays

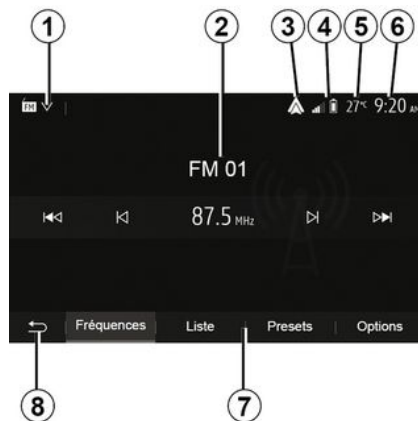

Menu screen

1. Mode selection area.

Displays the selected mode. When the mode selection area is touched, a drop-down menu will appear.

2. Table of contents area.

Shows the contents of a menu item and related information.

3. Shortcut to Android Auto™/CarPlay™.

4. Telephone information area.

If the Bluetooth® system or smartphone replication is activated, your connected device's reception and battery level will be displayed.



5. Exterior temperature.

6. Time area.

7. Menu area:

- display subordinate menu of mode;
- shows current menu as highlighted.

8. Area Home or return to navigation.

Depending on the mode you are in, this area displays:

GENERAL DESCRIPTION

1

- the "Home" button: to return to the home menu;
- the "Back" button: to return to the previous screen;
- the "Flag" button: to return to the navigation screen.



9. Night mode.

10. Remote engine start selection area.

Navigation screen

Availability depends on the vehicle, country and/or regulation in place.

11 Map mode (2D/3D / and 2D North).

12 Name of the next road to take on your route.

13 Options for route and map setting.

14 Current audio information.

15 Traffic information.

16 Guidance voice ON/OFF.

INTRODUCTION TO THE CONTROLS

System panels

Screen selections are made by touching the desired selection on the screen.

Availability of the navigation screen depends on the vehicle, country and/or legislation in place.



INTRODUCTION TO THE CONTROLS






1



INTRODUCTION TO THE CONTROLS


Steering column controls

Availability depends on the vehicle

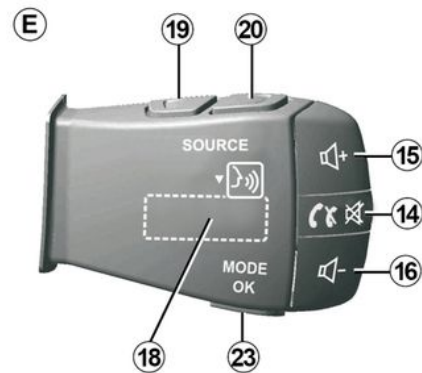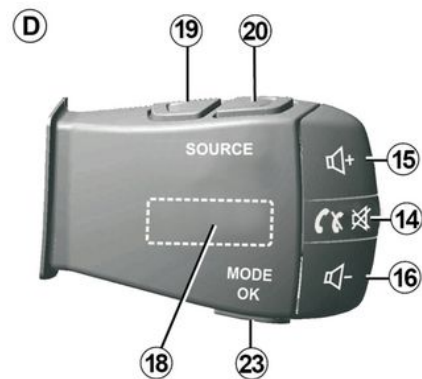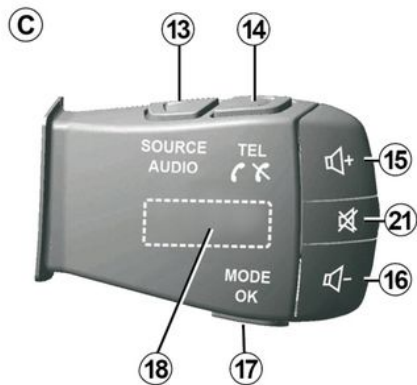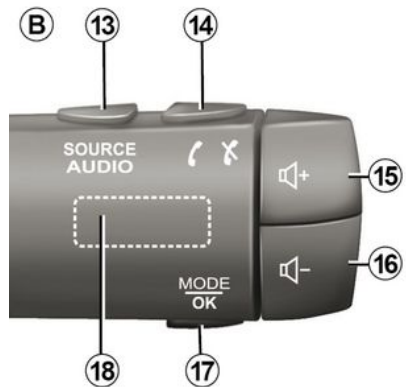
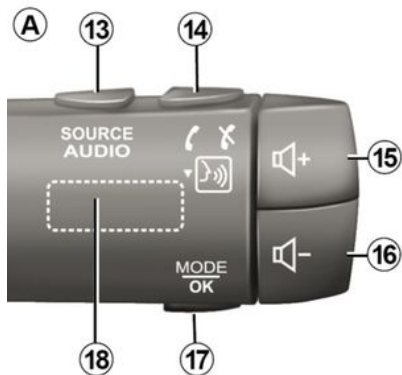


INTRODUCTION TO THE CONTROLS

1

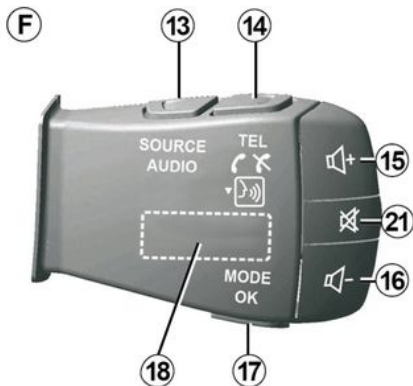

Steering column controls

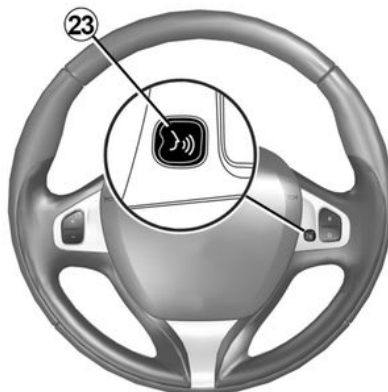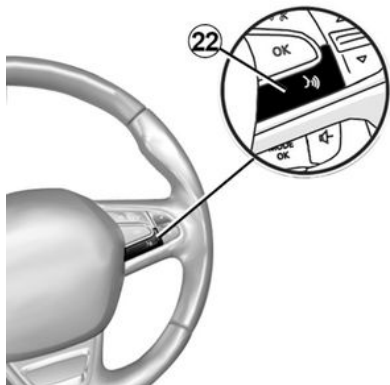

INTRODUCTION TO THE CONTROLS



INTRODUCTION TO THE CONTROLS

1

Functions

	Function
1	Tap: standby screen ON / OFF. Press and hold (>10 seconds): if your system is no longer responding or in the event of deadlocking: this enables the multimedia system to be restarted.
2, 15, 16	Adjust the volume.
3	Access the "Home" menu.
	Phone or auxiliary sources: exit the current window to return to the navigation screen (current) or to the previous screen.
4	Access the "Vehicle Settings" menu.
5	Delete Current Route.
6	Access the "Navigation" menu
7	Access the media currently playing (FM/AM/DAB/USB/Bluetooth®).
8	Traffic information in progress (TMC).
9	Return to previous screen/menu.
10	Mute/unmute the voice guidance.
11	Change the map zoom.
12	Change the map view mode (2D/3D/2D North).

INTRODUCTION TO THE CONTROLS

	Function
13	Select the audio source (FM/AM/DAB/USB/Bluetooth®).
14	<p>When receiving a call:</p> <ul style="list-style-type: none"> – Press briefly: to answer the call; – Long press: reject the call. <p>Brief press during a call: end call.</p> <p>When listening to an audio source: "MUTE/UNMUTE" the sound (only for controls D and E).</p> <p>Short press: access to the "Phone" menu (only for controls B and C).</p> <p>Tap: activate/deactivate your telephone voice recognition (only for controls A and F).</p>
15	Increase the volume of the audio source currently in use.
16	Decrease the volume of the audio source currently in use.
15+16	"MUTE/UNMUTE" the sound (only for controls A and B).
17, 23	<p>Radio: change the radio station mode ("Frequency", "List", "Presets").</p> <p>USB/Portable digital audio player media source: change the play mode for the media currently playing ("Main" or "List").</p>
18	<p>Rear dial:</p> <ul style="list-style-type: none"> – Radio: change radio mode (Frequency/ List/Preset); – Media: previous/next track.
19	Go to the previous audio source (FM/AM/DAB/USB/Bluetooth®).


INTRODUCTION TO THE CONTROLS

1

	Function
20	Briefly press to go to the next audio source (FM/AM/DAB/USB/Bluetooth®). Press and hold: activate/deactivate your smartphone voice recognition (only for control E).
21	Radio mute on/off. Pause/play an audio track. Interrupt the voice recognition voice synthesizer.
22	Activate/deactivate voice recognition on your smartphone if it is connected to the multimedia system.

SWITCHING ON, OFF

Switching on

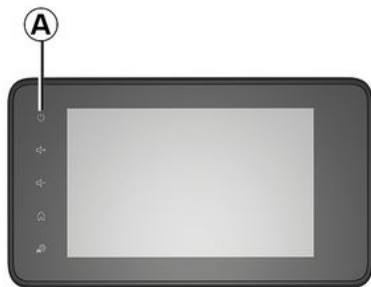

The multimedia system switches on automatically when the ignition is switched on. In other cases, press button **A** to switch on the multimedia system.

With the ignition off, you can use the system for 20 minutes. Press the **A** button to make the multimedia system operate for approximately 20 minutes more.


Switching off

The multimedia system may take a few minutes to update and deactivate after the ignition is switched off, depending on the applications in operation.

Press and hold the **A** button (until a black screen appears) to restart the multimedia system.

i For safety reasons, if the temperature is too low or too high inside the vehicle, the multimedia system will not start or will switch off automatically. Wait a few moments for the temperature to return to a more suitable level for the multimedia system to operate properly.

Standby screen

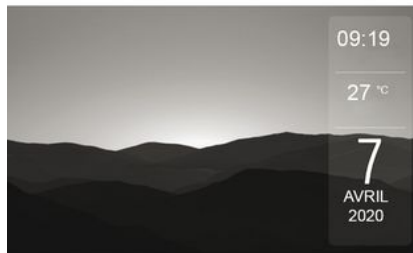

The standby screen mode allows the display screen to be switched off.

When in standby clock mode, the radio or guidance system does not operate.

Depending on the vehicle, the standby screen displays the time and exterior temperature.

Briefly press **A** to activate/deactivate the standby screen.

Night mode



Activating night mode will deactivate the screen backlighting.

To access the night mode, press **B** from the home screen.

SWITCHING ON, OFF

1




In this mode, the media source or radio station currently playing appears on the screen **C**.

Press the screen to exit dark mode.

OPERATE AND USE

Multimedia screen 1

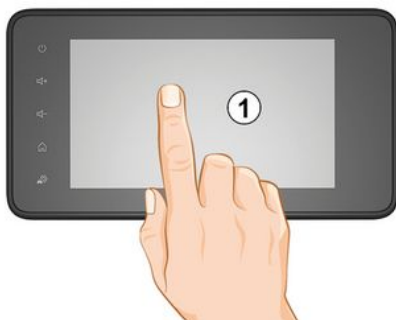

Briefly press:

- Item selection;
- Item execution (Media playing screen).

From the "Media", "Play" menu, pressing the next button switches to the next title.

Press and hold:

- saving an item (radio station for example).

From the "Radio", "Presets" menu, pressing and holding the preset number stores the radio station currently playing.

- Fast scroll.

When touching with long presses the list down buttons, scroll (per page) with acceleration.

- Fast forward/rewind (Media playing screen).


From the "Media", "Play" menu, pressing and holding the "Fast forward/rewind" button fast forwards/rewinds the track playing.

Back to previous menu "Welcome"



The system goes directly to the "Home" menu if you press and hold **2** or briefly press **3** wherever you are in the system.

Audio: using the steering column controls

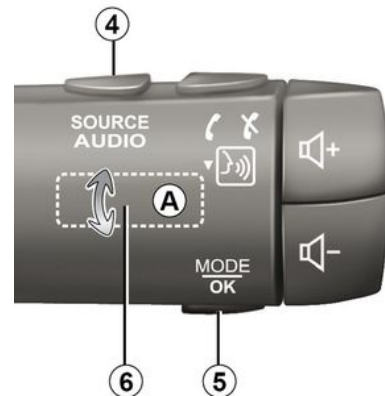

OPERATE AND USE

1

Availability depends on the vehicle

Press button **5** to change the radio station search mode.

Rotate wheel **6** to change the station (movement **A**).


Press **4** to change the source (USB, AM, FM, DAB and Bluetooth®).

Press **8** to display the list of results. If necessary, press **8** again to return to the alphabetical keypad.

Press **9** to use numbers or symbols.

Press **10** to change the keyboard configuration.

Using an alphabetical keyboard

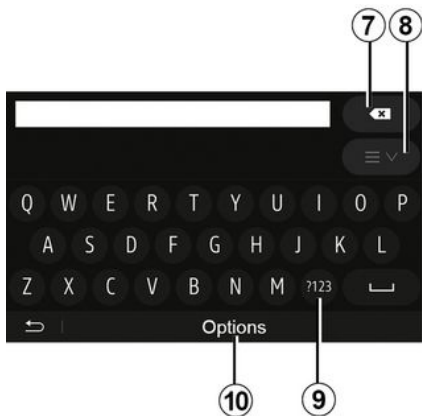

When entering a heading using an alphabetical keyboard, choose each letter using the keypad.

When choosing each letter, the system will remove the brightness of certain letters to help entering them.

Press **7** to delete the last character entered.

VOLUME

Volume

Adjust the sound level when listening to the different sources, messages, ringtones and phone communications:

- by turning or pressing button **2** on the front panel of the multimedia system;
- by pressing control **15** or **16** on the steering column control.

To adjust this function, please refer to the information on "Audio preferences" in the section on "Audio settings".

The radio source being listened to is interrupted when "TA" traffic information, news bulletins or a warning message is received.

Note: the volume set during playback is not stored for the next system restart.



Set the volume to a reasonable level so that outside noise can be heard.

Volume adjustment according to speed

When this function is activated, the audio and navigation volume will vary according to the vehicle speed.

To activate and adjust this function, please refer to the information on "Speed dependent volume control" of the section on "Audio settings".

Mute

To mute the sound:

- steering wheel control: briefly press button **21**;

or

- multimedia panel: press button **2**;

or

- steering column controls **D**, and **E**: press button **14**;

or

- steering column controls **A**, **B** and **F**: press buttons **15** and **16** simultaneously.

The "MUTE" icon is displayed at the top of the screen.

To continue listening to the current audio source:

- steering wheel control: briefly press button **21**;

or

- multimedia panel: press button **1**;

or

- steering column controls **D**, **E**: press button **14**;

or

- steering column controls **A**, **B** and **K**: press buttons **15** and **16** simultaneously.

This function is deactivated automatically when the volume control is used or when a bulletin is broadcast (road traffic, news, emergency information etc.).

ENTER A DESTINATION

Destination menu

From the home screen, press "Nav", "Menu", "Destination" to access the destination menu.

The destination menu offers several methods to enter a destination:

- Enter an address (complete or partial);
- Select an address from "Points of Interest";
- Select a destination from the previous destinations;
- Select an address from the Favourites;
- Select a destination on the map;
- Select a latitude and longitude.

Entering an address

To enter an address, press **1**.

This item allows you to enter all or part of the address: country, city, street and street number.

Note: only addresses known to the system through the digital map are authorised.




At the time of the first use:

- press "Country";
- enter the name of the country required using the keypad.

When entering the address the system will remove the brightness of certain letters to help enter the address.

The system may suggest several country lists by pressing **2**. Select the required country in the lists.

- Do the same for "Town/Suburb", "Street", "Side street" and "House number".

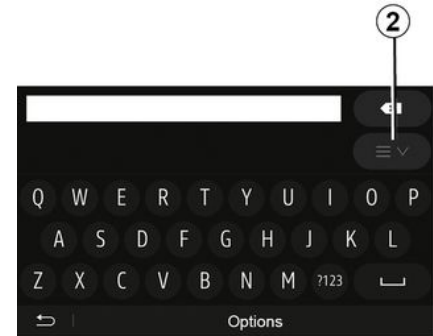

Note:

- "Side street" and "House number" can be activated once you have selected "Street";
- when entering the street, it is not necessary to specify the type of road (street, avenue, boulevard etc.);
- the system stores previously entered a destination by address, that address will be displayed when the device is next used.

ENTER A DESTINATION

Select from the "Points of interest" (POI)



You can select your destination from the points of interest.

You can find a place in different ways:

- using the quick search feature, you can quickly find a nearby place by its name;
- using the preset search feature, you can find frequently searched types of places with only a few touches on the screen;
- you can search for a place by its category.

Quick search for points of interest

The quick search feature lets you quickly find a place.

Press the map somewhere to search for points of interest. Depending on your position, one or more **3** points will be displayed on the screen.

Press **4** and then "Places of interest around cursor" to show the list of points of interest with names and distance from the place selected.

Search for points of interest using preset categories

The preset search feature lets you quickly find the most frequently selected types of places.


From the home screen, press "Nav", "Menu", "Destination", "Places of interest" to access preset categories.



Categories (petrol station/parking/restaurant)

– If an active route exists, the points of interest "Petrol station" and "Restaurant" are searched for along the route. Point of interest "Parking" is searched around the destination.

- If there is no active route (no destination selected), these points are searched around the current position.
- If the current position is not available either (no GPS signal), they are searched around the last known position.

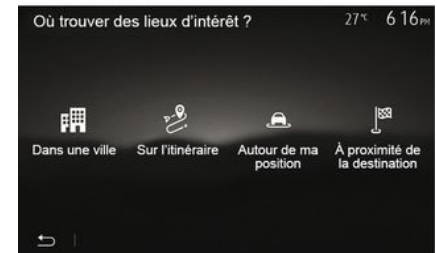

Search for points of interest by category

You can search for points of interest by their categories and subcategories.

ENTER A DESTINATION

From the home screen, tap on "Nav", "Menu", "Destination", "Places of interest", "Customised Search".

2 Select the area around which the place should be searched for:

– Press "In a town" to search for a place in a selected town (the result list will be ordered by the distance from the centre of the selected town).

– Press "Along the route" to search along the active route rather than around a given point. This is useful when you search for a later stopover that results in a minimal detour only, such as searching for nearby petrol stations or restaurants (the result list will be ranked by the length of the necessary detour).

– Press "Around my location" to search around the current position or, if this is not available, around the last known position (the result list will be ordered by the distance from this position).

– Press "Vicinity of the destination" to search for a place around the destination of the active route (the result list will be ordered by the distance from the destination).

Selecting a destination from the previous destinations



Press **5** to find a destination you have previously defined.


Selecting an address from the Favourites

You can find the destination to a location stored in the Favourites. To utilise this function more effectively, we recommend that you save destinations to which you often travel in advance.

Firstly, save the favourite destinations by searching for the address. Please refer to the section on "Managing favourites".

From the home screen, press "Nav", "Menu", "Destination", "Favourites" to display the list of favourite destinations.

Selecting a destination on the map

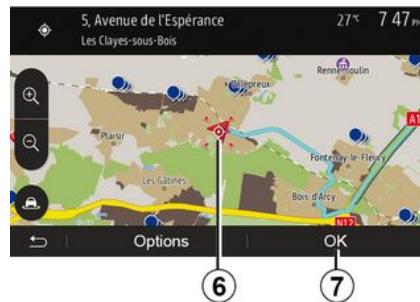

This allows you search for a destination by scrolling the map.

– From the home screen, press "Nav", "Menu", "Destination", "Search on the map" to select the destination on the map;

– Then press on the location on the map that you want to select as your destination. Point **6** is displayed; – press "**7**" to confirm.

ENTER A DESTINATION

Entering the coordinate of the destination



This allows you to search for a destination by entering its coordinates.

From the home screen, press "Nav", "Menu", "Destination", "Coordinates".

You can enter the latitude and longitude values in any of the following formats: decimal degrees; degrees and decimal minutes; or degrees, minutes and decimal seconds.

Press **8** and then UTM to enter the coordinates in UTM format.

Sorting the list



The result of searching a destination by point of interest, history and favourites can be sorted by name and distance. If an active route exists, they can be sorted by detour. Press **9** to display the map on the screen.

Finding a destination by names

In case of selecting a destination by point of interest, history or favourites, you can search for destination in the list by their names. Press "Search" and enter the name using the keypad.

Confirming the destination



There are several possible options before confirming a destination:

- « OK » ;
- « ».

A 10 second countdown will start. If you perform no action during this time, guidance will begin automatically.

« OK »

– If there is no active route (destination is not selected), press **10** to confirm the destination as a new route.

ENTER A DESTINATION

2



– If an active route exists, you can select the destination as a new route or stage. Press **10** and then "New Route" or "Waypoint".

« »

Before the 10 second countdown ends, the following choices will appear on the screen:

"Other routes"

Press **11** to change or modify the route.



« Route »

Press **12** to view a breakdown of your route. Please refer to the section on "Guidance".

"Configuring a route"

Press **13** to adjust your route depending on the desired roads and route mode.

"Simulate Navigation"

Press **15** to view of simulation of the route you have selected. Please refer to the section on "Guidance".



"Current traffic"

This function enables you to obtain information on traffic incidents over the course of your trip, or in your immediate vicinity. To access it, press **14** and then select "Current traffic".

« »

At the end of the 10 second countdown, the following choices appear on the screen:

"Add as Favourite"

Press **17** to save the selected destination in your favourite destinations.

"Current traffic"

Press **16** to obtain information about traffic incidents flagged on your route or in your immediate vicinity.

ENTER A DESTINATION

"Info"

Press **20** to view the address, latitude, longitude and telephone number of a point of interest (only activated after selecting a point of interest).

"Return to vehicle"

Press **19** to return to the current vehicle position.

Note: To close the "" window, press **18**.


NAVIGATION SETTINGS

"Warnings"

This item allows you to set up warnings.

Warning in the event of excess speed

Maps may contain information about the speed limits of the road segments. The system is able to warn you if you exceed the current limit.

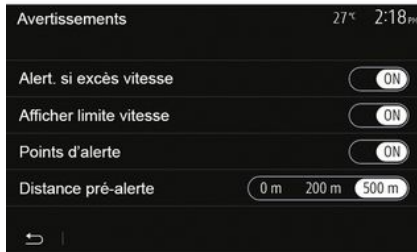

This information may not be available for your region, or may not be fully correct for all roads on the map.

The following warning types are available:

- Beep: you receive a non-verbal warning when you exceed the speed limit;
 - Visual warning: the current speed limit is displayed and flashes in red on the map when you exceed it.
- Press "On" or "Off" to activate or deactivate the warning.

Speed limit always visible

Activate or deactivate the speed limit display for the section of road taken by pressing "On" or "Off".

Alert point warnings

When the driver crosses the increased care area, a visual warning signal appears on the screen, along with a beep. These hazardous areas are sections of road on which drivers should take extra care. They can be permanent or temporary. You can activate or deactivate this function.

Pre-alert distance

You can choose a distance from a number of choices, to give the distance at which you wish to be notified of a hazardous area.



In certain countries it is illegal to download and activate the warning areas and this could lead to prosecution.

"Configuring a route"



This function allows you to set how routes will be calculated.

« Route calculation »

This system offers three criteria for calculating a route:

- "Fast": gives a quick route if you can travel at or near the speed limit on all roads;
- "Short": gives a short route to minimise the distance to travel;

NAVIGATION SETTINGS



– "Eco": this mode produces a compromise between fast and short routing modes. If you can save a certain distance by travelling for slightly longer time in exchange, it will do just that. The resulting route might be shorter than the fast variant, but not significantly slower.

"Motorways"

You might need to avoid motorways when you are driving a slow car or you are towing another vehicle.

"Toll roads"

You can authorise or refuse authorisation for roads requiring the purchase of special authorisation for a certain period.

"Toll roads"

You can authorise or refuse authorisation for the use of toll roads.

"Ferries"

You can authorise or refuse authorisation for all types of ferries, boats and trains.

"Carpooling"

This function enables you to view roads only intended for two drivers sharing.

"Off-road tracks"

You can authorise or refuse authorisation for the use of off-road tracks.



For safety reasons, carry out these operations when the vehicle is stationary.

"Map Settings"



Refer to the information in the section on "Map settings".

"Language Setting"

This function allows you to change the language of voice guidance. Please refer to the section on "Guidance" in this manual.

NAVIGATION SETTINGS

"Data format"

2



This function allows you to change the format of coordinate.

This system offers three types of format.

GPS

A



This function allows you to check the status of GPS satellites.


Press "GPS" to see the GPS information (screen A).



Precautions regarding navigation

Use of the navigation system does not in any way replace the responsibility or vigilance of the driver when driving the vehicle.

"Map update "

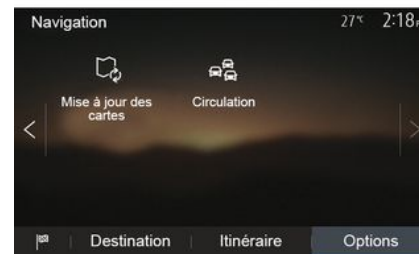

This function enables you to check the dates of your last updates.

"Traffic"

This function enables you to activate or deactivate "Traffic service", the flagging of different events and to manage alternative routes in the event of accidents or traffic jams.

NAVIGATION SETTINGS




« Traffic service »

You can activate or deactivate warnings for different incidents occurring along your route.

"Detour"

This function allows you to save time when an incident occurs on your trip, by offering you an alternative route.

The multimedia system will offer you to choose a time after which a new route is suggested to you with a detour to save time.

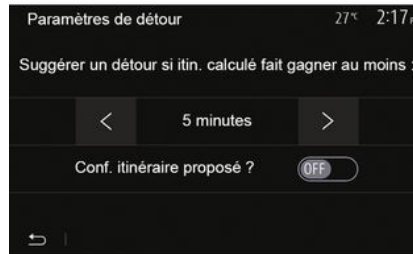

"Event types"

This function enables you to choose the types of events to be displayed during navigation:

- "All events";
- "Traffic incidents";
- "Roads closed or blocked";
- "Accident";
- ...



For safety reasons, carry out these operations when the vehicle is stationary.

READING A MAP

Map key

2



3 2

1. Points of interest (POI).
2. Traffic settings.
3. Return to the previous screen.
4. Navigation display options.
5. Display modes 3D, 2D, 2D North (the map always displays North at the top of the screen).
6. Zoom in or out.
7. Name of the next major road or road sign information.



8. Route calculated by the navigation system.
9. Distance to and indication of next change of direction.
10. Distance remaining to the destination.
11. Estimated time of arrival.
12. Location of the vehicle on the navigation map.
13. Media currently playing.
14. Traffic information. Press this area to find out about the different incidents present on your route.
15. Mute/unmute the voice guidance.

Displaying the map

To display the map around the current vehicle position, press "Home", "Nav".

Touch the map screen.

To move around the navigation map, drag the desired direction on the screen. Depending on the screen, press **2** or **3** to return to your current location.

Position GPS

This function makes it possible to find out the geographical location of the selected position (Address/latitude/longitude).

Touch desired position on the screen. Press "" and then press "Info" to find out the exact location of the selected position.

Map icons

The navigation system uses symbols **1** to display points of interest (POI). Refer to the information on "Displaying points of interest" in the section on "Map settings".

READING A MAP

"Where am I?"



This function allows you to check information about the current position and to search for POI nearby. It operates when GPS is activated.

With the route already in progress, press area **7** to access the "Where am I?" screen.

This screen includes the following information:

- latitude;
- longitude;
- altitude;
- house number;
- Current address.



Country information

Press **16** and then "Info by country".

This function allows you to view country information depending on your current position.

This screen includes the following information:

- speed limit.

Note: Speed limits are displayed for major roads. Displayed unit depends on active regional settings. If no data is available, then "--" is shown instead of table and number.

- Phone country code;
- emergency number;
- legal restrictions applicable in the country:

- maximum permitted blood alcohol level;
- high-visibility vest required;
- fire extinguisher required;
- headlights must be on at all times;
- spare bulbs required;
- first aid kit required;
- warning triangle required;
- helmets required for motorcyclists;
- snow chains required in winter;
- snow chains recommended in winter;
- "winter" tyres required in winter;
- "winter" tyres recommended in winter.



"Nearby assistance"

This function allows you to search for assistance near your current position.

READING A MAP

Tap **17** to open a new screen for the quick search.

2



Information on this screen:

- car repair services;
- medical and emergency services;
- police stations;
- petrol stations.

THE NAVIGATION SYSTEM

The navigation system

On equipped vehicles, the navigation system will determine your location and guide you using the following information:

- from the GPS receiverGPS;
- from the digital map.

GPS receiver

The navigation system uses GPS (Global Positioning System) satellites orbiting the Earth.

The GPS receiver receives signals transmitted from several satellites. The system can then locate the position of the vehicle.

Note: after moving a long distance without driving (ferry, rail freight), the system may take several minutes to adjust before returning to normal operation.

The digital map

The digital map contains the road maps and town maps that the system requires.

"Map" USBUSB key

Install the most recent version by inserting your USB flash drive into a computer that is connected to the in-

ternet. Refer to the section on "Map update".

Note: the USB key is not provided with the system.

If possible, always use the most recent version.

Insert USB key

Insert your USB drive into your vehicle's **A** port. To identify the location of the USB **A** port, please refer to the Vehicle User Manual (if necessary).



GUIDANCE

Activating guidance



Press **2** or wait 10 seconds after entering a destination. Guidance will begin.

Note: you can interact with the map at any time by sliding it in the desired direction or by pressing the screen.

Guidance screens



The system will offer several different navigation maps.

Press **3** to change the map display and open the drop-down menu. Then select one of the different displays:

- 2D ;
- 3D ;
- 2D North.

You can also change the map display by pressing the compass **1** on the map.



Full-screen mode (2D, 3D or 2D North)

This mode allows you to view the navigation map on the entire screen.

The information on the arrival time and the distance remaining to the destination are indicated in **5**.

The indication for the next change of direction is located in **4**.

GUIDANCE



Intersection map

During guidance, before each change of direction.

Alternative route

The system offers an alternative route in the event of an accident or heavy traffic along the planned route. Press "Yes" or "No" as required.

Traffic summary

During guidance, you can get traffic information at any time by pressing **6**.



The screen gives you various events appearing on your route. The system will let you know the length of the delays caused by these incidents on your trip. Press **8** to change the event display settings. Press **10** to make a detour, **9** to access traffic options (please refer to the section on "Navigation settings") or **7** to return to navigation.

Note: traffic information depends on your subscription and on signal reception.



Motorway junction view


During guidance, before each motorway junction, the system will display a three-dimensional view of the junction.

Note: for some junctions, only a guidance arrow will appear on the map.

The system will switch back to normal mode after you have passed the junction.

GUIDANCE

Changing voice guidance language

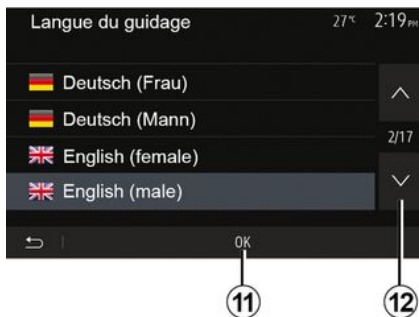

Press "Home", "Nav", "", "Set the language" to change the language of the voice guidance.

Scroll the language list by pressing **12**. Select the desired language and press **11** to confirm.

To set the voice guidance sound, please refer to the information on "Audio preferences" in the section on "Audio settings".

Listening to the radio during voice guidance



While listening to a radio station during voice guidance and before each change of direction, the system will temporarily cut the sound of the radio until you pass the junction.

You can access the radio station listening screen during navigation by pressing **13**. To return to the navigation screen, press **14**. To return to the main menu, keep pressed down for around three seconds **14**.

Route information



This function allows you to view your route.

Press "Home", "Nav", "Route" after entering a destination.

Six choices will be given:

- "Edit route";
- "To avoid";
- « Overview » ;
- "Delete route";
- "Other routes";
- « Route ».

GUIDANCE



Route overview

From the home screen, press "Nav", "Menu", "Route", "Overview" to see a map with an overview of the active route.

The following information will be given:


- the name and/or address of the destination;
- The total time of the route;
- the total distance of the route;
- special points and sections of the route (e.g. toll gates, toll roads, motorways etc.);
- alternative routes (e.g.: "Short", "Fast", "Economical").

Press **15** to display the following options:

- "Warnings";

- "Configuring a route";
- "Map Settings";
- "Language Setting";
- "Data format";
- « GPS » ;
- « Map update » ;
- "Traffic".

Note: for further information, please see overleaf.

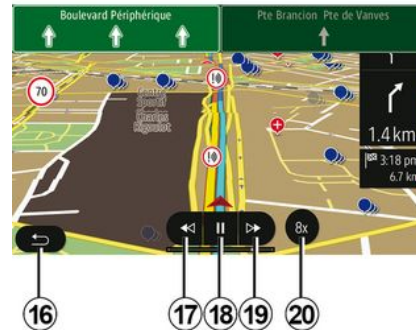

"Simulate Navigation"

From the home screen, press "Nav", "Menu", "Route", "Overview", "", "Simulate Navigation" to simulate the route you will take to the destination.

- Start or pause the simulation by pressing **18**.
- Press **20** to increase the speed of the simulation.

- You can leave the route simulation at any given moment by pressing **16**.
- To move to the previous/next manoeuvre, press **17** or **19**.



Waypoints and destination

Press "Home", "Nav", "Route", "Edit route" to change the route by adding, modifying or deleting steps.

Press **21** to add steps and **25** to add a new destination. There are several methods to enter a destination: refer to the section on "Entering a destination".

- Press **23** to delete a destination.
- Press **24** to reorder the list.
- Press **22** to change the route departure address.

GUIDANCE

2



Avoidances

Press "Home", "Nav", "Route", "Avoid" to make a detour. Press an area of the list depending on the desired detour.

To change the area, press **27**.

Confirm the new route by pressing **26**.

Cancel the route

At any given moment, you can stop the guidance.

Press "Home", "Nav", "Route", "Delete Route" to cancel the active route.



Alternative routes

This section enables you to change the route planning method. Three modes are available, enabling you to change the route planning method:

- « Fast » ;
- "Economical";
- « Short ».

Please refer to the information on "Route settings" in the section entitled "Navigation settings".

Press "Home", "Nav", "Route", "Other routes" and then **A**, **B** or **C** to confirm the new route. Press **28** to go back to previous screen.



« Route »

This function makes it possible to view the route plan. Several details of the route will appear:

- direction-change arrows;
- road number;
- distance before a fork.

Press **29** to sort the route details:

- summary:

shows only the main trip details (start, destination), the total distance, remaining time and arrival time;

- standard description:

shows all the stages and signpost information, road numbers, street names and distance. Also showing information and warnings, such as route section

GUIDANCE

names entered by the driver, restrictions (access and manoeuvre restrictions), ignored user preferences, etc.;

– road list:

details the route by road numbers and street names. It also shows their length, average direction and travel time information. Elements of the trip are not shown in this mode.

"Configuring a route"

This item enables you to choose your route settings. Please refer to the information on "Route settings" in the section entitled "Navigation settings".

MAP SETTINGS

Adjusting view mode

This function allows you to switch the map view between a 3D view and a 2D top-down view, and a view with north facing upwards.

Press "3D", "2D" or "2DNorth".

Adjusting viewpoint



This function allows you to adjust the basic zoom and tilt levels to your needs. Press the required zoom from three available levels.

Motorway View

This function allows you to activate or deactivate motorway view.

Press "On" to activate the function or "Off" to deactivate it.

Display points of interest

You can select certain points of interest (visible at 100 m scale) to be displayed on the map.

To access this function directly, press **3** to display the points of interest on the map:

- Accommodation;
- Airport;
- Automobile;
- Business;
- Café or bar;
- ...


Press the markers to the left of the Points Of Interest to display/hide those that you wish to see appear (empty marker to hide, full marker to display).

Tap the name of the point of interest to open the list of its subcategories.

Note: in countries for which maps are not available, you can deactivate the navigation function. From the main menu, select "Settings", "System", press "Off" opposite "Navigation" to deactivate the navigation function.

MANAGING THE FAVOURITES


Creating an entry

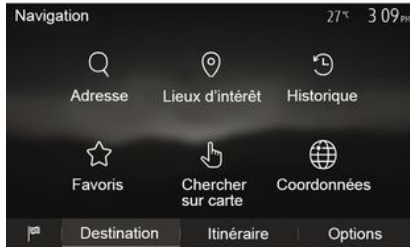

From the home screen, press "Nav", "Menu", "Destination" to access the destination menu. You have a number of methods available to enter a destination:

- "Address": please refer to the information on "Entering an address" in the section on "Entering a destination".
- "Points of Interest": please refer to the paragraph "Selecting points of interest (POI)" in the section "Entering a destination".
- "History": please refer to the information on "Select a destination from previous destinations" in the section entitled "Entering a destination".


- "Favourites": access destinations you have saved.
- "Search on the map": please refer to the paragraph "Selecting a destination on the map" in the section "Entering a destination".
- "Coordinates": please refer to the information on "Entering destination coordinates" in the section on "Entering a destination".

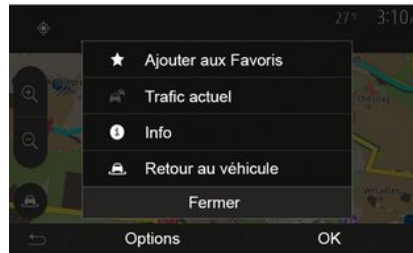

In all cases, once the address is confirmed, the system will locate it on the map. Press "" and then press "Add to Favourites" to add the destination to Favourites.

Before saving a favourite destination, you can change its name using the digital keypad.

Sorting the list

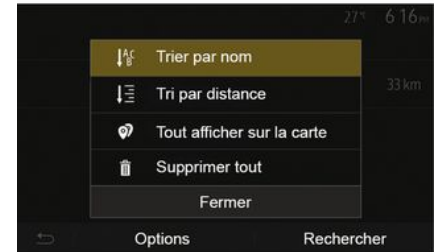

The result of saved favourites can be sorted by name, distance, or all shown on a map. Press .

Deleting the favourites

Tap the favourite you want to delete. Press "", "Delete Favourite" and confirm the deletion by pressing "Delete".

To delete all favourite destinations, press "" and then press "Delete all". Confirm this deletion by pressing "Delete all".

MANAGING THE FAVOURITES

Searching the favourite

This function allows you to search the favourite destination in the list by name.

Press "Search" and enter the name of the favourite destination using the digital keypad.

2

SELECTING A WAVELENGTH



To choose a waveband:

- Press **1**;
- Select the "FM", "AM" or "DAB" band (digital radio, on equipped vehicles) by pressing the band desired.

CHOOSE A RADIO STATION "FM", "AM" OR "DAB".

There are different modes for choosing a radio station.

After selecting the waveband, select the mode by pressing the tabs **7**, **8** or **9**.

3

Several search methods are provided:

- "Frequency" mode (**9** tab);
- "List" mode (tab **8**);
- "Presets" mode (tab **7**).

These modes can be changed using the steering column control.

Note: the **4** marker indicates the position in your saved list of the radio station currently playing.

"FREQUENCY" MODE

This mode enables you to search for stations either manually or automatically by scanning the selected frequency range. Select "Frequency" mode by pressing **9**.


To scan the frequency range:

- manually run through the frequencies in steps by repeatedly pressing **3** or **5**;
- automatically go to the next station by pressing **2** or **6**;

Repeat the operation each time the search stops if necessary.

You can also move the control knob on the steering column control to move to the next station.

Note: to go back to the welcome screen, press the **10** button.

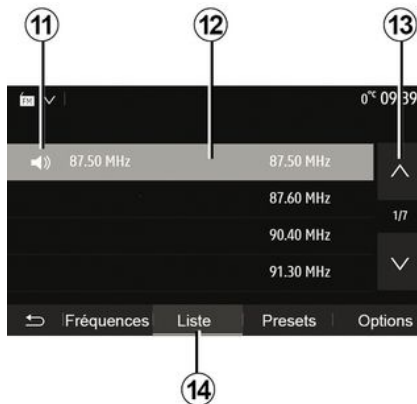

"List " mode

Select "List" mode by pressing **14**.


This operating mode allows you to find a station easily by name from an alphabetical list (on "FM" and "DAB" only).

Select the station required by pressing zone **12**.

Press **13** to scroll through all the stations.

Note: the symbol **11** indicates the station you are currently listening to.

The names of the radio stations that do not use RDS will not appear on the screen. Only their frequency is displayed and sorted at the end of the list.

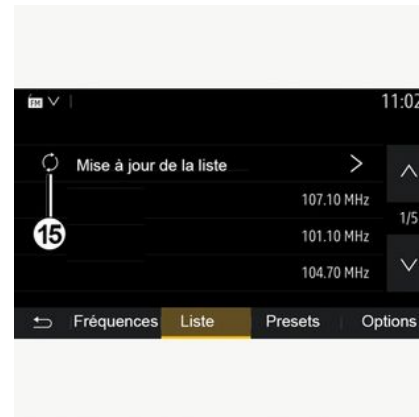


Updating the list

From "List" mode, press **15** to update the list of available radio stations.

The **15** symbol appears on the first page in the "List" mode.

Note: preferably update the "DAB" list as soon as your system is switched on.

"FREQUENCY" MODE

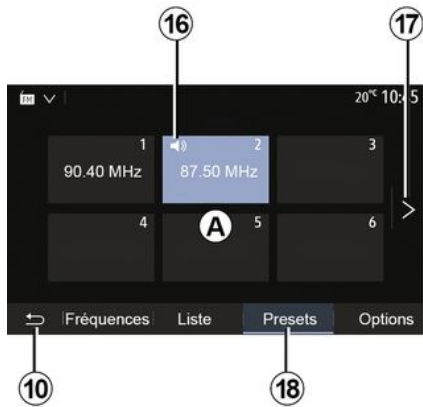

"Presets " mode

Select "Presets" mode by pressing **18**.

This mode allows you to recall on demand those stations which you have already stored (refer to information on "Saving a station" in this section).

Press one of the buttons in zone **A** to choose the saved stations.

Note: to go back to the welcome screen, press the **10** button.

STORING A STATION

Select a radio station by using one of the modes described above. Press and hold one of the buttons on the zone **A**.


You can save up to twelve stations per waveband. If you change the region via the "RDS" function, the stored stations are not automatically updated. You must again store the station currently playing.

Note: the symbol **16** indicates the station you are currently listening to.

To move to the next page, press button **17**.

RADIO SETTINGS

3

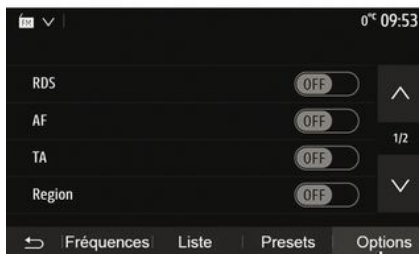

Display the settings menu by pressing **19**. You can activate or deactivate functions by pressing "ON" or "OFF" (the configuration menu changes according to the band).

The available functions are as follows:

- « RDS » ;
- « AF » ;
- "TA" (traffic information);
- « Region » ;
- "Info";
- « AM » ;
- « DLS » ;
- "Announcement";
- ...
- « RDS »

The "RDS" function receives information transmitted by the radio station currently playing.

Your system may display the name of the radio station and text messages as well as receive traffic warnings or other information.

When the "RDS" function is activated, frequency retuning (AF) is automatically activated.

Traffic information is generally sent via "RDS".

Note: not all radio stations offer this possibility.

Poor reception can sometimes cause erratic and annoying changes in frequency. In this case you should deactivate the automatic frequency retuning.

"AF" (depending on the country)

The frequency of an FM station changes according to the geographical area. Some stations use the RDS system, mainly for automatic retuning of the AF frequency during car trips.

"TA" (traffic information)

When this feature is activated, your multimedia system searches for and plays traffic bulletins automatically as new reports are issued by some "FM" and "DAB" radio stations.

Note: the automatic broadcasting of traffic information is deactivated when

the audio system is set to the "AM" band.

Select a radio station which broadcasts traffic information. If you are listening to music from another source (USB flash drive, Bluetooth® etc.), the system automatically switches to the radio if a traffic announcement is received.

Traffic information is broadcast automatically and has priority over the source being listened to at the time.

Select "ON" to activate this function or "OFF" to deactivate it.

« Region »

This setting enables the reception of specific regional programs. It temporarily deactivates automatic frequency retuning (AF) on a radio which uses regional frequencies.

The listener can keep listening to their program even if receiving a lesser signal.

Note:

- the "Region" setting only applies to the radio station currently playing;
- some radio stations broadcast on regional frequencies. In this case:
 - with "Region" activated: the system will not switch to the transmitter for the new region, but the system will switch normally between the transmitters of the initial region;

RADIO SETTINGS

– "Region" deactivated: the system will switch to the transmitter for the new region, even if the broadcast program is different.

"Info"

When this function is activated, it is possible to automatically listen to news as it is broadcast by certain "FM" or "DAB" radio stations.

If you then select the other sources, when a broadcast of the selected programme type is made, it will interrupt the other sources.

Select "ON" to activate this function or "OFF" to deactivate it.

« AM »

You can activate or deactivate the "AM" band.

Select "ON" to activate this function or "OFF" to deactivate it.

« DLS »

Availability depends on the vehicle and country. Only in "DAB".

Some radio stations broadcast text information relating to the programme being aired (the title of a track, for example).



"Updating the list"

To update the list of stations and obtain the most recent ones, press "Start".

Note: preferably update the "DAB" list as soon as your system is switched on.

« Simulcast »

Depending on the country, this function switches from a DAB station to the equivalent FM station if the digital signal is lost.

If the "FM/DAB simulcast" is activated, there may be lag of a few seconds when switching from FM to DAB or from DAB to FM and there may be a difference in the sound volume.

The system will automatically switch back to DAB as soon as the digital signal is received.

Note: during the simulcast, the station name is preceded by "FM>".

"Priority to DAB"

Depending on the country, this function allows you to select an FM station (if the radio station requested is also available in digital) and switch to the equivalent DAB station to obtain better sound quality.

Note: while DAB is prioritised, the station name is preceded by "DAB>".

"Slideshow"


Depending on the country, this function allows you to display information on the programme, music or weather instead of the logo when listening to some DAB radio stations.

Depending on the digital radio station being listened to, it may send images containing visual information about these elements.

Note: this information is only available for some radio stations.


VIDEO

3

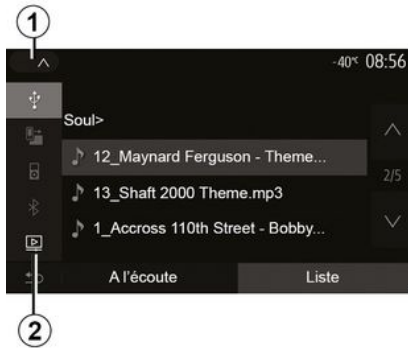


Video

Depending on the country and/or regulation in place, the system may be able to play video files stored on your USB flash drive.

Insert the flash drive USB in the multimedia port  of your multimedia system. For more information, refer to the vehicle user manual in the section on "Multimedia equipment". From the "Media" menu, press **1** then select "Video" **2** mode.

Note:

– some video formats may not be compatible with the system;

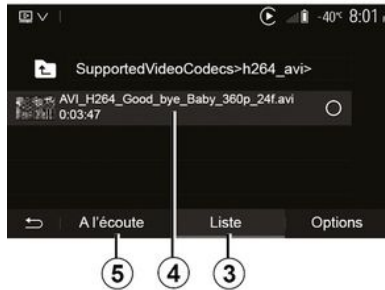


– the USB drive must be FAT32 or NTFS formatted and have a minimum capacity of 8 GB and a maximum capacity of 32 GB;
– the input sources described above may vary.

"List " mode

Press the "List" tab **3** to view the videos available. Select the video you would like to view by pressing the area **4**. The selected video is played automatically.

"Listening" mode

Press the "Play" tab **5** to launch the video selected.

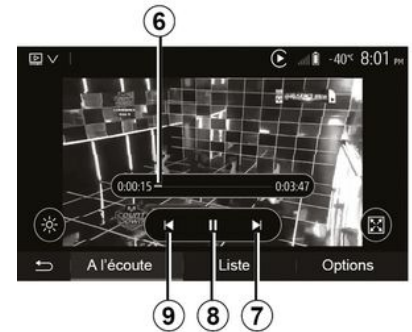


When playing a video, you can:

- press **9** to restart the video from the beginning, press **9** again to access the previous video;
- pause by pressing **8**;
- access the next video by pressing **7**;
- use the scroll bar **6** to move up and down rapidly;



Video playback is only possible when the vehicle is stationary.

VIDEO

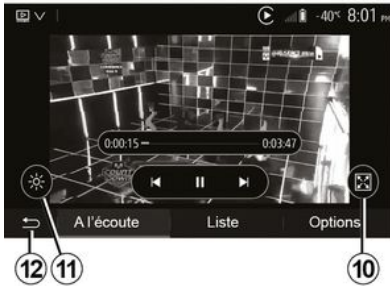

- view the video in full screen by pressing **10**;
- adjust the brightness of the screen by pressing **11**. A control bar will appear for you to perform the adjustment. Touch the screen outside this bar to make it disappear and continue the video playback;
- return to the previous menu by pressing **12**.



"Options" mode

Press the "Options" tab **13** to:

- access the playback settings;
- view detailed video information (title, type, date, etc.)

AUXILIARY AUDIO SOURCES

Your system has two types of auxiliary inputs:


- for connecting an external audio source (MP3 player, portable music player, USB key, phone, etc);
- with Bluetooth® (Bluetooth® audio player, Bluetooth® phone).

To find the input position, please refer to the section on "Introduction to the controls".

Operating and connection principles

Connect your portable digital audio player to the USB port. Once it is connected, the system automatically detects the auxiliary source.

Note: the USB drive used must be FAT32 or NTFS formatted and have a maximum capacity of 32 GB. Some formats may not be compatible with the system.

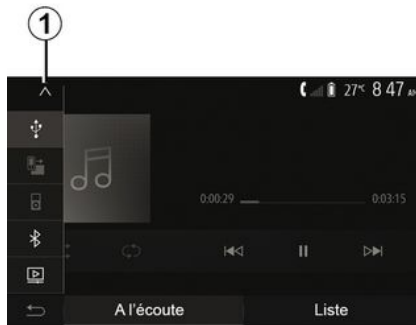

Selecting an auxiliary source

From the "Media" menu, select an input source by pressing **1**.

A list of available input sources is displayed instantly:

- USB: USB key, MP3 player, telephone, etc.
- audio devices ;
- BT: devicesBluetooth®;
- "Video": key USB(filesMP4, 3GP, AVI, MPG and MPEG).

Note: for your video files to be played using a USB flash drive, the following conditions must be met:

- video display format limited to a maximum definition of 800 x 480;
- frame rate limited to a maximum of 30 frames per second.

In navigation mode or when listening to the radio, select your auxiliary audio source by pressing "Home", then "Media".


The system starts playing the last audio track played.



Only handle the portable audio player when traffic conditions permit.

Store the portable audio player while you are driving.

Risk of it being thrown forward in the event of sudden braking.

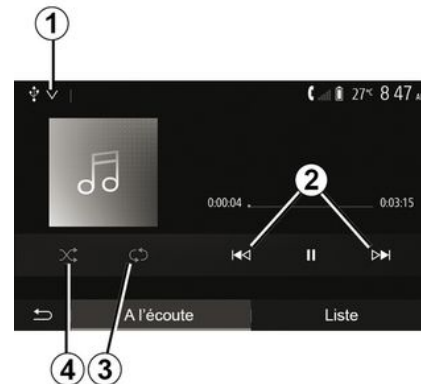

Audio formats

AUXILIARY AUDIO SOURCES

Only MP3, WMA and FLAC formats are recognised by the multimedia system.

Fast winding

Long press **2** to fast forward or rewind. Playback resumes when the button is released.

Repeat

This function enables you to repeat one or all tracks. Press **3** one or more times to repeat track(s).

Shuffle

This function lets you play all songs in shuffle mode. Press **4** to shuffle playback.

Auxiliary input: USB, Bluetooth® port

Connection: USB and portable digital audio player

Connect the jack of your portable digital audio player to the multimedia jack

input socket .

For more information refer to the vehicle user manual in the "Multimedia equipment" section.

Once the USB socket of the portable digital audio player is connected, the "USB" menu is displayed. The model or menu of the portable digital audio player may be displayed.

Note: it may not be possible to connect some types of portable digital audio player.

Use

Select the portable digital audio player from the drop-down list **1**, then press the desired playlist or audio track.

Once connected, on some models you will no longer be able to directly control your portable digital audio player. Use the buttons on the front panel of your multimedia system to select audio files.

Charging using the USB port

Once your portable digital audio player's USB connector is plugged into the system's USB socket, you can charge or maintain the battery during use.

Note: some devices do not recharge or maintain battery charge level when they are connected to the USB port on the multimedia system.



The use of USB cables recommended by the phone manufacturer are advisable for correct functioning of the application.

Connection: Bluetooth®

Refer to the section on "Connecting/disconnecting Bluetooth® devices".

Once the Bluetooth® is connected, the "BT" menu is displayed.

Use

Select "BT" from the drop-down list **1**, then press on the playback list or the desired audio track on the multimedia system screen.

All the audio tracks on your Bluetooth® device can be selected directly from the multimedia system screen.

Note: once connected, you can no longer directly control your portable digital audio player. You must use the keys on the system's front panel.



Selecting a track

AUXILIARY AUDIO SOURCES

To select an audio track within a folder, press "List", then select a track **A** from this list.

To go back to the previous level in the folder hierarchy, press **5**.

By default, albums are listed in alphabetical order.

Depending on the type of digital portable audio player, you can refine your selection by using folders or files.

Note: it is best to use a USB connection for easier music searches.

3

AUDIO SETTING

Volume adjustment according to speed ("Volume/Speed")


When your vehicle speed exceeds approximately 25 mph (40 km/h), the volume level increases in relation to the original volume level.

Adjust the volume/speed ratio by pressing "+" or "-" in area **1**.

You can deactivate this function by pressing "-" until "OFF" appears.

"Loudness"

Press "ON" or "OFF" to activate/deactivate the loudness function, which increases the bass and treble.

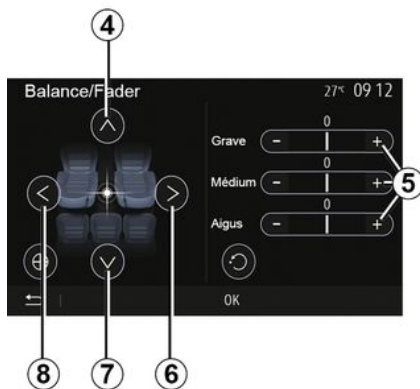

Right/left and front/rear balance

Press **6** or **8** to adjust the sound the left/right balance.

Press **4** or **7** to adjust the sound the front/rear balance.

After setting balance, press "OK" to confirm.

Bass, Mid, Treble

Press areas **5** "+" or "-" to adjust the bass, medium and treble.

Once the adjustments have been made, press "OK" to confirm.

Audio preferences




Display the audio preferences menu by pressing **9**.

You can adjust the volume of each sound independently:

- « Audio » ;
- "TA";
- "Nav";
- « Phone » ;
- "Ringtone" (phone);
- « VR ».

To do this, press "+" or "-".

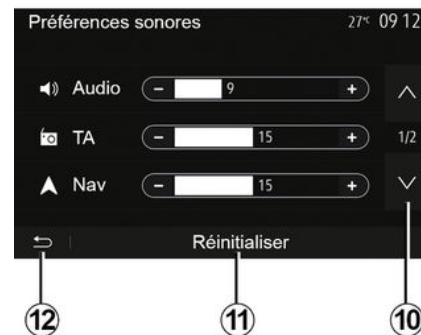

Press **10** to move to the next page.

Press **11** to reset all the audio preferences.

Press **12** to go back to previous screen.

PAIR AND CONNECT A PHONE

Pairing, unpairing devices Bluetooth®

Pairing another phone Bluetooth®

To use your hands-free phone system, you must pair your Bluetooth® mobile to your vehicle before using it for the first time.

Pairing will enable the system to recognise and store a Bluetooth® phone. You can pair up to five smartphones, but only one can be connected to the hands-free system at a time.

Pairing is carried out directly via the multimedia system or via your phone.

Ensure that the system and your smartphone are switched on and that Bluetooth® on your smartphone is activated, visible and identifiable by other devices (refer to the instructions for your phone for further information).




Depending on the brand and model of your phone, the hands-free functions may be partially or fully incompatible with your vehicle system.



Pairing a telephone Bluetooth® from the multimedia system

- Activate your phone's Bluetooth® connection;
- from the home screen, press "Settings" "Devices" "Device Manager" "Add" **1**, "OK" "Find a device";
- make sure your phone is activated and visible on the Bluetooth® link;

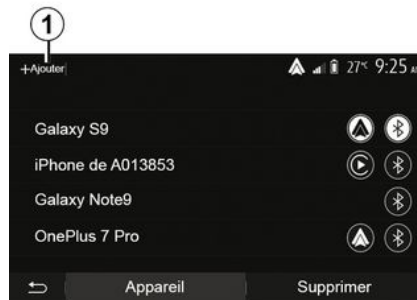

- select your phone from the list of devices found by the system;
- A message is displayed on your phone screen.



For a list of compatible telephones, consult the site-
[https://
easyconnect.renault.com](https://easyconnect.renault.com).



For safety reasons, carry out these operations when the vehicle is stationary.


PAIR AND CONNECT A PHONE

Depending on the telephone, you may either press "Twin", "Pair" or "Connect" to authorise the pairing.

- Depending on your telephone, enter the code displayed on the multimedia system screen on your telephone keypad;
- A second message appears on your phone screen offering to automatically pair to the multimedia system for future uses. Accept this authorisation to avoid the need to redo all these steps.

Transferring the phonebook

Depending on the type of phone, the system may prompt you to confirm the transfer of the phonebook and call log to the multimedia system during pairing.

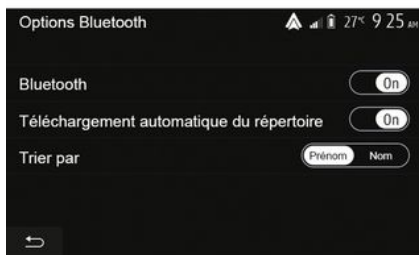

You can also authorise automatic sharing of the phonebook and the call log:

- from the home screen, press "Settings", "Devices", "Options Bluetooth";
- choose between ON and OFF for the "Automatic phonebook download".

If you selected ON the system will automatically transfer your phonebook during your next pairings.

Note: your multimedia system memory is restricted and it is possible that all your contacts may not be imported.

Your smartphone is now paired to your multimedia system.

Note: the pairing time varies based on the make and model of your telephone.

If pairing fails, redo the operation. If your phone is not visible by the system while searching for Bluetooth® devices then please consult your telephone manual.

Pairing a telephone Bluetooth® to the multimedia system from the phone

- Activate the Bluetooth® connection of your phone and the system;
- from the home screen of your multimedia system, press "Settings", "Devices", "Device manager", "Add" **1** "OK". You thereby make the system visible for the other Bluetooth® phones;

- a message appears on the screen displaying a password and the time left during which the system remains visible;

- from your telephone, display a list of available Bluetooth® devices;
- select the multimedia system from the available devices in the time given and use your telephone keypad to enter the password displayed on the system screen (depending on the telephone).

A message appears on your telephone screen to notify you that it is now paired with the multimedia system.

Note: the pairing time varies based on the make and model of your telephone.

If pairing fails, redo the operation.




Your hands-free system is only intended to facilitate communication by reducing the risk factors, without removing them completely. Always comply with the laws of the country in which you are travelling.

PAIR AND CONNECT A PHONE



When switching on the multimedia system, the last paired device will be automatically connected to the system.

4

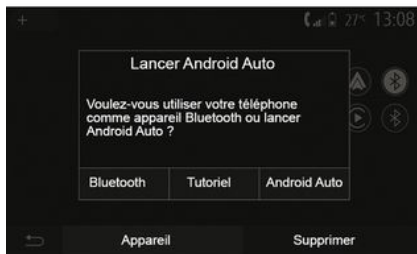

Pairing via WIFI (Android Auto™ / CarPlay™)

To access pairing via WIFI, during the first Bluetooth® connection with your telephone you will be given the option to use your telephone as a Bluetooth® device or to connect via WIFI (Android Auto™, CarPlay™) in order to use replicas of the apps on your smartphone. Tutorials are available to guide

you when pairing via WIFI. For more information, refer to the sections entitled "Smartphone replication" and "Android Auto™, CarPlay™".


Unpair a Bluetooth® telephone from the multimedia system

Unpairing erases a phone from the hands-free system memory.

From the home screen, press "Settings", "Devices" and then press "Device Manager". Press the "Delete" tab **4**, then the "Recycle bin" icon **3** opposite the name of the smartphone you wish to delete from the list. Confirm your choice by pressing "OK".

Unpair all Bluetooth® telephones from the multimedia system

You can also delete all phones previously paired from the hands-free system memory. From the main menu, press "Settings", "Devices", "Device Manager", then press the "Delete" tab and press "All", **2**". Confirm the deletion of all paired telephones by pressing "OK".

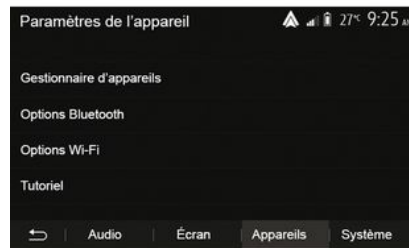

"Wi-Fi Options"

To activate or deactivate WIFI, select the country frequency or reset your password WIFI.

PAIR AND CONNECT A PHONE



"Tutorial"

Access smartphone integration tutorials for Android Auto™ or CarPlay™ as well as voice guidance for the voice recognition feature.

Connecting, disconnecting devices Bluetooth®

Connecting a Bluetooth® paired phone

No phone can be connected to the hands-free phone system if it has not first been paired. Please refer to the section entitled "Pairing/unpairing Bluetooth® devices".

Your phone must be connected to the hands-free phone system in order to use all its functions.

Automatic connection

Once the system is switched on, the hands-free phone system will search for any paired phones present in the vicinity (the search may take a minute). It automatically connects to the last connected phone if:

- the Bluetooth® connection of the telephone has been activated;
- at the time of pairing, you previously authorised automatic connection for your telephone to the system.

Note:

- If a call is in progress at the time the connection is made, the sound is automatically transferred to the vehicle speakers;
- it is recommended to accept and authorise all messages which appear on your telephone while pairing with the system so that the automatic device recognition function operates smoothly.

Manual connection

From the main menu, carry out the following operations:

- press "Phone";
- press "Display Bluetooth devices";
- select the name of the telephone to which you wish to connect.

Your telephone is connected to the multimedia system.

Connection failure

If connection fails, check that:

- your device is switched on;
- the device is configured to accept the system's automatic connection request;
- your device battery is not flat;
- your device has been paired to the hands-free system;
- the Bluetooth® for your device and the system are activated.

Note: Using your hands-free system for prolonged periods of time will discharge your device's battery more quickly.

Changing a connected telephone


You can connect or disconnect a Bluetooth® device at any time.

From the main menu, press "Smartphone Integration", then select the device to connect and confirm by pressing "OK".

The Bluetooth® **1** icon appears in white opposite the name of your telephone to indicate that the connection has been established.

PAIR AND CONNECT A PHONE

Disconnecting a connected telephone

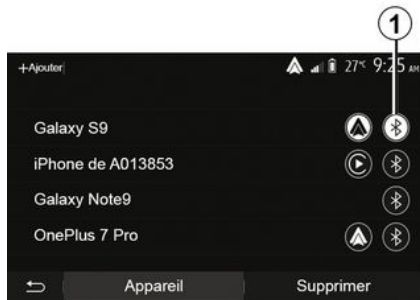


To disconnect a telephone from your multimedia system, select the Bluetooth® **1** icon, then "OK".

If a call is in progress when the phone is disconnected, the call will automatically switch to your phone.

CALL MANAGEMENT

Phonebook

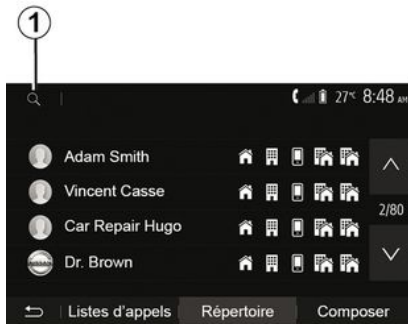

From the main menu, press "Telephone" then "Contacts list" to access the system's phonebook.

Using your Phone Book

You can use the Phone Book entries stored on the memory of phone.

After connecting your system and your Bluetooth® phone using Bluetooth® wireless technology, your phonebook numbers are automatically transferred into the system if the contacts are stored in the telephone memory of your device.

Note: on some phones, the system may ask you to confirm the transfer of

the phonebook to the system during pairing.

Calling a number in the Phone Book

After finding the contact in the phonebook you want to call, select the number to place the call.

Searching for a contact in the phonebook

Press **1** then enter the surname or first name of the contact you are seeking, using the digital keypad.




Depending on the make and model of your phone, transferring your contacts to the multimedia system may not work.



It is recommended that you stop your vehicle before entering a number or searching for a contact.

Making, receiving a call

Making a call from the phonebook

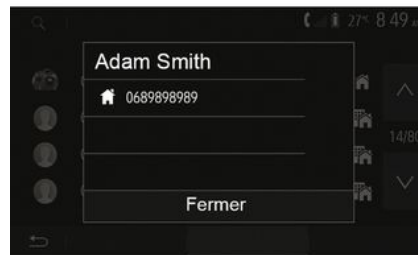

4


With the telephone connected, from the "Phone" menu, select "Contacts" from drop-down menu "1".

Select the contact (or the suitable number of the contact has more than one). The call is made automatically by pressing the contact's number.

Note: you can make a call from the multimedia system using the voice recognition from your smartphone. (See the "Using voice recognition" section).

CALL MANAGEMENT

Dialling a number from the call history

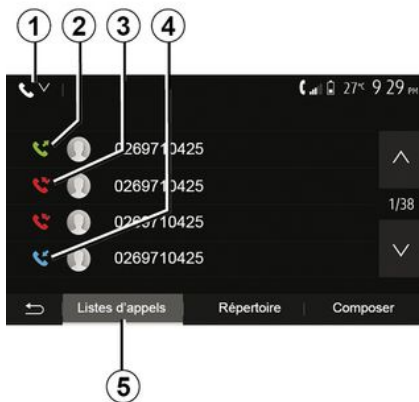

You can use the call list stored on the phone memory to make a call.

After connecting your unit and Bluetooth® phone via Bluetooth® wireless technology, the numbers in your phone's "All Calls", "Outgoing Calls", "Incoming Calls", and "Missed Calls" lists are transferred automatically into the call list on your multimedia system.


From the "List of calls" tab **5** press **1** to filter the call log by call type and a drop-down list will appear:

- press the **2** icon to access the list of outgoing calls;
- press the **3** icon to access the list of missed calls;

- press the **4** icon to access the list of incoming calls;
- press the **1** icon to return to the list of all calls.

For each list, the contacts are listed from the most recent to the oldest. Select a contact to make the call.


Dial number

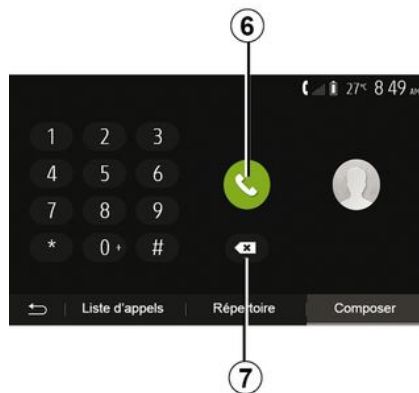


From the welcome screen, press "Phone" then "Dial".

Press the numbered buttons to dial the number, then press **6** to place the call.

To delete a number, press **8**. Press and hold **7** to delete all the numbers at once.

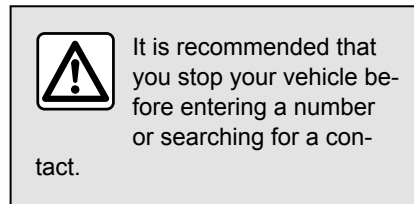

Receiving a call

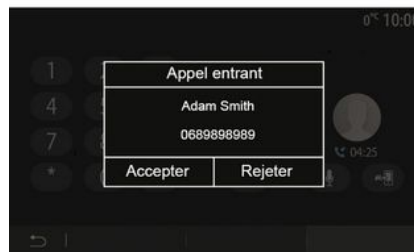

When receiving a call, a message is displayed on the multimedia system screen with the following information on the caller:

- the name of the contact (if the number is present in the phonebook list);
- caller's number;
- "Private number" (if the number cannot be shown).


CALL MANAGEMENT

Note: when the incoming call message appears on the screen during navigation, accept or reject the call to return to the navigation screen.

Note: you can answer or reject an incoming call by pressing the button on your vehicle's steering column.

– press **11** to return to the previous screen (the navigation screen, for example) or the welcome screen.

During a call

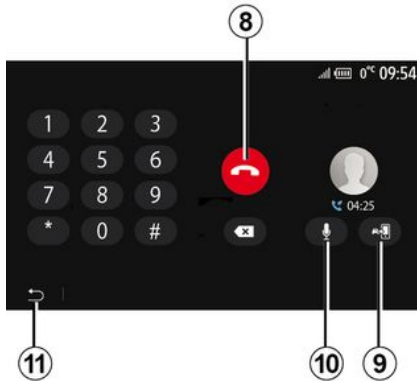

During a call you can:

- hang up by pressing **8**;
- toggle between the telephone loud speakers or the vehicle loud speakers by pressing **9**;
- deactivate or activate the microphone by pressing **10**;

WIRELESS CHARGER

Induction charging area

Introduction

Use the induction charging zone **1** to charge a phone without using a cable. If the vehicle is equipped, the charging area is indicated by (depending on the vehicle):

– an associated symbol;
and/or

– the charging status is automatically displayed on the screen as long as the phone is positioned in the dedicated area.

Its location may vary depending on the vehicle. Please refer to the vehicle user manual for further information.



Note:

- induction charging is initiated when the ignition is switched on or when the engine is started;
- for more information on compatible telephones, please contact an authorised dealer or visit <https://reault-connect.renault.com>;
- to enable optimal charging, it is preferable to remove the protective case from your phone before charging;
- for optimal charging, the entire surface of the smartphone should coincide with a maximum of the surface of the charging area and be positioned the most central possible.

Charging procedure

Position your phone **2** in the induction charging area **1**. Charging is automatically started and the charging progress **3** is displayed on the screen.

The charging procedure may be interrupted if an object is detected in the induction charging area **1** or if the induction charging area **1** is overheating. Once the temperature has dropped, your phone will soon start to charge again.

Charging progress





The multimedia system informs you of your telephone **2** charging status **3**.

- charging complete **4**;
- charging in progress **5**;
- object detected in the charging area/object overheating/charging procedure interrupted **6**.

Note: the multimedia system will signal if your telephone **2** charging procedure is interrupted.

WIRELESS CHARGER

 It is essential not to leave any objects (USB drive, SD card, credit card, starting card, jewellery, keys, coins, etc.) in the induction charging area **1** whilst charging your phone. Remove any magnetic cards or credit cards from the phone case before positioning your telephone in the induction charging area **1**.

 Objects left in the induction charging area **1** may overheat. It is advisable to place them in the other storage areas provided. (storage compartment, sun visor storage compartment, etc.)

USING VOICE RECOGNITION

Introduction

Your vehicle's multimedia system uses your telephone's voice recognition system to:

- control some of the vehicle multimedia system functions and some of your telephone functions by voice;
- enable you to use your multimedia system or your phone while keeping your hands on the steering wheel.

Note:

- the position of the voice recognition button may vary (steering wheel control, steering column control or multimedia system front panel);
- When using voice recognition, the language set on your telephone will be the language used by your system;
- if your smartphone is not equipped with voice recognition, a message will be displayed on the multimedia system.

Activating the phone's voice recognition with the multimedia system

To activate your phone's voice recognition system you should:

 
- get a 3G, 4G or WIFI connection with your smartphone;

- activate Bluetooth® on your smartphone and make it visible to other devices (please refer to your telephone manual for instructions);
- pair and connect your smartphone to the multimedia system (please refer to the section on "Pairing, unpairing devices Bluetooth®").

Note: marks **1** and **2** in the "Settings", menu "Devices" then "Device manager" indicates that your smartphone is paired and connected to your multimedia system. This is necessary in order to use voice recognition.




Press and hold the voice recognition

button  in order to activate.



When using your phone's voice recognition with the multimedia system, the transfer of cellular data required for its operation may generate additional costs not included in your phone service contract.

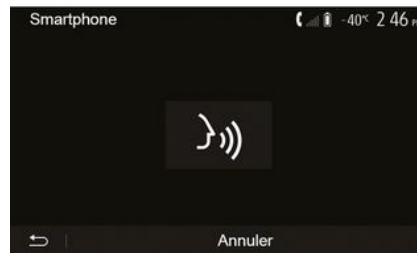

A beep sounds and the display on screen **A** indicates that voice recognition is activated.


Speak loudly and clearly.

Note: your smartphone's voice recognition system only enables you to use certain functions of your telephone. It does not enable you to interact with

USING VOICE RECOGNITION

the other functions of your multimedia system such as the radio, the Driving Eco, etc.

Use

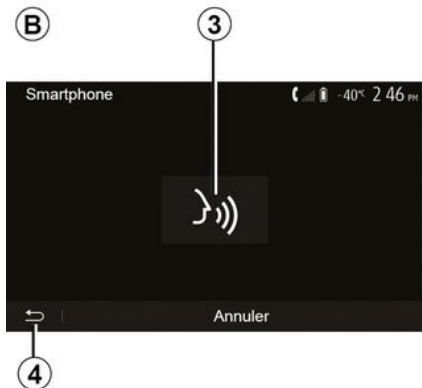

Once activated, to restart the voice recognition system, tap on the steering wheel control, on the steering column control or on your multimedia system, or on the button **3** on your multimedia system screen.


You can return to the welcome screen at any time by pressing **4**.




To return to screen **B** press **5** in the main menu of your multimedia system.

Note: when using voice recognition, the "Media" and "Radio" functions will not be available or accessible from the main menu of your multimedia system.

Deactivation

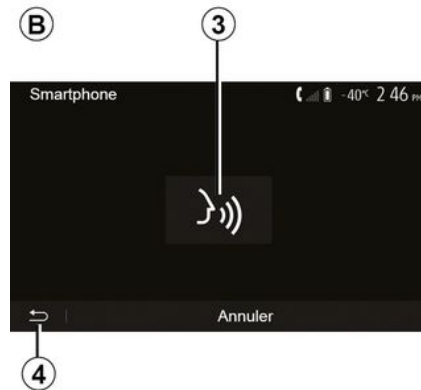


Press button **3** on the **B** screen or press and hold the voice recognition

button  in your vehicle. An audible signal indicates that voice recognition is deactivated.

4

USING VOICE RECOGNITION

Help

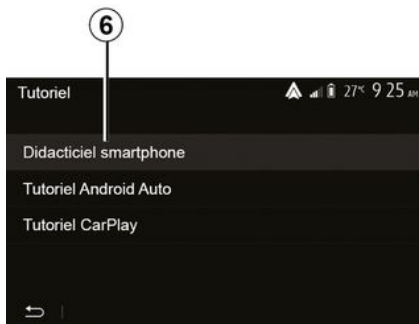


You can get additional help on the operation and usage conditions of the voice recognition system.

To do this, from the home screen tap on "Settings", "Devices", "Tutorial", "Voice guidance" **6**.



This function is presented in the form of screens explaining how to use voice recognition, alongside the:

- conditions of use;
- compatible telephones;
- the activation and deactivation of the function using the voice recognition

button  in your vehicle;

- method for interacting with the screen;
- available functions;
- extent of the functions.

ANDROID AUTO™, CARPLAY™

Android Auto™

Introduction

"Android Auto™" is an application that can be downloaded (from the application download platform on your smartphone) enabling you to use some of your phone applications and functions on your multimedia system screen.

Note:

- to determine if your smartphone is compatible with the "Android Auto™" application, please consult the official website of your telephone's operating system;
- the "Android Auto™" application functions when your smartphone is connected to your vehicle's USB port or via WIFI (availability depends on whether your vehicle and smartphone are equipped). The voice recognition service must be activated. The "Android Auto™" application must be visible on the welcome screen **1**.



The use of USB cables recommended by the phone manufacturer are advisable for correct functioning of the application.



First use

You can connect your telephone to the USB port on your multimedia system or connect to the multimedia system via the WIFI connection on your smartphone (depending on the equipment):

- accept the requests on your smartphone in order to use the "Android Auto™" application;
- Confirm by pressing "Accept" on your phone.



5

The "Android Auto™" application is launched on the multimedia system.

If the procedure described above fails, repeat the operation. From the welcome screen, select "Settings", "Devices", "Device manager", you can manage the devices connected to your multimedia system at any time.

Note: the first connection with "Android Auto™" is made when the vehicle is stopped for the sole purpose of activating the multimedia system voice recognition.

CarPlay™

Introduction

ANDROID AUTO™, CARPLAY™

"CarPlay™" is a native service available on your smartphone which enables you to use some applications on your phone from your multimedia system screen.

Note:

– if your smartphone is not equipped with the "CarPlay™" service, please consult the official website of your telephone's operating system;
– the "CarPlay™" service functions when your smartphone is connected to your vehicle's USB port or via WIFI (availability depends on whether your vehicle and smartphone are equipped). The SIRI service must be activated. The "CarPlay™" service should be visible from the button **2** on the welcome screen.



The use of USB cables recommended by the phone manufacturer are advisable for correct functioning of the application.



First use

You can connect your telephone to the USB port on your multimedia system or connect to the multimedia system via the WIFI connection on your smartphone (depending on the equipment).

The CarPlay™ service is launched on the multimedia system.

If the procedure described above fails, repeat the operation.



From the welcome screen, select "Settings", "Devices", "Tutorial", you can access a tutorial on connecting your smartphone to your multimedia system.

ANDROID AUTO™, CARPLAY™



Once the "Android Auto™" application or the "CarPlay™" service is activated, you can use the voice recognition button in your vehicle to activate some of your smartphone functions by voice. To do this, press button **3** on the steering wheel of your vehicle (for more information, refer to the section on "Using voice recognition").

Note:

– you may use "Android Auto™" or "CarPlay™" to access your smartphone's navigation and music applications. These applications will replace similar applications integrated into your multimedia system which are already running. For example, only one navigation application, "Android

Auto™"/"CarPlay™", or the application integrated into your multimedia system can be used;

– when you are using "Android Auto™" or "CarPlay™", some multimedia system functions will continue to run in the background. For example, if you start "Android Auto™" or "CarPlay™" and use the navigation on your smartphone while the radio on the multimedia system is currently playing, the radio will continue to be broadcast.



When you use the "Android Auto™" application or the "CarPlay™" service, the transfer of mobile data required for it to operate may lead to additional costs not included in your phone subscription.

Return to the interface of your multimedia system



5


To return to the interface:


– press the "Home" button on the front panel of your multimedia system or on the central control;

or

– press button **4** on the multimedia system screen according to "Android Auto™" or "CarPlay™".

ANDROID AUTO™, CARPLAY™

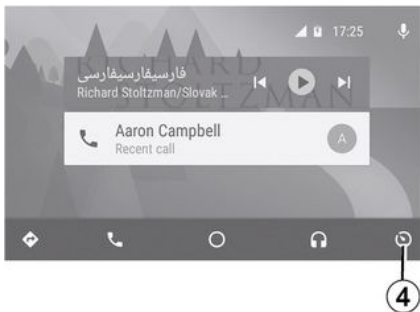

 The availability of the functions of the "Android Auto™" app and the "CarPlay™" service depends on your telephone brand and model. For further information, please refer to the manufacturer's website if there is one.

SMARTPHONE REPLICATION

Methods



There are two ways to access the smartphone interface:

– connect to the smartphone by plugging into the multimedia port USB



– wireless smartphone connection (availability depends on the vehicle and/or finish level).

A settings menu is available for the wireless connection.

Note: for the correct operation of the application, the USB cable used must be:

- referenced by the telephone manufacturer;
- maximum length of 1.5 m.

"Wi-Fi Options"

To access the "Wi-Fi Options" menu, from the main menu press "Settings" then the "Devices" tab.

"Wi-Fi"

Select "ON" or "OFF" to activate or deactivate your vehicle's WIFI connection.

"Country frequency"


From this menu you can select the country in which you are using your vehicle's WIFI connection in order to adapt the connection frequency to the regulation in place in that country.

"Reset Wi-Fi PSK"

Use this option to reinitialise all previous connections to your vehicle, in order to connect a new device or to fix a connectivity problem.

Connect the smartphone using a USB connection

(A)

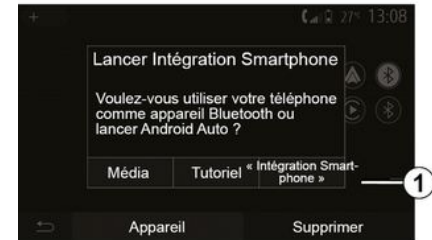

5

First use

After connecting your smartphone to your vehicle's USB port, the **A** screen should appear:

- "Media": enables you to use your smartphone for the following portable digital audio player functions:
 - MTP (Media Transfer Protocole) ;
 - portable digital audio player.
- "Tutorial": access tutorials on how to use smartphone interface applications;
- "Smartphone integration": enables you to access the smartphone interface via the adapted application:
 - Android Auto™ ;
 - CarPlay™.

SMARTPHONE REPLICATION

Select the "Android Auto™, CarPlay™" option **1** to access the smartphone interface.

The smartphone interface application screen should appear on your multimedia system.

Connect the smartphone using a wireless connection



Availability depends on the vehicle and/or finish level.


First use

For this type of connection, you will need to carry out operations to pair your Bluetooth® telephone to the multimedia system:

- activate the Bluetooth® connection and the WIFI connection on your telephone and on your multimedia system;
- from the main menu of your multimedia system, press "Settings", "Devices", "Device Manager", "Add"**2**, "OK". You thereby make the system visible for the other Bluetooth® phones;

- the **B** screen appears displaying a password and the time left during which the system remains visible;
- from your telephone, display a list of available Bluetooth® devices;
- select the multimedia system from the available devices in the time given and use your telephone keypad to enter the password displayed on the system screen (depending on the telephone).

A message appears on your telephone screen to notify you that it is now paired with the multimedia system.

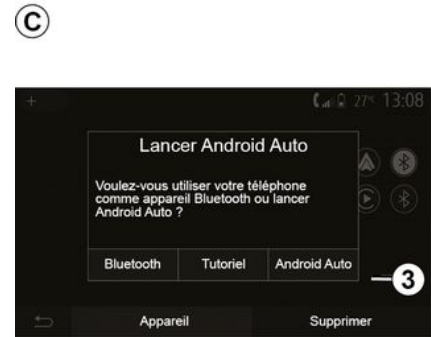

Once your smartphone is paired, the **C** screen should appear.

Select "Android Auto™, CarPlay™" **3** to access the smartphone interface.

The smartphone interface application screen should appear on your multimedia system.

Note: operation of the Android Auto™/CarPlay™ wireless (WIFI) interface depends on the technical specifications of your smartphone and current local legislation.

REVERSING CAMERA

Operation

When shifting into reverse gear (and up to approximately five seconds after shifting to another gear), a view of the surroundings behind the vehicle is displayed on the multimedia system screen accompanied by the guide, a silhouette of the vehicle and a sound signal.


Ultrasonic sensors installed in your vehicle "measure" the distance between the vehicle and an obstacle.

When the red zone is reached, use the bumper image to stop accurately.

Note:

- for more information on using Park Assist, please see the vehicle user manual;
- ensure that the reversing camera is not obscured (dirt, mud, snow, etc.);
- once the reverse gear is engaged, the multimedia screen displays a view of the area behind the vehicle for several seconds.


Activation/deactivation

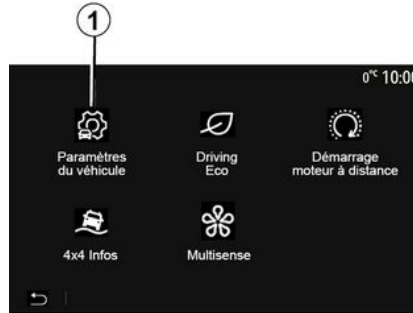

Reversing camera

You can activate/deactivate the reversing camera. To do this, from the home screen select "Vehicle", "Vehicle Settings", **1** and then press the "Parking Aids" **2**.

Note: the reversing camera display is no longer available (it is replaced by a black screen) when the vehicle speed is above approximately 6 mph (10 km/h), depending on the local legislation.

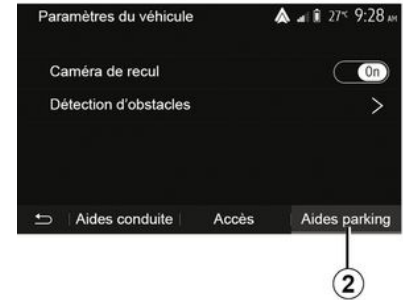

"Parking aids"

This menu allows you to activate/deactivate the reversing camera and set up "Obstacle detection".




REVERSING CAMERA

"Obstacle detection"

Depending on the vehicle, you can activate or deactivate your vehicle's front and/or rear sensors independently. Select "ON" to activate the desired sensor(s) or "OFF" to deactivate it/ them.

Sound settings

You can activate/deactivate the audio alert and select from several sounds as well as adjust the volume of the obstacle sensors.

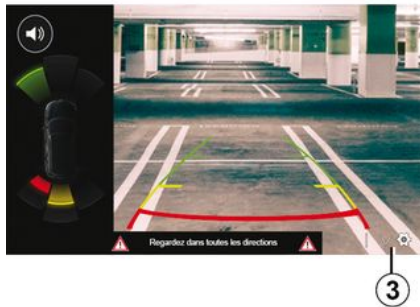


Display settings

You can access the display settings with the **3** button.

From this menu you can activate/deactivate the fixed **4** or mobile **5** (depend-

ing on the vehicle) guide lines that indicate the distance behind the vehicle, and you can adjust the screen settings.

Press "+" or "-" to adjust the contrast **6**, brightness **7** and colours **8**.

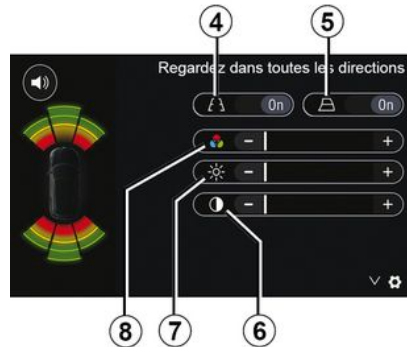

For safety reasons, carry out these operations when the vehicle is stationary.



This function is an additional aid. It cannot, therefore, under any circumstances replace the vigilance or the responsibility of the driver.

The driver should always be ready for sudden incidents while driving: always ensure that there are no small, narrow moving obstacles (such as a child, animal, pushchair, bicycle, stone, post, etc.) in the blind spot when manoeuvring.

REVERSING CAMERA



The screen shows a reverse image.

The gauges are a representation projected onto flat ground. This information must not be taken into account when superimposed on a vertical object or an object on the ground.

Objects which appear on the edge of the screen may be deformed.

In very bright light (snow, vehicle in sunshine, etc.), the camera vision may be adversely affected.

MULTI-VIEW CAMERA

Introduction

If the vehicle is equipped, four cameras are fitted at the front, in the door mirrors and at the rear of the vehicle to offer you additional aid during difficult manoeuvres.

Note: make sure that the cameras are not obscured (by dirt, mud, snow, condensation etc.).



This function is an additional aid. It cannot, therefore, under any circumstances replace the vigilance or the responsibility of the driver.

The driver should always pay attention to sudden incidents during driving: always ensure that there are no moving obstacles (such as a child, animal, pram, bicycle, etc.) or small or narrow objects such as stones or posts in your path when manoeuvring.

Operation

When the reverse gear is engaged, the rear view camera displays the area to

the rear of the vehicle on the multimedia screen.

You also have the option of choosing the view to be displayed on the multimedia screen by changing to manual mode.

Activation/deactivation

The system is activated when the vehicle is travelling at a speed below approximately 12 mph (20 km/h). When the vehicle exceeds this speed the system is deactivated.

The system can also be activated by pressing the activation button in your vehicle. For further information, please refer to the "Multi-view camera" section in your Vehicle User Manual.

Note: For more information on choosing Automatic or Manual mode, please refer to your vehicle's Driver's Handbook.

Camera choice




To activate the desired camera view, select it on the multimedia screen:

- 1 view of the area behind the vehicle;
- 2 view of the area in front of the vehicle;
- 3 right-hand side area view;
- 4 view of the area to the left of the vehicle.

MULTI-VIEW CAMERA

Settings

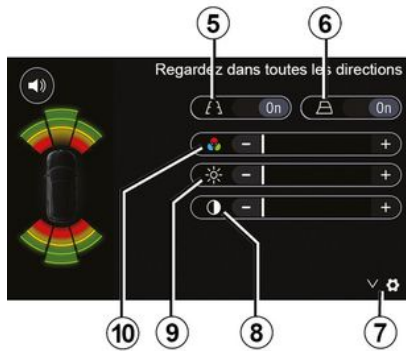

Press **7** to display a list of settings.

Activate or deactivate the display of fixed **5** or moving guide lines **6**.

Press "+" or "-" to adjust the contrast **8**, brightness **9** and colours **10**.

MULTI-SENSE

Multi-Sense menu

On vehicles fitted with this, from the main menu press "Vehicle" then "Multi-Sense". This menu lets you customise the behaviour of some on-board systems.

Selecting mode

You can select the modes using the control on your vehicle. For further information, refer to the vehicle user manual.

Available modes may vary according to the vehicle and equipment level. From the "Multi-Sense" menu, select the mode **1** desired:

- "My Sense" or "Normal", depending on the vehicle;
- « Sport » ;
- « Eco ».

Note: the last mode is not memorised when restarting the vehicle. By default, the vehicle restarts in either My Sense or Normal mode.

Mode Sport

This mode enables an increased responsiveness from the engine and the gearbox. The steering is firmer.



Mode Eco

Eco mode focuses on energy saving. The steering is smooth, engine and gearbox management reduce fuel consumption.

Mode My Sense or Normal

My Sense, or Normal mode (depending on the vehicle) adopts your vehicle's standard settings by default. Depending on the vehicle equipment level, it is possible to manually reconfigure My Sense mode by modifying the driving, comfort and ambient lighting settings.

Mode configuration

Press "Mode configuration" **2** to customise the following different settings:


- "Steering";
- « Climate » ;
- "Ambient lighting";
- "Instrument panel appearance";
- « Intensity » ;
- « Ambiance ».

Note: certain "Multi-Sense" configuration settings are restricted according to your vehicle category and equipment level. These menus remain visible on the multimedia screen but are unavailable.



For safety reasons, carry out these operations when the vehicle is stationary.

MULTI-SENSE

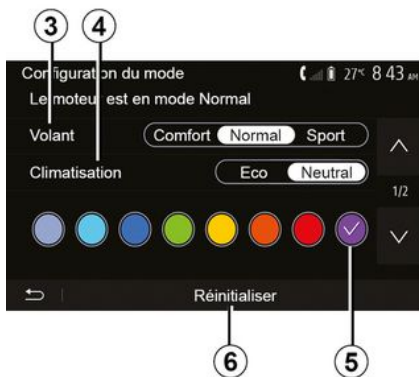

"Steering" 3

This setting offers several steering response modes:

- « Comfort » ;
- « Normal » ;
- « Sport ».

Depending on the mode selected, the steering sensitivity can be adjusted to become heavier or more reactive in order to provide optimal balance between a smooth and accurate steering experience.

« Climate » 4

This setting offers several air conditioning operating modes:

- « Eco » ;
- "Neutral";

Depending on the mode selected, you will be offered the optimal balance between temperature comfort and fuel economy.

For further information on the air conditioning settings, which depend on the equipment level, refer to the section on "Climate" in your vehicle user manual.


"Ambient lighting"

This setting can be used to choose the ambient lighting colour type for your vehicle.

To change the ambient colour in your vehicle, select one of the colours 5 from those available.

« Intensity » 7

This setting enables you to adjust the brightness of the ambient lighting in your vehicle. To do this, press "+" or "-".

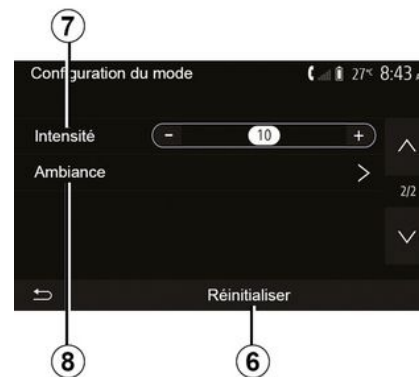

« Ambiance » 8

The selected colour and intensity can be applied to the following areas:

- « Instrument panel » ;
- « Front » ;
- « Rear ».


Press "On" or "Off" to activate/deactivate the ambient lighting in the area selected.

« Reset » 6

This option enables you to reinitialise the default values for the current mode.

ECO DRIVING

Access the Driving Eco menu

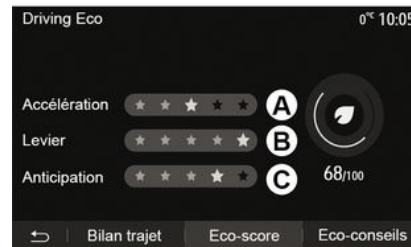

6

From the main menu, press "Vehicle", then "Driving Eco".

The "Driving Eco" menu grants access to the following information:

- "Green recommendations";
- "Journey record";
- "Eco score".

"Green recommendations"

This menu assesses your driving style and gives you the best possible advice to optimise your fuel consumption.

"Journey record"

This menu shows you the data saved from your last journey:

- "Average fuel consumption";
- « Total consumption » ;
- « Average speed » ;
- "Distance without fuel consumption".

Note: you can reset the data by pressing **1**.

"Eco score"

This menu gives you an overall mark out of 100. The higher the score, the better your eco-driving performance:

- average acceleration performance (zone **A**);
- average gear change performance (zone **B**);
- average braking anticipation performance (zone **C**).

REMOTE ENGINE START-UP



When fitted, this function can be used to program the engine to start remotely in order to heat or ventilate the passenger compartment up to 24 hours before the vehicle is used.

Adjust the heating level required (temperature, de-icing) before programming the function. Configuration and programming are done via the multimedia display.

Setting the start time for the function

– Switch on the ignition, then press **1** from the main menu. The **A** screen is displayed;




- select the "ON" button on the "Auto start." line to activate the function;
- set the start time for when you wish to start to use your vehicle by pressing line **2**;
- press on the "up" and "down" arrows to scroll through the hours and minutes until you get the desired time;
- press "OK" to confirm. The **4** marker shows you the time left before the time you wished to use the vehicle;
- press "OK **3**" to confirm and finalise the programming;




- adjust the air-conditioning controls to the desired temperature in the passenger compartment when starting up the engine, then set to de-icing mode (please see Section 2 of the vehicle manual);
- turn off the ignition.

i To activate a programmed remote start-up, you must select a time at least 15 minutes later than the time displayed by the multimedia system.

REMOTE ENGINE START-UP

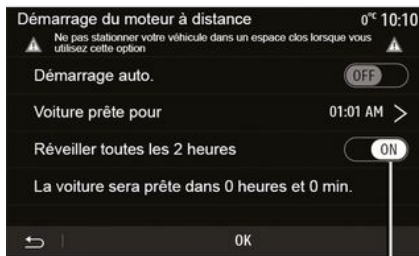

5

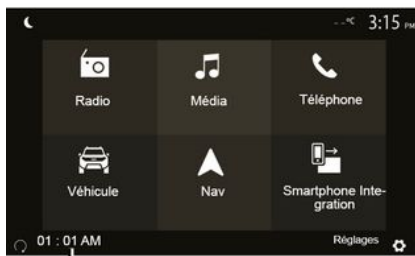

6

6

When locking your vehicle, two flashes will appear then the hazard warning lights and indicator lights switch on for approximately three seconds to indicate that the programming has been taken into account.

The remote engine start-up operates if:

- the lever is in neutral (on vehicles with a manual or sequential gearbox);
- the lever is in position P for vehicles with an automatic gearbox;

- the ignition is switched off;
- all the opening elements (bonnet, doors, boot) are closed and locked when you leave the vehicle.

Note: you must switch off your multimedia system by pressing the "OFF" button before leaving your vehicle in order for the remote engine start-up function to work.

"Activate every 2 hours"

This function enables your vehicle to start automatically every two hours depending on the engine temperature.

To activate this function, press the "ON 5" button.

When this function is activated, the ventilation system will not activate during the first four start-ups, if they occur.


In very cold conditions, the vehicle will start automatically and will stay on for approximately ten minutes before switching off.

If the engine temperature does not require a restart, the vehicle will not start automatically during the first four reactivation times and will return to standby for two hours. The engine will be restarted if the engine temperature is too low.

In all cases, the last start-up will happen.

Approximately fifteen minutes before the programmed time, the engine starts and remains on for about ten minutes.

Note: the mark **6** reminds you of the vehicle start time that you have already set.

 Depending on the vehicle, please ensure that consumers such as the wipers, exterior lights, radio, heated seats, heated steering wheel, etc. are disabled and that all accessories are disconnected before leaving the vehicle.

REMOTE ENGINE START-UP



Special note for vehicles fitted with the "Activate every 2 hours" function.

It is imperative that the vehicle is driven for at least 10 minutes between each use of the function. Risk of engine oil wear.



Do not park the vehicle or run the engine in locations where combustible substances or materials such as grass or leaves can come into contact with the hot exhaust system.



Driver's responsibility when parking or stopping the vehicle

Never leave an animal, child or adult who is not self-sufficient alone in your vehicle, even for a short time. They may put themselves or others at risk, for example by starting the engine, switching on equipment such as the electric windows or by locking the doors etc. Also, in hot and/or sunny weather, please remember that the temperature inside the passenger compartment increases very quickly.

RISK OF DEATH OR SERIOUS INJURY.



In extreme conditions, the remote start-up by programming may not work.



Do not use or programme the remote engine start-up function when:

- the vehicle is in a garage or in a confined space.

Risk of poisoning or suffocation by exhaust gas emissions.

- the vehicle is covered with a protective cover.


Fire hazard.

- the bonnet is open or before it opens.

Risk of burns or serious injury. Depending on the country, the use of the remote starting function or its programming can be prohibited by the legislation and/or the regulations in force. Before using this function, check the legislation and/or the regulations for the country in force.

VEHICLE SETTINGS

Introduction

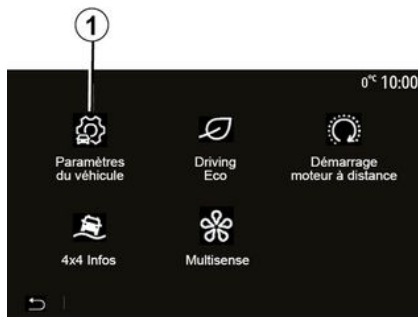

From the main menu, press "Vehicle" then "Vehicle settings" **1** to access this menu.

From this menu you can adjust the settings for driving aids, vehicle access and park assist.

"Driving aids" 2



Depending on the vehicle, from this menu you can activate/deactivate your vehicle's driving aids.

« Active braking »

This function notifies the driver if there is a risk of collision. Select "ON" to activate this function. For further information, please refer to the "Active emergency braking" section in the vehicle user manual.

"Safe distance alert"

This function notifies the driver about the time interval separating them from the vehicle in front, so they can maintain a safe distance between the two vehicles. Select "ON" to activate this

function. For further information, please refer to the "Safe distance alert" section in your vehicle user manual.

"Fatigue detection warning"

This function warns the driver in case of fatigue.

Select "ON" to activate this function. For further information, please refer to the "Fatigue detection warning" section in the vehicle user manual.

« Blind spot »

This function notifies the driver when another vehicle is in their blind spot. Select "ON" to activate this function. For further information, please refer to the "Blind spot warning" section in the vehicle user manual.

Note: the availability of options and settings may vary according to your vehicle and equipment level.

"Overspeed sound alert"

This function detects any speed limit excess and warns the driver by displaying a warning on the instrument panel along with a sound warning. Select "ON" to activate this function.

"Lane departure prevention"

This system notifies the driver when they accidentally cross a continuous line.

VEHICLE SETTINGS



For safety reasons, carry out these operations when the vehicle is stationary.

"Access" 3



Use this menu to activate/deactivate the following options:

- "Unlocking the driver's door";
- « » ;
- « Hands-free key functions » ;
- "Unlocking when approaching";
- « Walk-away locking » ;
- « Silent mode » ;
- "Automatic relocking sound";
- "Internal sequence sound";

- "Rear windscreen wiper in reverse": The rear windscreen wiper is activated as soon as reverse gear is engaged.


Note:

- this option only operates if the windscreen wipers are activated;
- the availability of options and settings may vary according to your vehicle and equipment level.



For safety reasons, carry out these operations when the vehicle is stationary.

"Parking aids" 4

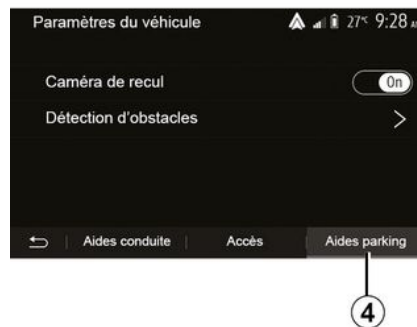


You can use this menu to activate/deactivate the reversing camera and to adjust the settings for obstacle detection during manoeuvres.

For more information, refer to the "Rear-view camera" section.

4X4 INFO

Access the "4x4 Info" menu

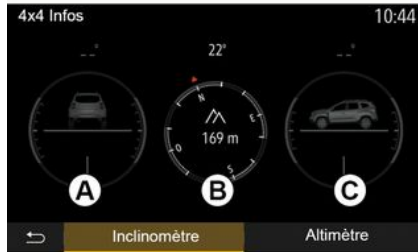

On vehicles fitted with this, from the main menu press "Vehicle" then "4x4 Info".

"Inclinometer" function


The "Inclinometer" function allows you to view:

- wheel camber (drive) in degrees, in real-time (area **A**);
- course, using a compass (area **B**);
- horizontal angle (pitch) in degrees, in real-time (area **C**).

Note:

- the values showing the angle displayed on the screen may differ from reality by one to three degrees;

- the display is refreshed every second approximately.

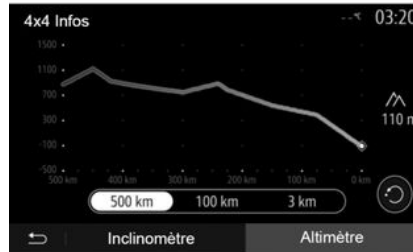

"Altimeter" function

The "Altimeter" function allows:

- estimation of the vehicle's altitude;
- display of past and future gradients.

Note:

- the gradients to be calculated according to your GPS position,
- your GPS position to be refreshed approximately every second.

SYSTEM SETTINGS

Audio settings

Please refer to the section on "Audio settings".

Display settings

« Brightness »

You can set the brightness of the screen to your liking. You have the option of three modes:

- « Low » ;
- « » ;
- « ».

"Day/Night Mode"

To improve the visibility of the navigation screen between day and night, you can change the combination of the colours of the map.

- "Auto": the map screen is displayed by GPS. The switch to daytime or night-time running lights is automatic, depending on whether the headlights are on.
- "Day": the map screen is always displayed with bright colours.
- "Night": the map screen is always displayed using darker colours.

"CLIM. Info"

This function activates/deactivates the display of air conditioning information when adjusting settings.

Devices

Refer to the section entitled "Pairing/unpairing Bluetooth® devices".

System setting



« Language »

This function allows you to change the language used in the system and voice guidance language.

To change the language, select the desired language and confirm your choice by pressing "OK".

"Clock "

Use this function to set the time display ("12" or "24" hour clock).

Note: in versions with navigation, the time is set automatically by the GPS if

the map of the country you are in is installed. In versions without navigation, the time can only be set manually.

To change the time manually, press "Clock/Units" and then select "Setting the time".

« Units »

This function allows you to set the unit of distance displayed on your multimedia system. You can change the unit between the "km" and "mils".

Note: the settings for your multimedia system do not affect your vehicle's instrument panel display. For further information on the instrument panel display settings, please see the vehicle user manual.

"Factory Settings"

This function allows you to reset various settings to the default settings.

- All: resets all the settings to their "Default settings".
- Phone: resets all the settings related to the phone.
- Navigation: resets all the settings related to navigation.
- Audio/Media/Radio/System: resets all the settings related to Audio/Media/Radio.

« Navigation »

This function enables you to activate or deactivate the system navigation.


SYSTEM SETTINGS

"System version"

This function allows you to check the version of system.

UPDATING THE SYSTEM

Updating the multimedia system without maps

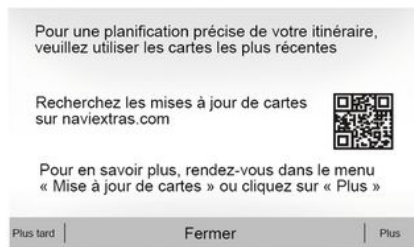

In the case of vehicles not fitted with a navigation system, please consult an approved dealer.

Update your multimedia system and map



Note: check if your systems are already up to date to avoid starting a procedure unnecessarily.

To update your multimedia system and its maps, you will need a USB flash drive and a computer connected to the Internet.

Use your computer to download updates from the Internet to the USB flash drive, then install the updates from the USB flash drive on your vehicle's multimedia system.

If the multimedia system software is not up to date, the Toolbox software will offer a system update before the

map is updated. The system and map cannot be updated at the same time. The process must be repeated for each update.

You will need to proceed as follows:

- saving the system on a USB key;
- install the Toolbox software on your computer;
- downloading products from the Toolbox to the USB key;
- Updating the multimedia system or map from the USB flash drive.

Follow the steps described below in sequence.

Saving the system on a USB key

To save your multimedia system in your user profile, first connect an empty USB flash drive to the multimedia system to create a multimedia system imprint on the USB flash drive.

Note:

- to insert the USB flash drive in your multimedia system, refer to the information on "Inserting the USB flash drive" in the "Navigation system" section;
- the USB flash drive is not provided with the system;
- the USB flash drive in use must be FAT32 and formatted and have a minimum capacity of 4 GB and a maximum capacity of 32 GB;


UPDATING THE SYSTEM

- to save the system data to the USB flash drive, start the vehicle and do not switch off the engine while the data are loading;
- Do not use any of the multimedia system functions during the procedure.



System updates must be performed while the engine is running. Electric vehicles must be charging or with the engine running (READY warning light on).

7

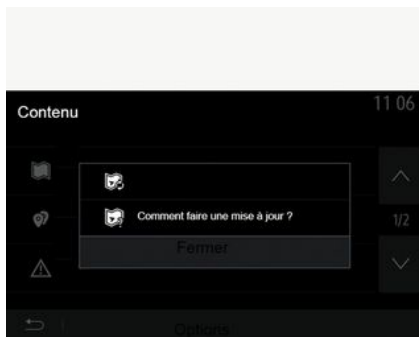

To save the system imprint to the USB flash drive, you must:

- plug your USB flash drive into the USB socket on your multimedia system;
- from the main menu, select the Navigation menu;
- select the "" menu;
- select the "Map update " menu from the second page of the "" menu;
- press the "" button at the bottom of the screen;
- select the "Update" function on your multimedia system screen.

This installs an imprint of your navigation system on the USB key which will be used by the Toolbox to save your system in your user profile and to let the Toolbox determine which updates are available for your navigation system.

When the process of data recording is finished, you may remove the USB key from the multimedia system.

Install the Toolbox software on your computer

Install Naviextras Toolbox in a few clicks on your computer. The Toolbox can be downloaded from the manufacturer's website.

Go to the website and click "Register" in the "Welcome Guest user" area at the top of the screen. Once your account has been created and saved, fill

in the information requested (vehicle model, type of on-board multimedia system etc.) then download the software.

After downloading the software, start the installation.

Follow the instructions shown on the screen.



The screens shown in the user manual are for illustration only.

Downloading products from the Toolbox to the USB key



UPDATING THE SYSTEM

Connecting to the Toolbox

Run the Naviextras Toolbox software and make sure your computer is connected to the Internet.

When you start Toolbox on your computer, insert the USB flash drive containing the imprint of your multimedia system. Once the software has recognised the USB flash drive, two options are offered: "Login" and "Register".

If you are not registered on the Naviextras.com website, you can do so from Toolbox by clicking "Register" on the login page. Follow the instructions shown on the screen.

If your subscription allows it, and if Toolbox finds your system on the list of supported systems, the welcome screen appears to enable you to connect to your Naviextras account.

Once connected to your Naviextras Toolbox account, and with your USB flash drive connected to your computer, you can obtain free or paid apps, services and content by selecting those you wish to install in your multimedia system from the "Catalogue" menu on the menu bar on the left hand side of the Toolbox screen.



In certain countries it is illegal to download and activate the warning areas and this may lead to prosecution.

Updates from the Toolbox to the USB key

Click on Update or "Purchase content" in the menu bar on the left-hand side of the screenToolbox.

The updates menu opens a screen showing all available updates, including:

- items that you have purchased but not yet installed (updates or extras);
- free updates and extras that you added to the installation file from the catalogue;
- system updates (if a newer version is available);
- special free updates.

The list shows all available updates by region in a list and on a world map.

By default, all items belonging to all regions are selected for installation. If you decide to skip a region for now, uncheck the checkbox at the beginning of its table row. After reviewing the table, click "Install" at the bottom of the screen to start the installation process.

The Toolbox starts to download and install the selected updates. Please wait until you see the message indicating the update has finished.

Note: the download time for the app varies depending on the size of the app and on mobile network reception quality.



The Toolbox warns you if the selected items exceed the maximum capacity of the multimedia system. In this case, you can select which items can be installed or removed in the system so that it does not exceed the storage limit. Even if items are removed in the system, you still have ownership of items and can install them later for free.



Please neither remove the USB key from the system, nor shut the system down while update is in progress.

UPDATING THE SYSTEM



In certain countries it is illegal to download and activate the speed camera warnings and this could lead to prosecution.

Updating the system and map

When the installation process is completed, the USB key can be removed from the computer. Connect the USB key to the USB port of the vehicle multimedia system.

Note:

- to update maps, start the vehicle and do not switch off the engine while data is loading. When the multimedia system is turned on, it automatically identifies the available updates on the USB key, and offers to update the system or map from the updates found on the USB key. Do not switch off your multimedia system while the update is being installed;
- Downloading and installing a system update is only possible if there is a newer version available;
- the functions provided by the multimedia system depend on the model and equipment level of your vehicle.

A



The **A** screen is displayed automatically once the USB flash drive is connected:

- press **1** to run the update;
- press **2** to go back to previous screen.

When you press the button **1**, the update procedure is launched. Do not use any of the system functions during the update procedure.

When the update is completed, the multimedia system restarts with all new and up-to-date functionality.



The multimedia system might restart automatically during the update process. Please wait for the radio screen to be displayed.



If the update is accidentally interrupted, restart the process from the beginning.

Licence

To obtain the GPL, LGPL, MPL and other open source licence source codes in this product, please visit the dedicated website.

As well as the source code, all the terms of the licence, warranty exclusions and copyright details are available for download.

The dedicated site will also provide you with the open source code on a CD-ROM for a fee to cover distribution costs (such as media, despatch and handling costs) on request by email.

This offer is valid for three years as of the date on which you purchased the product.

Latest map guarantee

UPDATING THE SYSTEM

Once your new vehicle has been delivered, you will have a maximum of 90 days in which to update the map for free. Once this time has elapsed, you will need to pay for updates.

When navigation is started, the multimedia system offers to update your map. This reminder appears twice a year for seven years. You can:

- select "Later", and the reminder will appear the next time Navigation is activated;
- select "Close" and the reminder will no longer appear;
- select "More" and the system displays the "Map update" menu.

OPERATING FAULTS

System

SYSTEM		
Description	Causes	Solutions
No image is displayed.	The screen is on standby.	Ensure that the screen is not on standby.
	The system is in protection mode (Safety mode), it: – does not switch on; – has stopped; – does not start.	The interior temperature of the vehicle is too low or too high. A message appears on the screen: "System temperature is high." If the multimedia system does not restart, contact an approved dealer.
	The vehicle is switched off.	Restart your vehicle.
No sound can be heard.	The volume is set to minimum or the "mute" function is activated.	Increase the volume or deactivate the "mute" function.
	The selected system source is not correct.	Check the selected system source and make sure the output source is the multimedia system.
No sound comes from the left, right, front or rear speakers.	The balance or fader settings are incorrect.	Adjust the sound balance or fader correctly.

7

OPERATING FAULTS

SYSTEM		
Description	Causes	Solutions
The displayed time is not correct.	The time setting is set to "Auto" and the system is no longer receiving a GPS signal.	With "Navigation": drive your vehicle until a GPS signal is received.
		Without "Navigation": see the section entitled "System settings" to adjust the time.
Certain items on the menu are not available.	Some functions are not available while the vehicle is moving.	

OPERATING FAULTS

Navigation

NAVIGATION		
Description	Causes	Solutions
No sound can be heard.	The volume on the "Nav" menu is muted or set to minimum.	Increase the volume ("" in the "Nav" menu) or deactivate the mute function. The volume in GPS mode can be adjusted during voice guidance.
The location of the vehicle on the screen does not correspond to its actual location.	Incorrect positioning of the vehicle caused by GPS reception.	Move the vehicle until reception of the GPS signal is improved.
	The multimedia system card version is obsolete.	Update the multimedia system card. For further information, please refer to the section on "Navigation settings".
The directions on the screen do not correspond to the actual road.	The version of system is out of date.	Obtain the latest version of the system. For more information, please see the section on "Updating the system".
Certain items on the menu are not available.	Depending on the current command, some items will be unavailable.	
Voice guidance is unavailable.	The navigation system does not take account of the intersection or voice guidance is deactivated.	Increase the volume. Ensure voice guidance is activated.

OPERATING FAULTS

NAVIGATION		
Description	Causes	Solutions
The directions of the voice guidance do not correspond to your exact location.	The voice guidance may vary according to the environment.	Drive according to the actual conditions.
The suggested route does not start or end at the required destination.	The destination is not yet recognised by the system.	Enter a road near to the required destination.
		Update the multimedia system card. For further information, please refer to the section on "Navigation settings".

OPERATING FAULTS

Phone

PHONE		
Description	Causes	Solutions
No sounds or ringtone can be heard.	<p>The mobile phone is not connected to the system.</p> <p>The volume is set to minimum or the "mute" function is activated.</p>	<p>Check that the mobile phone is switched on or connected to the system.</p> <p>For more information, please refer to "Auxiliary audio sources".</p> <p>Increase the ringtone volume or deactivate the "mute" function.</p> <p>Check the selected system source and make sure the output source is the multimedia system.</p> <p>For more information, please refer to "Pairing, unpairing Bluetooth devices".</p>
Impossible to make a call.	<p>The mobile phone is not connected to the system.</p> <p>The phone has been locked.</p>	<p>Check that the mobile phone is switched on or connected to the system.</p> <p>Unlock the phone.</p>
	<p>The multimedia system has encountered an operational problem.</p>	<p>Restart the multimedia system by pressing and holding the "On/Off" button until the screen turns off.</p> <p>For further information, please refer to the "On/Off" section.</p>

7

OPERATING FAULTS

PHONE		
Description	Causes	Solutions
My contact list is not displayed.	There are too many contacts.	Wait for the synchronisation to end.
	Access to the phone directory is not permitted.	Check that access to the phonebook is authorised from the vehicle's multimedia system. For more information, please refer to the "Phonebook" section.

OPERATING FAULTS

Media

MEDIA		
Description	Causes	Solutions
No sound can be heard.	The volume is set to minimum or the "mute" function is activated.	Increase the volume or deactivate the "mute" function.
	The audio source is not switched on or connected to the system.	Check the selected system source and make sure the output source is the multimedia system. For more information, please refer to the section on "Auxiliary audio sources".
No external audio source (MP3 player, portable audio player, USB drive, phone, etc.) is recognised by the multimedia system.	Several audio sources were disconnected during operation.	Restart the multimedia system by pressing and holding the "On/Off" button until the screen turns off. For further information, please refer to the "On/Off" section.

7

OPERATING FAULTS

MEDIA		
Description	Causes	Solutions
Android Auto™/CarPlay™ does not start on the multimedia system.	Android Auto™/CarPlay™ is not configured correctly on your smartphone.	Visit your smartphone manufacturer's website to find out the technical specifications.
	Your smartphone is not compatible with the WIFI connection to the multimedia system.	
	The USB cable is not compatible with data transfer.	Use a USB cable recommended by the telephone manufacturer for correct functioning of the application.
	The audio source is no longer recognised by the multimedia system during operation.	Restart the multimedia system by pressing and holding the "On/Off" button until the screen turns off. For further information, please refer to the "On/Off" section.

OPERATING FAULTS

MEDIA		
Description	Causes	Solutions
Audio source operation fault (voice recognition not enabled with SIRI/CarPlay™/Android Auto™, MP3 player, portable audio player, phone, etc.).	The audio source is no longer recognised by the multimedia system during operation.	Restart the multimedia system by pressing and holding the "On/Off" button until the screen turns off. For further information, please refer to the "On/Off" section.
	The USB cable is not compatible with data transfer.	Use a USB cable recommended by the telephone manufacturer for correct functioning of the application.
Android Auto™/CarPlay™ operation fault.	Phone system, Android Auto™, CarPlay™ or application update interfering with the Android Auto™/CarPlay™ replication function.	Downgrade to the previous version or refer to the Android Auto™/CarPlay™ settings for your smartphone brand.
Operational fault with geo-tracking applications.	The network is unavailable. Geo-tracking is not activated on your phone.	Find a location with a strong signal reception. Activate geo-tracking on your telephone.
Android Auto™ WIFI operating fault.	Your smartphone may not be compatible with the Android Auto™ wireless replication function.	Check whether your smartphone is compatible with the Android Auto™ wireless replication function.
Android Auto™/CarPlay™ WIFI operating fault.	The "WIFI" function is not activated on the multimedia system.	Activate the "WIFI" function from the multimedia system menu.

7

OPERATING FAULTS

MEDIA		
Description	Causes	Solutions
Android Auto™/ CarPlay™ WIFI operating fault.	The "WIFI" country is not configured on the correct channel of the multimedia system.	Configure the country via the "WIFI" function in the multimedia system menu.
Android Auto™/ CarPlay™ WIFI operating fault. "Connection fault" message.	The "Connection fault" message may appear for certain smartphones when switched off, connected via WIFI or in native app mode (Radio, Navigation, etc.).	No effect other than the message appearing inadvertently. No solution (smartphone fault) except leaving the smartphone switched on or in Android Auto™/CarPlay™ mode.
Problem playing a video.	The video format is not readable or compatible with the vehicle's multimedia system.	Check the video format. For further information, please refer to the "Video" section.

ALPHABETICAL INDEX

Symbols

"Destination" menu, [20](#)

4x4 info, [88](#)

A

Address book, [41](#)

Android Auto™, Carplay™, [69](#)

Answer a call, [7](#), [61](#)

Audio settings: radio settings, [7](#)

Auxiliary source, [52](#)

B

Bass, [55](#)

Bluetooth®, [56](#)

C

Calling, [61](#)

Call log, [61](#)

Camera: multi-view camera, [78](#)

Communication volume, [19](#)

Configuration, [34](#)

Controls, [7](#), [17](#)

D

Destination, [20](#), [34](#), [41](#)

Detailed route, [20](#), [34](#)

Dialling, [61](#)

Dial number, [61](#)

Disconnect a phone, [59](#)

Diversion, [26](#), [34](#)

drive USB, [91](#)

E

ECO driving, [82](#)

End a call, [7](#)

F

Favourites: add, [20](#)

Favourites: delete, [41](#)

Fuel consumption, [82](#)

Fuel economy, [82](#)

Functions, [4](#)

G

GPS : receiver, [26](#), [33](#)

Guidance: map, [34](#)

Guidance: voice, [7](#), [34](#)

L

LIST/LIST mode, [43](#)

M

Map: display, [7](#), [40](#)

Map: settings, [40](#)

Map icons, [30](#)

ALPHABETICAL INDEX

Media, [7](#)
MEMO mode, [43](#)
Menu, [7](#)
MP3, [52](#)
Multifunction screen, [7](#)
Multi-Sense, [80](#)
Mute, [19](#)

N

Navigation settings: route settings, [20](#)
Numerical keypad, [17](#)

O

Operating faults, [15](#), [96](#)

P

Pairing a phone, [56](#)
Phone Ringer Vol, [55](#)
POI, [20](#), [30](#), [40](#)
Point of Interest, [20](#), [30](#), [40](#)

R

Radio, [43](#)
RadioSettings, [7](#)
Radio station, [43](#)
Receiving a call, [61](#)
Remote engine start-up, [4](#)
Reversing camera, [75](#)

S

Screen: navigation displays, [34](#)
Screen: navigation screen, [34](#)
Screen: settings, [40](#)
Screen: standby, [7](#), [15](#)
Selecting: track, [52](#)
Settings, [7](#), [26](#), [43](#), [89](#)
Settings: audio, [55](#)
Settings: front/rear sound balance, [55](#)
Settings: left/right sound balance, [55](#)
Source: audio, [7](#)
Special destination: address in favourites, [20](#)
Steering column control, [43](#)
Steering wheel controls and panels, [7](#)
Step, [34](#)
Store a radio station, [43](#)
Switching off, [15](#)
Switching on, [15](#)
System: updating, [91](#)

T

Traffic information, [4](#), [20](#), [26](#), [43](#)
Treble, [55](#)

U

Unpairing a telephone, [56](#)
USB, [33](#), [91](#)
USB: USB port, [33](#)

ALPHABETICAL INDEX

USB socket, [4](#), [7](#), [52](#), [91](#)

V

Vehicle location, [30](#)

Voice controls, [66](#)

Voice recognition, [7](#), [66](#), [69](#)

Volume, [7](#), [19](#)

Volume: adapt to speed, [55](#)

W

Waveband, [43](#)

Wireless charger, [64](#)

Wireless charger: charging area, [64](#)



RENAULT S.A.S. SOCIÉTÉ PAR ACTIONS SIMPLIFIÉE / 122-122 BIS, AVENUE DU GENERAL LECLERO 92100 BOULOGNE-BILLAN
COURT R.C.S. NANTERRE 780 129 987 — SIRET 780 129 987 03591 / renaultgroup.com

NW 1412-9 - 77 11 416 437 - 05/2024 - Edition anglaise



7711416437

