

# Radio Connect R&GO

Ref 984508107R / édition ENG  
NX 1107-9 - 09/2018

# Contents

User precautions . . . . .	GB.2
General description . . . . .	GB.4
Introduction to the controls . . . . .	GB.6
Operation . . . . .	GB.15
Using voice recognition . . . . .	GB.16
Listen to the radio . . . . .	GB.18
Listening to a CD/MP3 player . . . . .	GB.21
Auxiliary audio sources . . . . .	GB.24
Pairing/unpairing a phone . . . . .	GB.27
Connecting/disconnecting a phone . . . . .	GB.30
Making/receiving a call . . . . .	GB.33
System settings . . . . .	GB.36
R & GO: General description . . . . .	GB.39
R & GO: Navigation function . . . . .	GB.45
R & GO: Multimedia function . . . . .	GB.48
R & GO: Vehicle function . . . . .	GB.51
R & GO: Telephone function . . . . .	GB.53
R & GO: Calendar function . . . . .	GB.55
R & GO: Adjusting settings . . . . .	GB.56
Operating faults . . . . .	GB.58

Translated from French. Copying or translation, in part or in full, is forbidden unless prior written permission has been obtained from the vehicle manufacturer.

## USER PRECAUTIONS (1/2)

It is essential to follow the precautions below when using the system, both in the interest of safety and to prevent material damage. You must always comply with the laws of the country in which you are travelling.



### **Precautions when operating the audio system**

- Operate the controls (on the dash or near the steering wheel) and read the information on the screen only when road conditions allow.
- Set the volume to a reasonable level so that outside noise can be heard.

### **Precautions concerning the equipment**

- Do not attempt to dismantle or modify the system, as there is a risk of damage to equipment and fire.
- Contact a representative of the manufacturer in the event of malfunction and for all operations involving disassembly.
- Do not insert foreign objects, or damaged or soiled CDCD MP3s into the player.
- Only use 12 cm diameter circular CDCD MP3s.
- When handling discs, hold them by the inner or outer edges, without touching the non-printed face of the CDCD MP3.
- Do not stick paper to the CDCD MP3.
- After prolonged use, remove the CD CD MP3 from the player with care as it may be hot.
- Never expose CDs/CD MP3s to heat or direct sunlight.
- Do not use products containing alcohol and/or spray fluids on the area.

### **Precautions when using the phone**

- There are laws which govern the use of phones in vehicles. They do not necessarily authorise the use of hands-free phone systems under all driving conditions: drivers must be in control of their vehicles at all times.
- Using a phone whilst driving is a significant distraction and risk factor during all stages of use (dialling, communicating, searching for a number in the handset memory, etc.).

### **Maintenance of the fascia**

- Use a soft cloth and, if necessary, a small amount of soapy water. Rinse with a soft, slightly damp cloth, then dry with a soft, dry cloth.
- Do not press on the display on the front panel, and do not use any alcohol-based products.

## USER PRECAUTIONS (2/2)

The description of the models given in this manual is based on the specifications at the time of writing. **This manual covers all existing functions for the models described. Whether or not they are fitted depends on the equipment model, options selected and the country where they are sold. This manual may also contain information about functions to be introduced later in the model year.**

Depending on the make and model of your telephone, some functions may be partially or completely incompatible with your vehicle's multimedia system.

Throughout the manual, the Approved Dealer is that of the vehicle manufacturer.

## GENERAL DESCRIPTION (1/2)

### Introduction

The audio system has the following functions:

- FM (RDS) and AM radio;
- terrestrial digital radio (DR);
- CD/CD MP3 player;
- management of auxiliary audio sources;
- Bluetooth® hands-free phone system.

### Radio and CD/CD MP3 functions

The radio allows you to listen to radio stations and play CDs in different audio formats.

The radio stations are classed by wavelength: FM (frequency modulation) and AM (amplitude modulation).

The DR system (DAB, DAB+, T-DMB format) provides better sound reproduction.

The RDS system makes it possible to display the name of some stations or messages sent by FM stations to be displayed:

- traffic bulletins (TA);
- emergency messages.

### Auxiliary audio function

You can listen to your personal stereo directly through your vehicle's speakers. There are several ways of connecting your personal stereo, depending on the type of device you have:

- USB socket;
- Jack socket;
- Bluetooth® connection.

For more information on the list of compatible devices, contact an authorised dealer.

## GENERAL DESCRIPTION (2/2)

### Hands-free phone function

The Bluetooth® hands-free system provides the following features without having to handle your phone:

- Pair up to 5 phones;
- send/receive/reject a call;
- transfer the phone's or SIM card's contact list (depending on the phone);
- view the system's call log (depending on the phone);
- dial voicemail.



### Bluetooth® function

This function enables the audio system to recognise and control your portable audio player or mobile phone using Bluetooth® pairing.

You can activate/deactivate the Bluetooth® function in the “Bluetooth” menu:



- display the settings menu by pressing **9**;
- select «Bluetooth» by turning and pressing **5**;
- select «ON»/«Off».




Your hands-free phone system is only intended to facilitate communication by reducing the risk factors, without removing them completely. You must always comply with the laws of the country in which you are travelling.

## INTRODUCTION TO THE CONTROLS (1/9)

### System panels

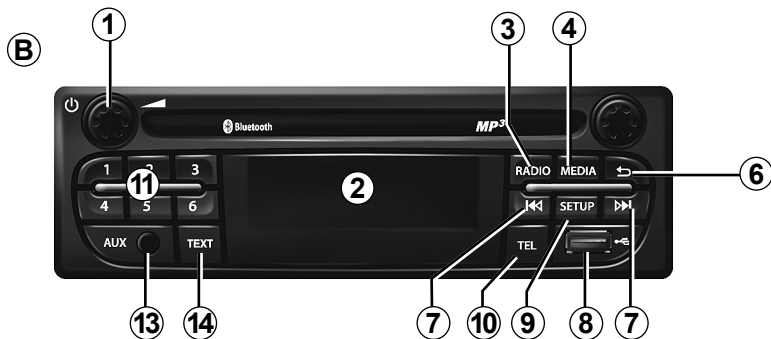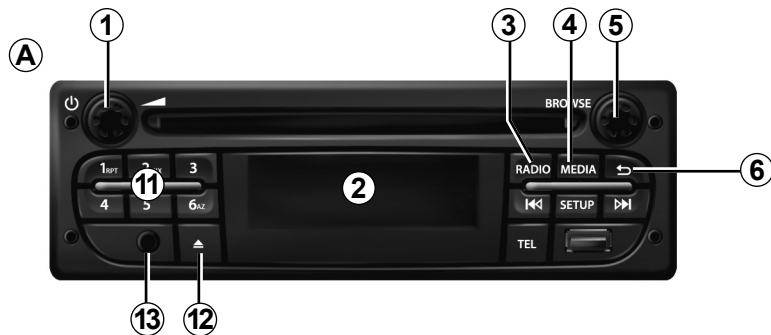


### Steering column controls

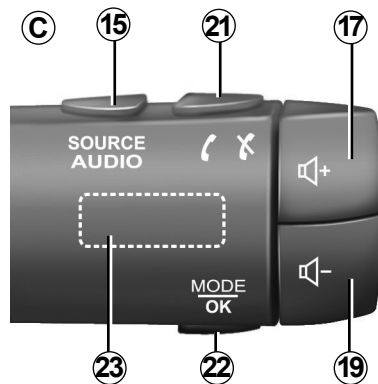


INTRODUCTION TO THE CONTROLS (2/9)

 System panels

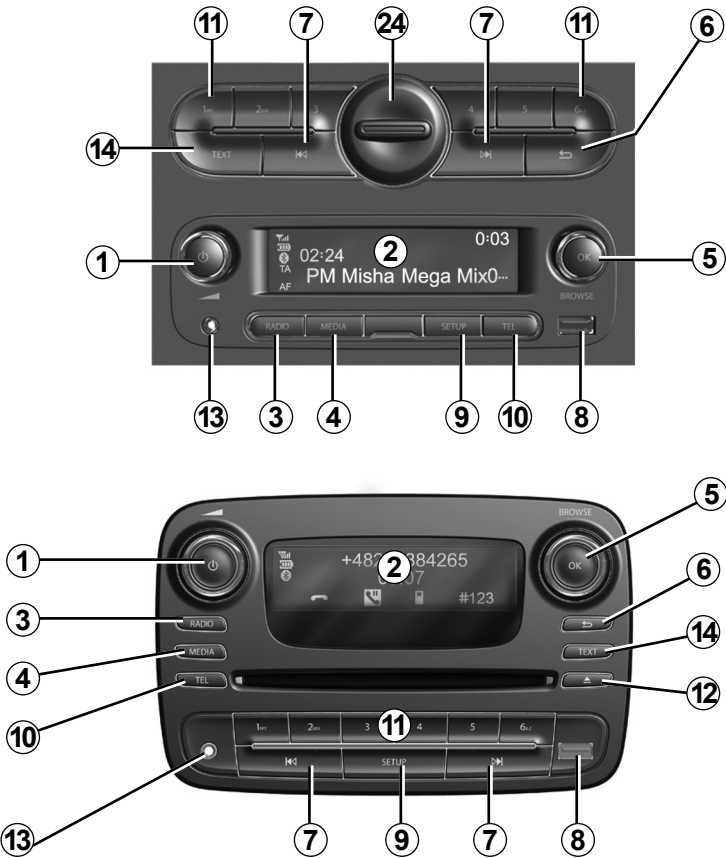


Steering column controls

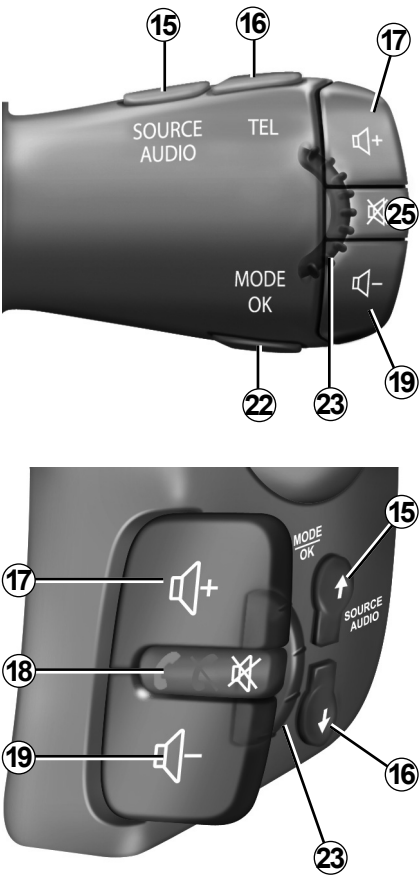 




## INTRODUCTION TO THE CONTROLS (3/9)
 
### System panels

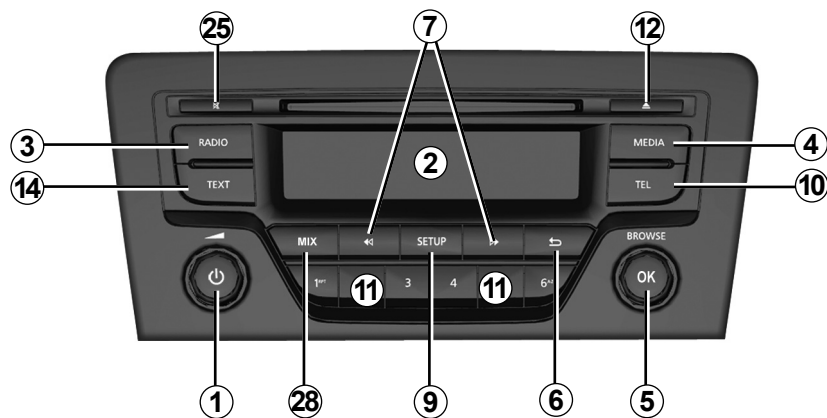


### Steering column controls

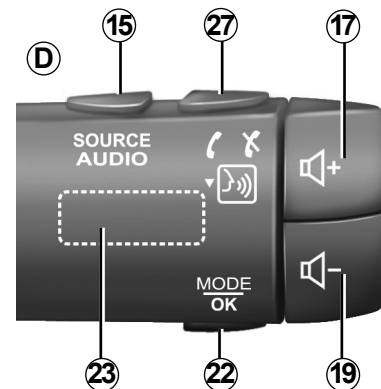 


## INTRODUCTION TO THE CONTROLS (4/9)

 
### System panel

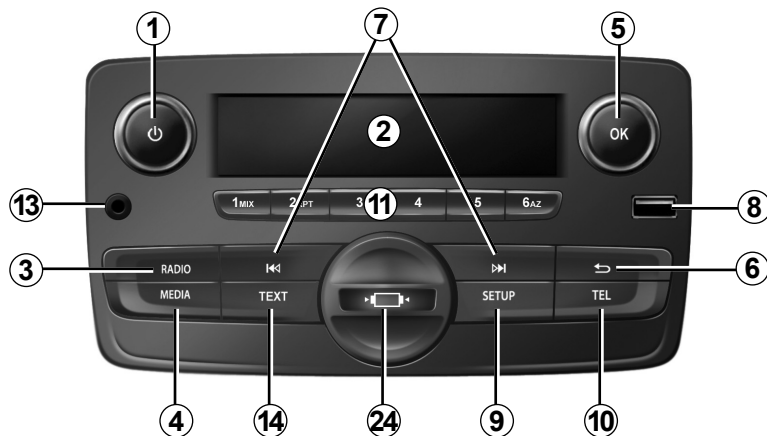

### Steering wheel controls

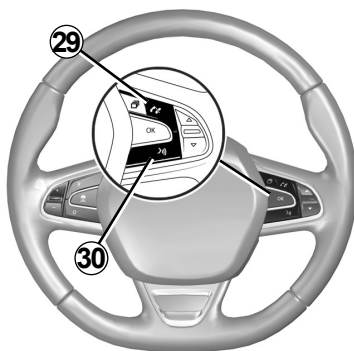 

### Steering wheel controls

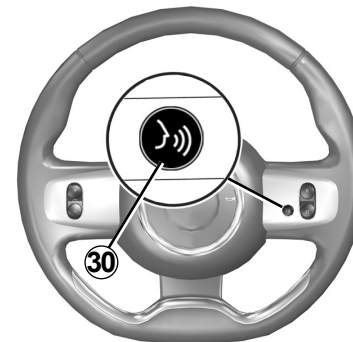 

## INTRODUCTION TO THE CONTROLS (5/9)

	AUDIO function	TELEPHONE function
1	– Press: on/off. – Rotation: adjust the volume of the audio source currently in use.	
2	Information display.	
3	– Short press: choose the radio source and the waveband: FM1 → FM2 → DR1 → DR2 → AM. – Long press: updating of the list of radio stations.	
4	Select the desired audio source (if connected): CD / CD MP3 → iPod1/USB1 → iPod2/USB2 → device Bluetooth® → AUX (Jack socket).	
5	– Press: confirm an action. – Rotation: navigate through the menus or lists.	
6	– Return to previous screen/previous level when browsing through menus; – Cancel current action.	
7	– Short press: change tracks (CD/CD MP3, on some portable audio players) or change radio frequencies. – Maintained press: fast forward/rewind a CD/CD MP3 track on some audio players, or scroll through the radio stations until the button is released.	
8	USB socket for iPod® or auxiliary audio sources.	
9	– Short press: access the custom settings menu. – Press and hold: activates the “Text” function (only for front panels <b>A</b> and <b>B</b> ).	

## INTRODUCTION TO THE CONTROLS (6/9)

	AUDIO function	TELEPHONE function
10		<ul style="list-style-type: none"> <li>– Short press: access the «Phone» menu.</li> <li>– Long press: redial the last number.</li> </ul>
		When receiving a call: <ul style="list-style-type: none"> <li>– short press: answer the call;</li> <li>– long press: reject the call.</li> </ul>
		During a call: end the call in progress.
11	Short press: recall a pre-programmed station. Press and hold: store a radio station.	
12	Eject a CD/CD MP3.	
13	Auxiliary input.	
14	Activate the “Text” function.	
15	Select the audio source: FM1 → FM2 → DR1 → DR2 → AM → CD / CD MP3 → iPod1/USB1 → iPod2/USB2 → Bluetooth® Device → AUX (jack input).	
16		<ul style="list-style-type: none"> <li>– Short press: access the “Phone” menu.</li> <li>– Long press: redial the last number.</li> </ul>
17	Increase the volume of the audio source currently in use.	
18	<ul style="list-style-type: none"> <li>– Mute the radio source currently playing;</li> <li>– mute the sound and pause the playback of the CD/CD MP3, USB, iPod® or Bluetooth® device.</li> </ul>	Long press: redial the last number.  When receiving a call: <ul style="list-style-type: none"> <li>– short press: answer the call;</li> <li>– long press: reject the call.</li> </ul> During a call: end the call in progress.

## INTRODUCTION TO THE CONTROLS (7/9)

	AUDIO function	TELEPHONE function
<b>19</b>	Decrease the volume of the audio source currently in use.	
<b>17 + 19</b>	(Only for controls <b>C</b> and <b>D</b> ) – Mute the radio source currently playing; – mute the sound and pause the playback of the CD/CD MP3, USB, iPod® or Bluetooth® device.	
<b>20</b>	Rotate: – radio: browse through the radio list; – media: previous/next track.	Rotate: – «Phone» menu: browse through the list.
	– Short press: confirm an action. Long press: – return to previous screen/previous level when browsing through menus; – cancel current action.	– Short press: confirm an action. Long press: – return to previous screen/previous level when browsing through menus; – cancel current action.
<b>21</b>		– Short press: access the «Phone» menu. – Long press: redial the last number.
		When receiving a call: – short press: answer the call; – long press: reject the call.
		During a call: end the call in progress.

## INTRODUCTION TO THE CONTROLS (8/9)

	AUDIO function	TELEPHONE function
22	<ul style="list-style-type: none"> <li>– Short press: confirm an action.</li> </ul> Long press: <ul style="list-style-type: none"> <li>– return to previous screen/previous level when browsing through menus;</li> <li>– cancel current action.</li> </ul>	<ul style="list-style-type: none"> <li>– Short press: confirm an action.</li> </ul> Long press: <ul style="list-style-type: none"> <li>– return to previous screen/previous level when browsing through menus;</li> <li>– cancel current action.</li> </ul>
23	Rotate: <ul style="list-style-type: none"> <li>– radio: browse through the list of radio stations stored previously;</li> <li>– media: previous/next track.</li> </ul>	Rotate: <ul style="list-style-type: none"> <li>– «Phone» menu: browse through the list.</li> </ul>
24	Remove the phone support cover by turning it counter-clockwise.	
25	<ul style="list-style-type: none"> <li>– Mute the radio source currently playing;</li> <li>– mute the sound and pause the playback of the CD/CD MP3, USB, iPod® or Bluetooth® device.</li> </ul>	
26	Activate/deactivate the automatic search for and playing of traffic information as soon as it is broadcast by certain radio stations in FM or DR mode.	

## INTRODUCTION TO THE CONTROLS (9/9)

	AUDIO function	TELEPHONE function
27		– Short press: access the “Phone” menu.
		When receiving a call: – short press: answer the call; – long press: reject the call.
		During a call: end the call in progress.
	– Long press: activate voice recognition. – Short press: deactivate voice recognition.	
28	To activate random playback of all the tracks on the CD/CD MP3.	
29		When receiving a call: – short press: answer the call; – long press: reject the call.
		During a call: end the call in progress.
30	– Short press: activate voice recognition. – Short press: deactivate voice recognition.	

## OPERATION

### On and off

Briefly press control knob **1** on the audio system front panel to switch on your system.

The audio system can be used with the vehicle ignition off. It will operate for twenty minutes. Press control knob **1** on the audio system front panel to operate the system for a further twenty minutes.

To switch off the audio system, briefly press control knob **1** on the audio system front panel.

### CHOOSING THE SOURCE

To scroll through the various audio sources, press button **4** repeatedly on the audio system front panel or **15** on the steering column control. The audio sources scroll in the following order: CD/CD MP3 → iPod1/USB1 → iPod2/USB2 → BT Streaming (Bluetooth®) → AUX.

**Note:** To display the telephone menu, press button **10** on the audio system front panel or **16**, **21** or **27** on the steering column control.

When you insert a new medium (CD/CD MP3, USB, AUX) while the radio is on, the source will switch automatically and begin to play.

You may also select the radio source by pressing button **3** on the audio system front panel or **15** on the steering column control. Repeatedly pressing button **3** on the audio system front panel scrolls through the wavelengths in the following order: FM1 → FM2 → DR1 → DR2 → AM → FM1 etc.

To change media and radio source, press button **15** on the steering column control.

### VOLUME

Adjust the volume by turning control knob **1** on the audio system front panel or by pressing button **17** or **19** on the steering column control.

The display reads "Volume" followed by the current setting value (from 00 to 31).

### Mute

Briefly press button **18** or **25**, or press **17** and **19** together on the steering column control. The message "MUTE" is displayed on the screen.

Briefly press button **18**, **25**, **17** or **19** on the steering column control again to resume playing the current audio source.

You can also disable the mute function by turning control knob **1** on the audio system front panel.



## USING VOICE RECOGNITION (1/2)


### Voice recognition system

Using a compatible smartphone, your audio system enables you to use the voice recognition system. This makes it possible to control the functions of your smartphone by voice, while keeping your hands on the steering wheel.

**Note:** your smartphone's voice recognition system only enables you to use the functions of your telephone. It does not enable you to interact with the other functions of your audio system such as the radio, the Driving eco<sup>2</sup> etc.

**Note:** when using voice recognition, the language set on your telephone will be the language used by your audio system.

**Note:** If you try to use your vehicle's voice recognition system with a paired smartphone that does not have voice recognition, a message will be displayed on the audio system screen to notify you.

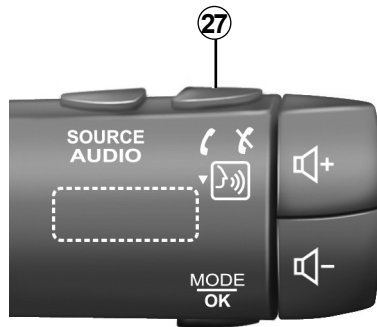

### Using voice recognition with your phone

#### Activation

To activate the voice recognition system, you must:


- get a 3G, 4G or Wifi connection with your smartphone;
- activate the Bluetooth® on your smartphone and make it visible to other devices (please refer to your telephone manual for instructions);



- pair and connect your smartphone to the audio system (please refer to the section on “Pairing, unpairing a telephone”);
- press and hold the **27** button on the steering column control or tap the **30** button on the steering wheel.

An audible signal indicates that voice recognition is activated.


## USING VOICE RECOGNITION (2/2)

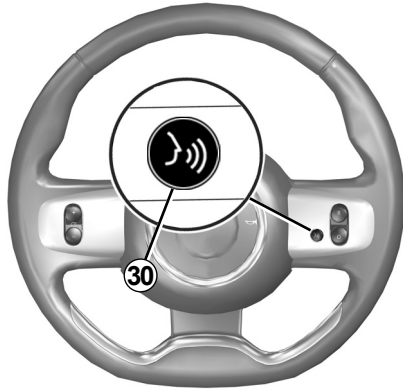

### Deactivation

- Tap button **27** on the steering column control or **30** on the steering wheel to end your voice recognition session.

An audible signal indicates that voice recognition is deactivated.

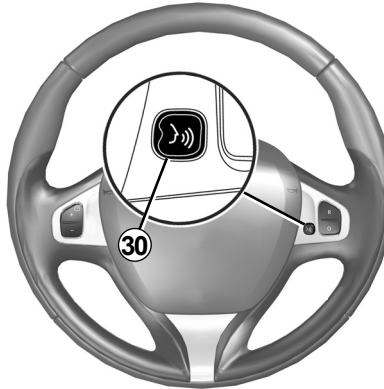

## LISTENING TO THE RADIO (1/3)

### Selecting a waveband

Select the desired waveband (FM1, FM2, DR1, DR2, AM, FM1 etc.) by repeatedly pressing button **3** on the audio system front panel.

### Choose an FM or AM radio station

There are several different ways to select and seek a radio station.

#### Automatic search

This mode performs an automatic scan to search for stations. Press and hold button **7** on the audio system front panel.

When you release button **7** on the audio system front panel, the frequency of the nearest radio is displayed. The radio will continue going up or down the frequencies for as long as you press button **7** on the audio system front panel.

#### Manual search

This mode allows you to find stations manually by scrolling through the frequencies, by pressing button **7** on the audio system front panel.

Press button **7** on the audio system front panel; the frequency increases or decreases.

### Storage of radio stations

This operating mode allows you to listen to your pre-set radio stations.

Select a waveband, then select a radio station using the methods described above.

To store a station, press and hold one of the buttons on the audio system front panel keypad **11** until you hear a beep.

You can save up to six stations per waveband.

To recall a stored station, briefly press one of the buttons on the keypad **11**.

### Choose according to the name of the station (FM / DR)

To select a radio station, turn control knob **5** on the audio system front panel or **20** or **23** on the steering column control.

This list can include up to 100 radio stations with the strongest frequencies in your area.

To get the most recent list of stations, update the radio list (FM or DR). Refer to «Updating the radio list (FM or DR)" in this section.

## LISTENING TO THE RADIO (2/3)

### Radio settings

Display the settings menu by pressing button **9** on the audio system front panel, then select "Radio" by turning and pressing control knob **5** on the panel. The available functions are as follows:

- «TA»;
- «DR Interrupt...»;
- «Ref. FM List»;
- «Ref. DR List».

#### «TA»

When this feature is activated, your audio system allows traffic bulletins to play automatically as new reports are issued by some FM or DR radio stations.

**Note:** This feature is not available for the AM waveband.

Select the information station and then choose whether you want another listening source.

Traffic information is broadcast automatically and has priority over the source being listened to at the time.

To activate or deactivate this feature, refer to the «Radio settings» paragraph under «System settings».

#### «DR Interrupt...» (newscasts)

When this function is activated, it is possible to automatically listen to news as it is broadcast by certain «FM» or «DR» radio stations.

If you then select other sources, when a broadcast of the selected programme type is made, it will interrupt the other sources.

To activate or deactivate this function, please refer to the information on «DR Interrupt...» in the «System settings» section.

#### «Ref. FM List»

This feature allows you to perform an update of all FM stations in your area.

- display the settings menu by pressing button **9** on the audio system front panel, then select "Radio" by turning and pressing control knob **5** on the panel;
- select "Ref. FM List" by turning and pressing control knob **5** on the audio system front panel.

The automatic update of the FM stations in the area starts. The message «Updating FM List» is displayed on the screen.

With the automatic frequency scan finished, the message "FM List updated" is displayed on the screen.

**Note:** if another source is selected, the FM radio list update continues in the background.

To switch from one stored frequency to another, press one of the buttons on the audio system front panel keypad **7**.

**Note:** You can also update the FM radio list by pressing and holding button **3** on the audio system front panel.

## LISTENING TO THE RADIO (3/3)

### «Ref. DR List»

This feature allows you to perform an update of all DR stations in your area.

- Display the settings menu by pressing button **9** on the audio system front panel, then select “Radio” by turning and pressing control knob **5** on the panel;
- select “Ref. DR List” by turning and pressing control knob **5** on the audio system front panel;
- the automatic update of the list of digital terrestrial radio stations in your area begins. The message «Updating DR List» is displayed on the screen.

With the automatic frequency scan finished, the message «DR List updated» is displayed on the screen.

**Note:** You can also update the DR radio list by pressing and holding button **3** on the audio system front panel.

### Selecting a station

Select the desired waveband (FM1, FM2, DR1, DR2 or AM) by repeatedly pressing button **3** on the audio system front panel.

- turn control knob **5** on the audio system front panel or **20** or **23** on the steering column control to scroll through the radio stations in the FM/DR list or the AM radio frequencies;
- press button **7** on the audio system front panel to scroll through the FM/AM frequencies or DR radio stations.

### Display radio text

To display the text menu, briefly press button **14** on the audio system front panel, or press and hold button **9** on the panel. The available functions are as follows:

- «Radiotext»;
- «EPG».

**NB:** If no information is provided, the message “No message” is displayed on the screen.

### Text information «Radiotext» (FM)

Some FM radio stations broadcast text information related to the program being listened to (e.g. the title of a song, artist name).

**NB:** This information is only available for certain radio stations.

### «EPG» (DR) program guide

When this feature is activated, your audio system will display the station's upcoming programs of the day.

**Note:** This information is only available for the selected station's next three time slots.

## LISTENING TO A CD, CD MP3 (1/3)

### Specifications of readable formats

Only files with an CDA/MP3> extension can be played.

If a CD contains both audio CD files and compressed audio files, the compressed audio files will not be recognised.

**Note:** some protected files (copyright) cannot be read.

**Note:** To ensure that folder and file names are easy to read, we recommend that you use names with fewer than 64 characters and avoid the use of special characters.

### CD/CD MP3 maintenance

To protect its readability, never expose a CD CD MP3 to heat or direct sunlight. To clean a CD/CD MP3, use a soft cloth and clean from the centre towards the edge of the CD.

As a general rule, refer to the CD manufacturer's advice concerning maintenance and storage.

**Note:** some scratched or dirty CDs cannot be read.

### Inserting a CD/CD MP3

Refer to the section entitled «Precautions during use».

Check that there is no CD in the player, then insert the CD with the printed side upwards.

### Listening to a CD/CD MP3

When a CD/CD MP3 is inserted (printed surface upward), the audio system automatically switches to CD/CD MP3 source and starts to play the first track.

If the audio system is switched off and the ignition is on, inserting a CD/CD MP3 switches on the audio system and the CD/CD MP3 starts to play. If the ignition is not on, the audio system will not switch on.

If you are listening to the radio and a CD/CD MP3 is in the player, you can choose to listen to the CD/CD MP3 by pressing button **4** on the audio system front panel or **15** on the steering column control. Playback starts as soon as the audio system switches to the CD/CD MP3 source.

### Searching for a track

Briefly press button **7** on the audio system front panel or turn control knob **20** or **23** on the steering column control to change tracks.

### Fast winding

Press and hold button **7** on the audio system front panel to fast forward or rewind.

Playback resumes when the button is released.

## LISTENING TO A CD, CD MP3 (2/3)



### Random playback «Mix»

With a CD/CD MP3 inserted, press button “1” or “2” on the audio system keypad or press button **28** on the audio system front panel to enable random playback (shuffle) of all the tracks on the CD/CD MP3.

The symbol “MIX” appears on the screen. A track is then selected at random. The transition from one track to another takes place randomly.

To disable, press button “1” or “2” on the audio system keypad again or press button **28** on the audio system front panel. The “MIX” indicator light goes out.

Turning off the audio system and ejecting the CD/CD MP3 automatically deactivates the shuffle function.

**Note:** on a CD MP3, random play runs on the folder currently being played. Change folder to run random playback on another folder.

### Repeat «RPT»

This feature allows you to repeat a track.

With a CD/CD MP3 inserted, press button “1” or “2” on the audio system keypad to enable the repeat function. The symbol “RPT” appears on the screen.

To disable, press button “1” or “2” on the keypad again. The “RPT” indicator light goes out.

**Note:** If the shuffle function is activated, enabling the repeat function will deactivate it. The “MIX” indicator light will go out and the “RPT” light will come on.

## LISTENING TO A CD, CD MP3 (3/3)

### Pause

To mute the sound temporarily, press buttons **17** and **19** together or briefly press button **18** or **25** on the steering column control.

This function deactivates if you change the volume or source, or if an automatic newscast comes on.

### Display text (CD-Text or ID3 tag)

Briefly press button **14** or press and hold button **9** on the audio system front panel to scroll through ID3 tag information (artist name, album, time elapsed, track name).

To display all the ID3 tag information on a single page, press and hold button **14** on the audio system front panel.

### Ejecting a CD/CD MP3

To eject a CD/CD MP3 from the player, press button **12** on the audio system front panel.

**Note:** if an ejected disc is not removed within 20 seconds, it will automatically be reinserted into the CD player.



## AUXILIARY AUDIO SOURCES (1/3)

Your audio system has inputs to connect one or more external audio sources (USB key, MP3 player, iPod®, Bluetooth® portable player, etc.).

You have several ways of connecting your player:

- USB connection;
- Jack socket;
- Bluetooth® connection.

**Note:** the auxiliary audio source formats can be MP3, WMA or AAC.

### USB connection;

#### Connection

Connect the iPod® or USB stick to the USB socket.

Once the device is connected, the track will be displayed automatically.

#### Use

- iPod®:

After connecting your iPod®, the menus are accessible from your audio system.

The system keeps the same playlists as on your iPod®.

- USB key:

The audio files will start playing automatically.

To access the hierarchy of your audio source, turn or press control knob **5** on the audio system front panel, or **20** or **25** on the steering column control.

**Note:** random play on a USB key works in the same way as for a CD MP3. Refer to the information on “Random playback Mix” in the section “Listening to a CD/CD MP3”.

**Note:** the repeat function on a USB key works in the same way as for a CD MP3. Please refer to the paragraph on “Repeat” under “Listening to a CD/CD MP3”.

#### Charging using the USB port

Once your portable audio player's USB connector is plugged into the multimedia system USB port, you can charge or recharge the battery during use.

**Note:** some devices do not recharge or maintain battery charge level when they are connected to the USB port on the audio system.

## AUXILIARY AUDIO SOURCES (2/3)

### Jack connection

#### Connection

Using a suitable cable (not provided), connect the Jack socket of the auxiliary input **13** on the audio system front panel to your portable audio player headphones plug (usually a 3.5 mm jack Jack).

**Note:** you cannot select a track directly from your audio system. To select a track, you must do so directly via your portable audio player, when the vehicle is stationary.

#### Use

Just the text “AUX” is displayed on the audio system screen. No artist or track name is visible.

**Note:** To adjust the sensitivity of the Jack, socket, refer to the “System settings” section.

### Bluetooth® audio playback

In order to use a Bluetooth® digital device, you must pair it to the vehicle when it is first used (refer to the information on the “Bluetooth® function” in the “General description” section).

Pairing allows the audio system to recognise and store a Bluetooth® digital device.

**Note:** if your Bluetooth® digital device has telephone and portable audio player functions, pairing one of these functions will automatically pair the other.



Only handle the personal stereo when traffic conditions permit.

Store the portable audio player safely while driving (risk of being thrown in the event of sudden braking or impact).

### Connection

For a device already paired, perform the following steps:

- enable Bluetooth® on the portable audio player and make it visible to other devices (refer to your audio player manual);
- select the Bluetooth® audio source by pressing button **4** on the audio system front panel or button **15** on the steering column control.

## AUXILIARY AUDIO SOURCES (3/3)

### Use

Your portable audio player must be connected to the audio system to enable all its functions to be accessed.

**Note:** no digital device can be connected to the audio system unless it has previously been paired.

Once the Bluetooth® digital portable audio player is connected, you can control it from your audio system.

To pause the audio track, press button **25** or **18**, or press buttons **17** or **19** together on the steering column control (press again to resume play).

Press button **7** on the audio system front panel or turn control knob **20** or **23** on the steering column control to move to the next or previous track.

**Note:** the number of accessible functions varies depending on the type of portable audio player and its compatibility with the audio system.

**Note:** in some cases, you will need to refer to your device's manual to finalise the connection procedure.



Only handle the personal stereo when traffic conditions permit.

Store the portable audio player safely while driving (risk of being thrown in the event of sudden braking or impact).

## PAIRING AND UNPAIRING A TELEPHONE (1/3)

### Bluetooth® connection

To activate the system's Bluetooth® function, press the button **9** on the audio system front panel, select 'Bluetooth' by turning and pressing the knob **5** on the audio system front panel, then select "ON" or "Off".


### Pairing a phone

To use your hands-free system, pair your Bluetooth® phone with your audio system. Check that your audio system and your phone are on, that Bluetooth® is activated on your phone and that its status is set to "visible" (refer to the user guide for your phone).

Pairing enables the audio system to recognise and store a phone.

You can pair up to five phones, but only one can be connected at a time to the audio system.

Pairing can be performed from the audio system and/or from your phone.

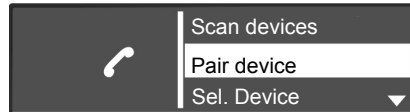

### Pairing a Bluetooth® phone with the audio system from the audio system

This method allows you to make a Bluetooth® search from the audio system.

To pair a phone using this method, perform the following steps:

- display the telephone menu by pressing button **10** on the audio system front panel, or **16**, **21** or **27** on the steering column control;

- select "Scan devices" by turning and pressing control knob **5** on the audio system front panel or **20** or **23** on the steering column control.

The search for Bluetooth® devices in the vicinity begins (this search can take up to sixty seconds.) The message "Searching..." appears on the audio system display.

- Select the telephone that you wish to pair by turning and pressing control knob **5** on the audio system front panel;
- when the message «Connected» is displayed on the audio system screen, the Bluetooth® device is stored automatically and connected to the vehicle.

After sixty seconds, if pairing fails, repeat these steps. Please refer to your telephone's user guide for further information.

## PAIRING AND UNPAIRING A TELEPHONE (2/3)

### Pairing a Bluetooth® telephone with the audio system from your phone

This method allows you to make a Bluetooth® search from your phone.

To pair your phone using this method, perform the following steps:

- display the telephone menu by pressing button **10** on the audio system front panel, or **16, 21** or **27** on the steering column control;
- select “Pair device” by turning and pressing control knob **5** on the audio system front panel or **20** on the steering column control;
- the message “Please re-enter Pin” appears on the system screen and a sixty-second countdown begins.

The audio system is now visible to other Bluetooth® devices for about a minute.

- Search for the audio system indicated under the name “MY CAR” or “R&Go Multimedia” using your phone then select it (refer to the user guide for your phone).

The message “MY CAR connected” or “R&Go Multimedia” appears on your phone to inform you that your audio system is paired and connected with your phone.

If pairing fails, the audio system display returns to the main menu.

If the maximum number of telephones paired with the audio system is reached, you need to unpair an existing telephone before pairing a new one (refer to the information on “Unpairing a telephone” in this section).




For safety reasons, carry out these operations when the vehicle is stationary.



Your hands-free phone system is only intended to facilitate communication by reducing the risk factors, without removing them completely. You must always comply with the laws of the country in which you are travelling.

## PAIRING AND UNPAIRING A TELEPHONE (3/3)

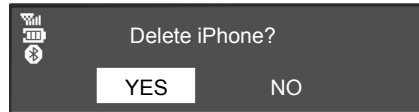

### Unpairing a phone

Unpairing allows a phone to be deleted from the audio system memory.

To unpair and delete your phone from the audio system memory, perform the following steps:

- display the telephone menu by pressing button **10** on the audio system front panel, or **16**, **21** or **27** on the steering column control;

- select the “Del. device” menu by turning and pressing control knob **5** on the audio system front panel or **20** on the steering column control;
- select the phone to be unpaired from the list by turning and pressing control knob **5** on the audio system front panel or **20** on the steering column control;

A message is displayed on the screen of the audio system asking you to confirm and enter your choice.

- turn and press control knob **5** on the audio system front panel or **20** on the steering column control to select “YES”;

**Note:** Unpairing a phone erases all the contacts from the contacts list and the call history in the audio system synchronised with the phone.

## CONNECTING, DISCONNECTING A TELEPHONE (1/3)

### Connecting a paired phone

Your phone must be connected to the hands-free phone system in order to use all its functions.

No phone can be connected to the hands-free phone system if it has not first been paired.

Refer to the paragraph entitled "Pairing a phone" in the "Pairing/unpairing a phone" section.

**Note:** your telephone's Bluetooth® connection must be active and set to "visible".

### Automatic connection

As soon as the vehicle ignition is switched on, the audio system searches for paired telephones in the vicinity.

**Note:** the priority phone is the last to have been connected.

Searching will continue until a paired phone is found (this may take up to five minutes).


**Note:** For more information on compatible phones, contact an authorised dealer or visit the manufacturer's website if available.

### Note:

- you can use automatic telephone connection with the ignition switched on. You may need to activate the automatic Bluetooth® connection function on your hands-free phone system. To do this, refer to your telephone's user manual;
- when reconnecting, and when two paired phones are within range of the hands-free system, the last phone to have been connected will take priority, even if this phone is outside the vehicle but within range of the hands-free system.

**Note:** if a call is already in progress when your hands-free phone system is connected, the phone will automatically be connected and the conversation will switch to the vehicle speakers.

## CONNECTING, DISCONNECTING A TELEPHONE (2/3)

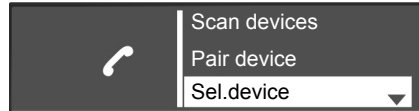

### Manual connection (changing the phone connected)

To display the phone settings menu, press button **10** on the audio system front panel or **16**, **21** or **27** on the steering column control, then select the “Sel. device” menu. The list of phones already paired is displayed. Select the phone that you want to connect from the list and by turning and pressing control knob **5** on the audio system front panel or **20** on the steering column control.

A message informs you that the phone is connected.

**Note:** if a phone is already connected when changing phones in the already paired phone list, the existing connection is automatically disconnected.

### Connection failure

If connection fails, check that:

- your phone is switched on;
- your telephone battery is not flat;
- your phone has been previously paired with the audio system;
- Bluetooth® is now enabled on your phone and on the audio system;
- the phone is configured to accept the audio system's connection request.

**Note:** using your hands-free phone system for prolonged periods will discharge your phone's battery more quickly.



## CONNECTING, DISCONNECTING A TELEPHONE (3/3)



### Disconnect a phone

To disconnect your telephone, you can:

- deactivate your audio system's Bluetooth® function;
- deactivate your phone's Bluetooth® function;
- delete the paired phone via the audio system. Please refer to the information on "Unpairing a telephone" in the "Pairing and unpairing a telephone" section.

If the phone is switched off, the telephone will be disconnected.

A message is then displayed on the audio system screen to confirm that the phone is disconnected.

**Note:** if a call is in progress when the phone is disconnected, the call will automatically be transferred to your phone.

To deactivate your audio system's Bluetooth®, please refer to the information on the "Bluetooth® Function" in the "General Description" section.

To disable your smartphone's Bluetooth®, refer to your phone's user guide.

To unpair and delete the Bluetooth® phone, see the information under "Unpairing a telephone" in the section "Pairing, unpairing a telephone".

## MAKING, RECEIVING A CALL (1/3)

### Calling a contact from the telephone directory

When a phone is paired, its contacts list is automatically downloaded to the audio system.

To display the “Phone” menu, press button **10** on the audio system front panel or **16**, **21** or **27** on the steering column control, then select the “Phonebook” menu by turning and pressing control knob **5** on the audio system front panel or **20** on the steering column control. The list of contacts will appear on the audio system display. Select a contact to call from the list, then confirm by pressing control knob **5** on the audio system front panel or **20** on the steering column control to make the call.

**Note:** to return to the previous screen, press the **6** button on the front panel of the audio system.




### Call a contact from your call log history

To display the call log, press button **10** on the audio system front panel or **16**, **21** or **27** on the steering column control, then select the “Call List” menu. Select the “Dialed”, “Received” or “Missed” heading. The call log will appear on the audio system screen. Select the contact or number to call, then confirm by pressing control knob **5** on the audio system front panel or **20** on the steering column control to start the call.

### Making a call by dialling a number

To display the phone menu, press button **10** on the audio system front panel or **16**, **21** or **27** on the steering column control, then select the “Dial Number” menu.

Dial the desired number using the numeric keypad by turning and pressing control knob **5** on the audio system front panel or **20** on the steering column control.


Once you have dialled the number, select  to make the call.

You can call the last number dialled by pressing and holding button **10** on the audio system front panel, or **16**, **18** or **21** on the steering column control.



It is recommended that you stop your vehicle before entering a number or searching for a contact.

## MAKING, RECEIVING A CALL (2/3)

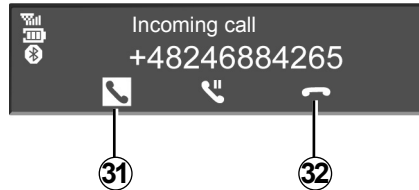


### Receiving a call

When receiving a call, the caller's number is displayed on the audio system screen (this function depends on the options you have subscribed to with your phone service provider).

If the caller's number is in one of the memories, the name of the caller is displayed instead of the number.


If the caller's number cannot be displayed, the message "Private number" is displayed on the audio system screen.

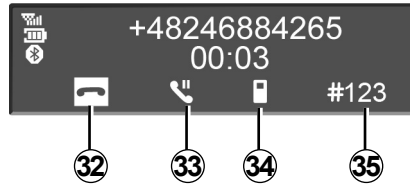

To accept an incoming call, press button **10** on the audio system front panel, or **18**, **21** or **27** on the steering column control, or **29** on the steering wheel. You can also accept an incoming call by selecting icon **31** by turning and pressing control knob **5** on the audio system front panel or **20** on the steering column control.

To reject a call, press and hold button **10** on the audio system front panel, or **18**, **21** or **27** on the steering column control, or **29** on the steering wheel. You can also reject an incoming call by selecting icon **32** by turning and pressing control knob **5** on the audio system front panel or **20** on the steering column control.

## MAKING, RECEIVING A CALL (3/3)

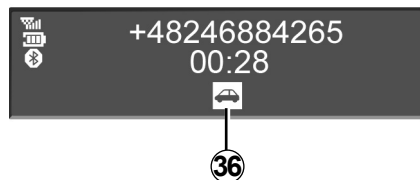

### During a call

You can:

- adjust the volume by turning button **1** on the audio system front panel or pressing **17** or **19** on the steering column control;
- hang up by pressing button **10** on the audio system front panel or **18**, **21** or **27** on the steering column control, or **29** on the steering wheel;
- confirm by pressing control knob **5** on the audio system front panel or **20** on the steering column control.

To select the desired icon, turn control knob **5** on the audio system front panel or press **20** on the steering column control, then confirm by pressing control knob **5** on the audio system front panel or **20** on the steering column control.

You can:

- hang up by selecting **32**;
- switch the conversation from your audio system to your phone by selecting **34**;
- put a call on hold by selecting **33**;
- resume a call placed on hold by selecting **31**;
- switch the conversation from your phone to your audio system by selecting **36**;
- control the keypad of your phone from the audio system by selecting **35**.

The system allows managing call waiting when your phone is connected (depending on your plan).

## SYSTEM SETTINGS (1/3)

### Audio settings

Display the settings menu by pressing button **9** on the audio system front panel. Select "Setup Audio" by turning and pressing control knob **5** on the audio system front panel. The available settings are:

- "Sound";
- "AUX In";
- "Speed Vol.";
- "Bass Boost";
- "Audio Default".

#### Sound

Select "Sound" and press control knob **5** to access the various sections in the following order:

- "Bass";
- "Treble";
- "Bal." (left/right sound distribution);
- "Fade" (rear/front sound distribution).

You can change the value of each setting by turning and pressing control knob **5** on the audio system front panel.

You can exit the menu by pressing button **6** on the audio system front panel.

### Auxiliary (AUX IN)

Display the settings menu by pressing button **9** on the audio system front panel. Select "Setup Audio", then press control knob **5** on the audio system front panel.

Turn control knob **5** on the audio system front panel, then select "AUX In" to access the different sections in the following order:

- "Low";
- "Medium";
- "High".

The values for each setting are as follows:

- "Low" (1200 mV);
- "Medium" (600 mV);
- "High" (300 mV).

### Speed Dependent Volume Control

The audio volume of the system varies with the vehicle speed.

Display the settings menu by pressing button **9** on the audio system front panel. Select the "Setup Audio" menu, then "Speed Vol." by pressing control knob **5** on the audio system front panel.

Adjust the volume/speed ratio by turning then pressing control knob **5** on the audio system front panel to achieve the desired setting.

### Increase the bass ("Bass Boost")

The "Bass Boost" function increases the bass levels.

To enable/disable this function, select "ON" or "Off" by turning and pressing control knob **5** on the audio system front panel.

### Default audio

Display the settings menu by pressing button **9** on the audio system front panel. Select "Setup Audio", then press control knob **5** on the audio system front panel to display the settings menu, and select "Audio Default". Confirm your selection by pressing control knob **5** on the audio system front panel.

All the audio settings return to their default values.

## SYSTEM SETTINGS (2/3)

### Setting the time

This function allows you to set the time.

Display the settings menu by pressing button **9** on the audio system front panel. Select "Clock" by turning and pressing control knob **5** on the audio system front panel. The available settings are:

- "Set Time": sets the hour and minutes;
- "active / deactive": enables or disables the time display;
- "Format": selects the time display format ("12 hr" or "24hr").

### Radio settings

The available settings are:

- «TA»;
- «DR Interrupt...»;
- «Ref. FM List»;
- «Ref. DR List».

To return to the previous menu, press button **6** on the audio system front panel.

#### «TA»

To activate or deactivate this function:

- display the settings menu by pressing button **9** on the audio system front panel;
- select "Radio" by turning and pressing control knob **5** on the audio system front panel;
- select "TA" by turning and pressing control knob **5** on the audio system front panel;
- select "ON" or "Off" to activate or deactivate the "TA" function.

#### «DR Interrupt...» (newscasts)

To activate or deactivate this function:

- display the settings menu by pressing button **9** on the audio system front panel;
- select "Radio" by turning and pressing control knob **5** on the audio system front panel;
- select "DR Interrupt..." by turning and pressing control knob **5** on the audio system front panel;

- select the news information bulletin(s) you want to listen to by turning and pressing control knob **5** on the audio system front panel.

#### «Ref. FM List»

Please refer to the paragraph on "Ref. FM List" under "Listening to the radio".

#### «Ref. DR List»

Please refer to the paragraph on "Ref. DR List" under "Listening to the radio".

### Selecting a language

This function allows you to change the language of the audio system.

To access the "Language" heading in the settings menu, press button **9** on the audio system front panel.



For safety reasons, carry out any adjustments when the vehicle is stationary.

## SYSTEM SETTINGS (3/3)

### “Settings” (Bluetooth®)

To access the telephone menu, press button **10** on the audio system front panel, or **16**, **21** or **27** on the steering column control. Select the “Settings” heading by turning and pressing control knob **5** on the audio system front panel or **20** on the steering column control.

The available settings are:

- “Volume”: adjustment of the ringtone or call volume;
- “Ringtone”: activates the vehicle’s ringtone or the ringtone transferred from the phone;

To adjust the volume of the ringtone when a Bluetooth® phone is connected to the audio system, select “Volume” by turning and pressing control knob **5** on the audio system front panel or **20** on the steering column control.

A new sub-menu appears:

- “Ring”;
- “Call”;

- select one of the headings by turning and pressing control knob **5** on the audio system front panel or **20** on the steering column control.
- turn and press control knob **5** on the audio system front panel or **20** on the steering column control to increase or decrease the volume.

To activate the ringtone on the vehicle or the phone connected to Bluetooth®, select “Ringtone” by turning and pressing control knob **5** on the audio system front panel or **20** on the steering column control.

A new sub-menu appears:

- “Car”;
- “Phone”;

Select one of the headings to activate by turning and pressing control knob **5** on the audio system front panel or **20** on the steering column control.

**Note:** If a phone is connected to the audio system, a new item appears in the menu: “Settings”:

- “Update phonebook”: ‘: updates the contacts list of the phone paired with the audio system (e.g. addition of new contacts not yet in the system).
- to update the contacts list on the audio system, access the “Settings” menu by pressing button **10** on the audio system front panel or **16**, **21** or **27** on the steering column control.
- select ‘Update contacts list’. ‘ by turning and pressing control knob **5** on the audio system front panel or **20** on the steering column control.

### Display of radio texts

Display the radio text menu by pressing button **14**. Select “Radio” by turning and pressing control knob **5** on the audio system front panel or **20** on the steering column control. The radio text display may contain a maximum of sixty-four characters.

**NB:** if there is no information provided, the screen displays “No message”.

## R&GO: GENERAL DESCRIPTION (1/6)

### Introduction

“R&Go” is an application that can be downloaded from your smartphone or tablet.

This application lets you access several menus:


- “Navigation”;
- “Multimedia”;
- “Car”;
- “Phone”;
- “Calendar”;
- “App settings”;

**Note:** for further information on compatible phones and digital tablets, please contact an authorised dealer or visit the manufacturer’s website if available.

### Bluetooth® connection

Check that your phone or digital tablet is paired with the audio system (see the information on “Pairing a telephone” in the “Pairing, unpairing a telephone” section).

**Note:** Bluetooth® must be activated and set to “visible” on your phone or digital tablet (for more information, please see the user manual for your device).

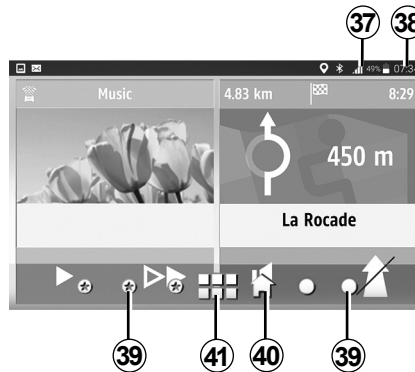

### Display

#### Customised home page

**37** Telephone/digital tablet information (notifications, network, battery and Bluetooth® connection).


**38** Current time.

**39** Page indicators.

**40** Back to the customised home page.

**41** Access the “R&Go” default welcome screen.

**Note:** You can change the configuration of the welcome screen. Refer to the “R&Go: setting parameters” section.

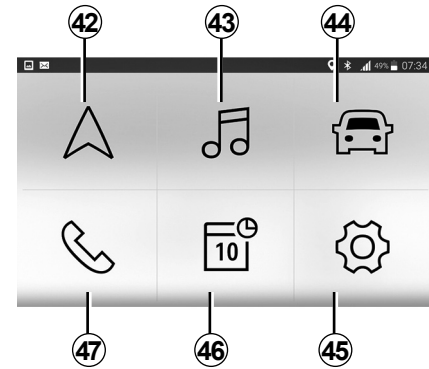

#### “R&Go” default welcome screen

To go to the default welcome screen, press button **41** and look for the following headings:

**42** “Navigation”: navigation management.

**43** “Multimedia”: management of multimedia resources.

**44** “Car”: management of your fuel consumption, Driving eco<sup>2</sup> etc.


**45** “App settings”: management of the “R&Go” application settings.

**46** “Calendar”: access to your calendar.

**47** “Phone”: management of telephone functions.



## R&GO: GENERAL DESCRIPTION (2/6)

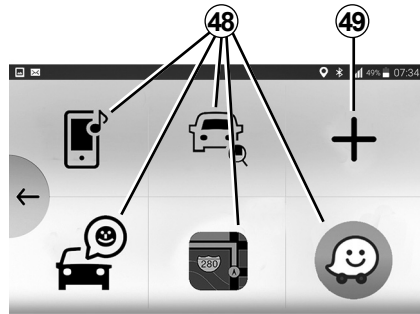


### Favourites screen

The “R&Go” system allows you to add shortcuts to your favourite functions:

- applications;
- contacts;
- functions (music, navigation etc.) ;
- ...

**48** Access to function previously designated as a favourite.

**49** Access to the favourites management screen.

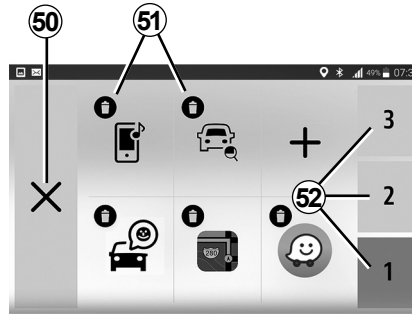

### Favourites management screen

To access the favourites management screen, press the **49** button.

**50** Back to the previous screen.

**51** Delete the favourite.

**52** Access the various favourites management pages.

Regular updates of your **R&Go** application are recommended.


### Customising the home page

You can customise the **R&Go** home page. To do this, press the **49** button or press and hold anywhere on the customised home page, then slide an application available at the bottom of the screen to the desired location. If you slide the application to a location that is already in use, it will automatically be replaced.

Your hands-free system is intended to facilitate communication by reducing the risk factors, without removing them completely.

You must always comply with the laws of the country in which you are travelling.


## R&GO: GENERAL DESCRIPTION (3/6)

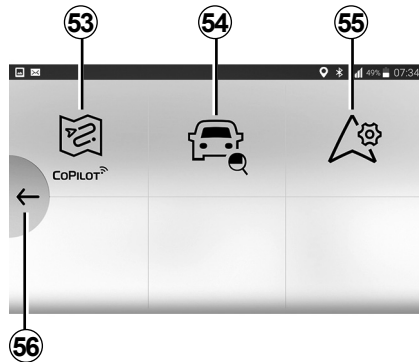

### “Navigation” menu

The navigation menu includes all the satellite navigation features, road maps, traffic information, navigation applications and warning areas. The Navigation menu provides the following functions:

- 53** a navigation application for planning your routes.
- 54** an application enabling you to geolocate your vehicle.
- 55** access to the settings enabling you to set a default navigation application.
- 56** back to the main menu.

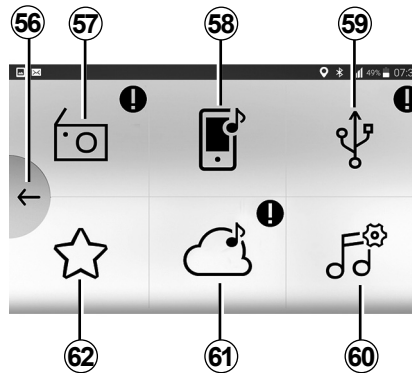

### “Multimedia” menu

The “Multimedia” menu includes all the functions relating to listening to the radio, playing audio files etc. The “Multimedia” menu provides the following functions:

- 57** listening to the radio.
- 58** listening to music from your smart-phone on the audio system.
- 59** listening to music from an external source (CD/CD MP3, USB or iPod® (device with integrated iPod®) via the USB port.


**60** adjusting the multimedia settings.

**61** selecting and listening to themed radio stations (“Webradio”) from around the world via the internet connection on your phone.

**Note:** when you use a webradio, the mobile phone data transfer required may lead to additional costs not included in your phone plan.

**62** Access to your personal playlist.


## R&GO: GENERAL DESCRIPTION (4/6)

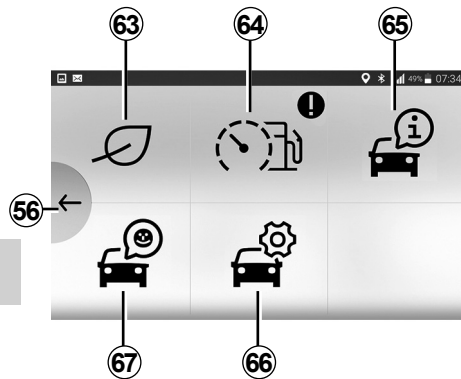

### “Car” menu

The vehicle menu enables the management of certain equipment such as the vehicle's computer and Driving eco<sup>2</sup> for example and provides the following functions:

- 63** access to the Driving eco<sup>2</sup> menu (your eco-driving score, tutorial on ecological driving etc.).
- 64** rev counter (rpm x 1,000) or driving style indicator.
- 65** access to the vehicle user manual.
- 66** access to the settings.
- 67** access to the instrument panel of your vehicle.

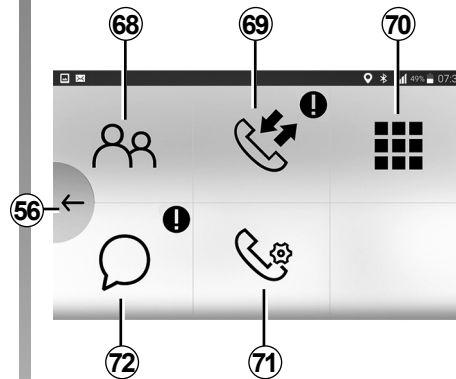


### “Phone” menu

The phone menu allows hands-free use of your phone and provides the following functions:

- 56** back to the main menu.
- 68** access to your contacts list.
- 69** access to your call history.
- 70** access to the digital keypad (to dial a number).
- 71** access to the settings for the “Phone” menu from the application.
- 72** access to your SMS.


**Note:** on some phones or digital tablets, the SMS reading function is available (“Text-to-speech”). The audio system reads the SMS messages aloud.

## R&GO: GENERAL DESCRIPTION (5/6)

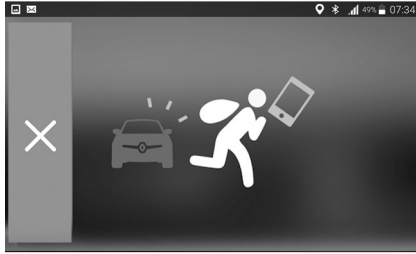

### Forgotten phone reminder

With the engine and audio system switched off, the “R&Go” application displays on your smartphone screen a warning message along with a beep to tell you that you have left your phone in your vehicle.

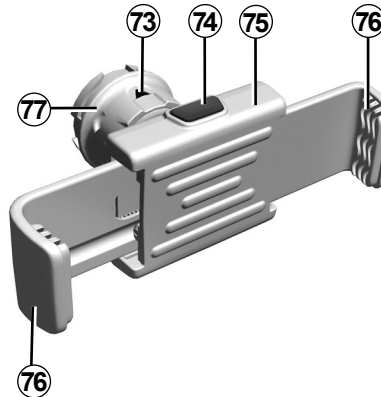

### Telephone holder

This telephone holder should be installed only when you use your phone with the “R&Go” application.

To attach the telephone holder **75** onto your vehicle's audio system, follow these instructions:

- remove the phone support cover **24** by turning it anti-clockwise to expose the USB socket;
- set the arrow **73** of the locking knob **77** in the up position before putting the phone holder **75** on the audio system for correct connection;
- connect the telephone holder **75** to the audio system's USB socket;
- turn the locking knob **77** of the phone holder **75** clockwise to secure it;
- place your phone in the telephone holder **75** and press both clips **76** until the phone is firmly held in place.

## R&GO: GENERAL DESCRIPTION (6/6)

To remove the telephone holder **75** from your audio system:

- hold your phone while pressing the button for the retaining clips **76**, then take out your phone;
- turn locking knob **77** on the phone holder **75** anticlockwise to release the phone from your vehicle's audio system;
- disconnect the telephone holder **75** from your vehicle's audio system;
- replace the telephone holder **24** cover by turning it clockwise to close the USB socket.



**Note:** you can use the telephone holder **75** in two positions:


- vertically, by placing your phone in a horizontal position and then turning the holder **75** to an upright position;
- horizontally, by placing your phone vertically and then turning the support **75** horizontally.

**NB:** You can also tilt the telephone holder to get a better view of the phone's screen.

### Charging using the USB port

Once your telephone's USB socket is connected to the USB port of the telephone holder **75**, you can charge its battery during use.

## R&GO: NAVIGATION FUNCTION (1/3)

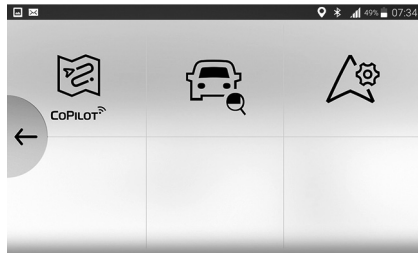

### “Navigation”

To access the navigation menu, from the “**R&Go**” default welcome menu, press the “Navigation” key.

The “Navigation” menu is made up of three icons:

- access navigation app to manage your defined routes;

- access the Go To My Car app to geolocate your vehicle;
- set the navigation app that you wish to use by default.




### “CoPilot navigation application”

from the “Navigation” menu, press the “CoPilot” icon. The “CoPilot” navigation system enables you to enter a destination, choose points of interest, configure your travel mode, access information services in real time, and more.



For safety reasons, carry out any adjustments when the vehicle is stationary.

## R&GO: NAVIGATION FUNCTION (2/3)

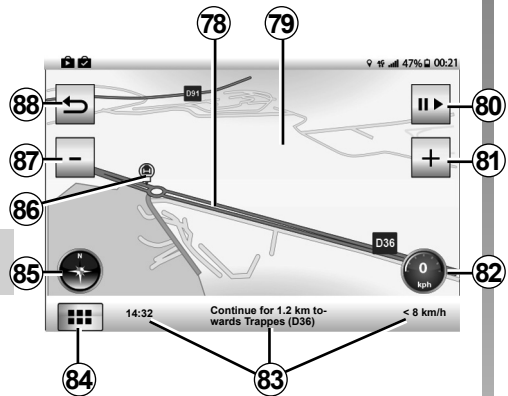

### Map key

The information displayed above may vary.

**78** Route calculated by the “CoPilot” navigation application.


**79** Navigation map.

**80** Shortcut to the multimedia screen.

**81** Zoom in.

**82** Speedometer.

**83** Information regarding your route.

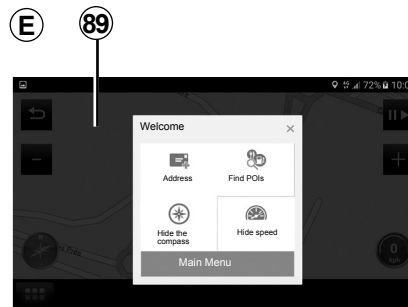

**84** Access to the driving menu **E**.

**85** Compass.

**86** Points of Interest (POI).

**87** Zoom out.

**88** Access to the “R&Go” navigation menu.

**89** Return area on the navigation map.



### Driving menu

From the “CoPilot” app, press Main Menu in the **84** driving menu to access the following settings:

- “Go to”...;
- “Route”;
- “MyCoPilot”;
- “Options”.

#### “Go to”...;

Use this menu to enter a full or partial address.

#### “Route”

Use this menu to manage and plan your navigation settings.

#### “MyCoPilot”

Use this menu to manage your account, map updates etc.

#### “Options”

Use this menu to access the map display settings.

## R&GO: NAVIGATION FUNCTION (3/3)



### “Find my vehicle”

This function allows you to geolocate your vehicle in order to find it in a car park for example.

from the “Navigation” menu, press the “Go To My Car” icon.

To find your vehicle, you can:

- complete the “Vehicle parking address” field;
- press the “Go to my car” button to launch the “CoPilot” navigation in pedestrian mode towards the pre-set address.

**Note:** this function is only available and operational when outside the vehicle.

If your vehicle has been moved by a third party between the time of saving its GPS position and the time you wish to find it, the application cannot search for its current position.



### “Navigation settings”

This function allows you to set your chosen default navigation application.

From the “Navigation” menu, press the “Navigation settings” icon, then select the navigation application that you wish to use from the list suggested.



For safety reasons, carry out any adjustments when the vehicle is stationary.



## R&GO: MULTIMEDIA FUNCTION (1/3)



### “Multimedia”

To access the multimedia menu, from the “R&Go” default welcome menu, press the “Multimedia” key.

The “Multimedia” menu is made up of six icons:

- listen to the radio;
- listen to music from your smartphone via Bluetooth®;

- listen to music from an external source (CD/CD MP3, USB, iPod®, USB etc.);
- access your personal playlist;
- listen to the “Webradio”;
- access the multimedia settings.

**Note:** To use all the features of the “Multimedia” menu, you must connect your Bluetooth® phone or tablet to the audio system.



### “Listen to the radio”

This menu allows you to listen to radio stations and provides the following functions:

- select a waveband (FM2, FM1, DR1, DR2 , or AM);
- select a station using one of three search modes “Frequency” “List” or “Preset”;
- find a station using the integrated intelligent keypad;
- listen to stored stations;
- view text information from certain FM and DR radio stations while listening.

For further information, please refer to the section on “Listening to the radio”.

## R&GO: MULTIMEDIA FUNCTION (2/3)



### “Audio playback”

This menu enables you to listen to audio tracks on your smartphone and provides the following functions:

- access the audio files directly;
- access files, music, genres, artists, albums, Podcasts, titles and reading lists;
- play audio media;
- pause the playback of the audio source currently in use;
- fast forward the audio source currently in use;
- ...

**NB:** Only available sources can be selected. Unavailable sources will be greyed out.

**Note:** In order to use your Bluetooth® audio device, you must pair it with the vehicle the first time you use it.



### “Auxiliary audio source”

This menu enables you to listen to music from an external source.

From the following list, select an input source connected to the audio system to access the audio files:

- CD/CD MP3;
- USB1;
- USB2;
- iPod®: device with integrated iPod®;
- jack connection;
- smartphone connected to the audio system via Bluetooth®;
- tablet connected to the audio system via Bluetooth®.



### “Playlist”

This menu allows you to access your custom playlists.



For safety reasons, carry out any adjustments when the vehicle is stationary.

## R&GO: MULTIMEDIA FUNCTION (3/3)




### “Webradio”

This menu allows you to search, display and listen to radio stations via your phone (BBC world, podcast etc.). You have the option to bookmark one or more radio stations and/or music.

The “Webradio” menu provides the following functions:

- manage your favourite stations;
- find a station with the intelligent keypad;
- view the rankings of radio stations (history, favourite stations, local stations);
- accessing an album image, the artist name and the title of the current track;
- switch to the vehicle’s audio system radio.

**Note:** when you use the Webradio menu, the mobile phone data transfer required may lead to additional costs not included in your phone plan.

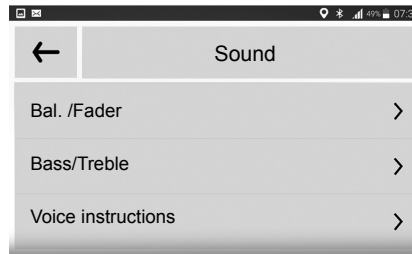


### “Multimedia settings”.

This menu enables you to adjust the following settings:

- “Balance/Fader”;
- “Bass/treble”;
- “Voice instructions”;
- “Bluetooth volume”;
- “AUX In”;
- “TA”;

- “DR Interrupt...”;
- “Updating FM List”;
- “Updating DR List”;
- “Phone Ringer Vol”;
- Ringtone;
- Default settings.

## R&GO: VEHICLE FUNCTION (1/2)

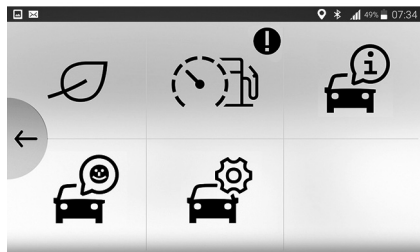

“Car”

To access the “Car” menu, from the “R&Go” default welcome menu, press the “Car” key.

The “Car” menu is made up of six icons:

- Driving eco<sup>2</sup>;
- fuel consumption and rev counter (rpm x 1,000);

- driver’s handbook for your vehicle;
- access to the data on the instrument panel of your vehicle;
- access the My Renault app;
- access to the settings for the “Car” menu from the application.



“Driving eco<sup>2</sup>”

This function allows you to display a real-time overall score that reflects your driving style.

This score takes the following criteria into account:

- acceleration;
- the ability to anticipate braking;
- compliance with speed limits.

You can see your overall score and personalised advice at the end of every trip.

You can also check:

- the distance travelled without burning fuel;
- the scores for your last ten trips.

**Note:** depending on the phone, the “Driving eco<sup>2</sup>” application no longer records your scores in the background.

**Note:** Press the “Set to” button on the instrument panel to start a new journey once the application has launched.

A journey has to be more than 400 metres to be taken into account. If the time between the stopping and starting the engine is less than four hours, the application continues to take the journey into account before stopping.



For safety reasons, carry out any adjustments when the vehicle is stationary.

## R&GO: VEHICLE FUNCTION (2/2)



### **“Consumption and rev counter”**

This function allows you to view your instantaneous fuel consumption compared to the average consumption of your vehicle and to display the rev counter of your vehicle in real - time (rpm x 1,000).



### **“E-guide”**

This function allows you to access the driver's handbook for your vehicle.



### **“Dashboard”**

This function allows you to access the various data recorded on your instrument panel such as:


- average speed;
- average fuel consumption;
- total distance;
- distance travelled since last reset;
- ...



### **“Settings”**

This function allows you to access the settings for the “Car” menu and to set certain options.

## R&GO: PHONE FUNCTION (1/2)

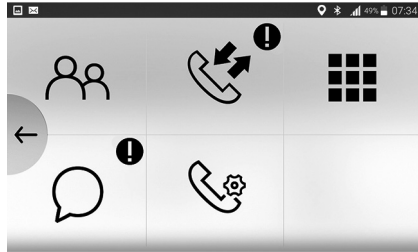

**“Phone”**

To access the “Phone” menu, from the “R&Go” default welcome menu, press the “Phone” key.

The “Phone” menu is made up of five icons:

- access the phonebook;
- access the call history;
- dial a number using the numerical keypad;

- access SMS received on your smart-phone or digital tablet;
- access to the “Phone” menu settings.

**Note:** you can check your voicemail by holding down key “1” on the keypad **11**.

The first press and hold on key “1” on the keypad **11** saves the voicemail number for your telephone.



**“Phonebook”**

Press the “Phonebook” icon to access the list of contacts in your Bluetooth® phone.

After connecting your audio system with your Bluetooth® phone using Bluetooth® wireless technology, your phonebook numbers are accessible from the **R&Go** application.

Select the contact (if the contact has more than one number, you will be requested to select the number to call). The call will be started automatically after you press the contact’s number.

When an address is linked to a contact, you can launch the navigation application. To do this, press the navigation icon to navigate to the stored address.

**Note:** to scroll through the list of contacts, slide your finger upwards on your smartphone screen.

## R&GO: PHONE FUNCTION (2/2)



### “Call history”


The call history enables you to:

- view outgoing calls;
- view missed calls;
- view incoming calls.

When you view the call history list, the contacts are displayed from the most recent to the oldest.

To navigate through the call log, slide your finger upwards on your smartphone screen.

To make a call from the call history list, select the contact that you wish to call from the list.

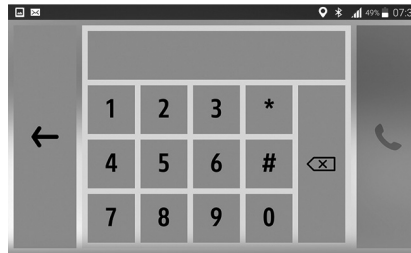

### “Dial number”

The “dial a number” function allows you to dial a phone number and to call a contact via the **R&Go** application.

To dial a number, press the number buttons. When you have completed the number you wish to call, press the



button to make the call.



### “Messages”

The Messages function enables you to read and/or listen to text messages received while the **R&Go** application is in use.

**Note:** to scroll through the list of messages, slide your finger upwards on your smartphone screen.




### Phone Settings

This function allows you to access the settings for the “Phone” menu and to set certain options.



It is recommended that you stop your vehicle before entering a number or searching for a contact.

## R&GO: CALENDAR FUNCTION

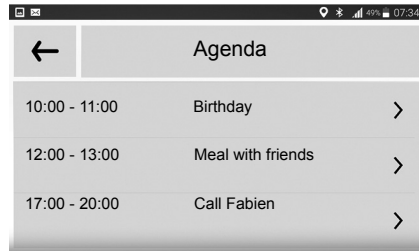

### "Agenda"

To access the "Agenda" menu, from the **R&Go** default welcome menu, press the "Agenda" key.

The "Agenda" function allows you to access all of the tasks (the day's appointments and events etc.) stored on the calendar of your phone or your digital tablet.


When a postal address is linked to an event, you can launch the navigation application to navigate to that place. To do this, press the navigation icon to navigate to the stored address.



It is recommended that you stop your vehicle before entering a number or searching for a contact.



## R&GO: SETTING PARAMETERS (1/2)

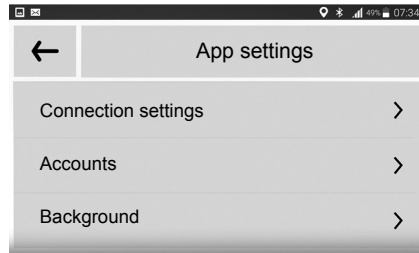


### “App settings”

To access the settings menu, from the “**R&Go**” default welcome menu, press the “App settings” key.

Via the “App settings” menu in the “**R&Go**” system, you can adjust or view the following elements:

- run the **R&Go** app automatically once connected to the audio system;

- information on your user account;
- the background;
- the terms and conditions of use;
- the connection to the audio system;
- the instruction tutorial for the app;
- the shortcut button to return to the **R&Go** app;
- restore default settings;
- which “**R&Go**” version is installed on your phone;
- the Bluetooth® connection (automatic or manual);
- ...

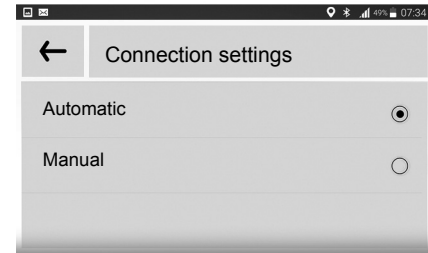

### “Connection settings”

#### Pairing

This function allows you to activate Bluetooth® on your phone and to search the “**MY CAR**” audio system.

#### “Launch R&Go”

Select this option to activate or deactivate the automatic launch of the application as soon as the connection to your vehicle’s audio system is established.

## R&GO: SETTING PARAMETERS (2/2)

### Background

Use this function to select a background from those offered by the app.

### “Terms and conditions”

This option allows you to view the terms and conditions of use.

### “Support”


This option shows you the data required by Renault support.

### Tutorial

This function makes it possible to view the instruction tutorial for the “R&Go” application.

### “Default settings”

This option enables you to return to the default settings.

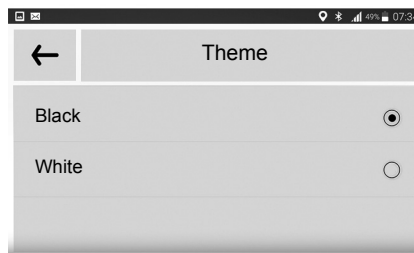

### “R&Go Version”

This option allows you to check your application version.



For safety reasons, carry out any adjustments when the vehicle is stationary.



### “Activate the R&Go information”

Select one of the two options to activate or deactivate the display of the application shortcut button. This button can only be seen when you are outside the “R&Go” application. When you press the shortcut button **90**, the “R&Go” application opens.

## OPERATING FAULTS (1/3)

Description	Possible causes	Solutions
No sound can be heard.	The volume is set to minimum or pause.	Increase the volume or deactivate pause.
The audio system does not work and the display does not light up.	The audio system is not switched on.	Switch the audio system on.
	The audio system fuse has blown.	Replace the fuse (see the section on «Fuses» in the vehicle's driver's handbook).
The audio system does not work but the display lights up.	The volume is set to minimum.	Press <b>17</b> or turn <b>1</b> .
	Speaker short circuit.	Please consult an authorised dealer.
No sound comes out of the left- or right-hand speakers when using the radio or a CD.	The sound balance setting (left/right) is incorrect.	Correct the sound balance setting.
	Speaker disconnected.	Please consult an authorised dealer.
Poor radio reception or no reception.	The vehicle is too far from the transmitter to which the radio is tuned (background noise and interference).	Search for another transmitter with a better local signal.
	The reception is disrupted by interference from the engine.	Please consult an authorised dealer.
	The aerial is damaged or not connected.	Please consult an authorised dealer.

## OPERATING FAULTS (2/3)

Description	Possible causes	Solutions
The initial read time of a CD CD MP3 seems long.	CD soiled.	Eject and clean the CD.
	CD MP3.	Wait: the CD MP3 requires a long time to be read.
“CD reading error” is displayed or the CD/CD MP3 is ejected by the audio system.	CD incorrectly inserted or dirty, damaged or incompatible.	Eject the CD/CD MP3. Insert a CD/CD MP3 correctly that is clean, undamaged and compatible.
Some CD MP3 files cannot be read.	Audio and non-audio files have been saved on the same CD.	Save audio and non-audio files on different CDs.
The audio system cannot read the CD MP3.	The CD has been written at a speed of less than 8x or more than 16x.	Write your CD at a speed of 8x.
	The CD has been written in multi-session mode.	Write your CD in Disc at Once mode or write the CD in Track At Once mode, and finalise the CD after the last session.
The CD MP3 playback quality is poor	The CD is black or of a colour with a lower reflective capacity, which reduces the playback quality.	Copy your CD to a white or light-coloured CD.

## OPERATING FAULTS (3/3)

Description	Possible causes	Solutions
The phone does not connect to the system.	<ul style="list-style-type: none"><li>– Your phone is off.</li><li>– Your phone's battery is flat.</li><li>– Your phone has not previously been paired to a hands-free phone system.</li><li>– Bluetooth® for your phone and the system have not been activated.</li><li>– The phone is not configured to accept the audio system's connection request.</li></ul>	<ul style="list-style-type: none"><li>– Switch on your phone.</li><li>– Recharge your phone's battery.</li><li>– Pair your phone to the hands-free phone system.</li><li>– Activate the Bluetooth® for your phone and the system.</li><li>– Configure the phone to accept the audio system's connection request.</li></ul>
The Bluetooth® portable audio player does not connect to the system.	<ul style="list-style-type: none"><li>– Your audio player is off.</li><li>– Your audio player's battery is flat.</li><li>– Your audio player has not previously been paired to the audio system.</li><li>– The Bluetooth® for your audio player and the audio system have not been activated.</li><li>– The portable audio player is not configured to accept the audio system's connection request.</li><li>– Music does not start to play from your audio player.</li></ul>	<ul style="list-style-type: none"><li>– Switch on your portable audio player.</li><li>– Recharge your audio player's battery.</li><li>– Pair your audio player to the audio system.</li><li>– Activate Bluetooth® for your audio player and the audio system.</li><li>– Configure the audio player to accept the system's connection request.</li><li>– Depending on your phone's degree of compatibility, music may need to be played from your audio player.</li></ul>
The message "Battery low" is shown.	Using your hands-free phone system for prolonged periods of time will run down your phone's battery more quickly.	Recharge your phone's battery.

## ALPHABETICAL INDEX (1/2)

### A

AF-RDS frequency tracking..... GB.19  
auxiliary source..... GB.24

### B

Bluetooth connection..... GB.27 → GB.29  
Bluetooth®..... GB.4 – GB.5  
buttons..... GB.6 → GB.14

### C

call..... GB.33  
call history..... GB.33  
call volume..... GB.35  
CD text..... GB.23  
CD/MP3 CD  
    eject..... GB.23  
    fast winding..... GB.21  
    insert..... GB.21  
    listen..... GB.21  
    MP3 CD specifications..... GB.21  
    random playback..... GB.22  
choosing the source..... GB.15  
clock  
    setting..... GB.37  
communication..... GB.35  
connect a telephone..... GB.30  
connection  
    failure..... GB.31  
controls..... GB.6 → GB.14

### D

deleting a telephone..... GB.29  
disconnect a telephone..... GB.32

### F

FM/LW/MW bandwidths..... GB.4 – GB.5

### H

hands-free phone kit..... GB.5

### I

i Traffic..... GB.37  
ID3 tag..... GB.23

### L

language  
    change..... GB.37

### M

mute..... GB.15

### O

operating faults..... GB.58 → GB.60  
operation..... GB.15

### P

pairing a telephone..... GB.27 → GB.29  
pause..... GB.23  
precautions during use..... GB.2 – GB.3

### R

radio  
    automatic mode..... GB.18  
    automatic station storage..... GB.18  
    choosing a station..... GB.18  
    manual mode..... GB.18  
    station pretuning..... GB.18  
radio-text..... GB.38  
range of wavelengths..... GB.18  
RDS..... GB.4  
receiving a call..... GB.33

## ALPHABETICAL INDEX (2/2)

### S

settings  
    audio ..... GB.36  
switching off ..... GB.15

### T

telephone contacts list ..... GB.33

### U

unpairing a telephone ..... GB.29  
USB socket ..... GB.24

### V

voice recognition ..... GB.16 – GB.17  
volume ..... GB.15

### W

WMA ..... GB.21